

## Telegram Listing

Ranging sensors LMS1xx, LMS5xx, TiM5xx,  
TiM7xx, LMS1000, MRS1000, MRS6000,  
NAV310, LD-OEM15xx, LD-LRS36xx, LMS4000



---

**Described product**

LMS1xx, LMS5xx, TiM5xx, TiM7xx, LMS1000, MRS1000, MRS6000, NAV310, LD-OEM15xx, LD-LRS36xx, LMS4000

**Manufacturer**

SICK AG  
Erwin-Sick-Str. 1  
79183 Waldkirch  
Germany

**Legal information**

This work is protected by copyright. Any rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, expurgation or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

**Original document**

This document is an original document of SICK AG.

## Contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>About this document.....</b>                                | <b>6</b>  |
| <b>2</b> | <b>Communication format.....</b>                               | <b>7</b>  |
| 2.1      | Binary telegram (CoLa B).....                                  | 7         |
| 2.2      | ASCII telegram (CoLa A).....                                   | 8         |
| 2.3      | Variable types.....  | 9         |
| 2.4      | Command basics.....  | 9         |
| 2.5      | Log in: Required user level.....                               | 10        |
| <b>3</b> | <b>Workflows .....</b>   | <b>11</b> |
| 3.1      | Parameterize the scan.....                                     | 11        |
| 3.2      | Set timestamp/data angle.....                                  | 11        |
| <b>4</b> | <b>Telegrams.....</b>  | <b>12</b> |
| 4.1      | Log in.....  | 12        |
| 4.2      | Basic Settings.....  | 14        |
| 4.2.1    | Set frequency and angular resolution/measurement sectors ..... | 14        |
| 4.2.2    | Read for frequency and angular resolution.....                 | 24        |
| 4.2.3    | Alignment mode (one layer activation for adjustment).....      | 27        |
| 4.2.4    | Set scan configuration.....                                    | 28        |
| 4.2.5    | Activate standby mode .....                                    | 33        |
| 4.2.6    | Start measurement.....   | 34        |
| 4.2.7    | Stop measurement.....  | 35        |
| 4.2.8    | Autostart measurement.....                                     | 37        |
| 4.2.9    | Laser Control.....   | 38        |
| 4.2.10   | Activate/deactivate field application.....                     | 40        |
| 4.2.11   | Application selection and switching.....                       | 41        |
| 4.2.12   | Read Application selection and switching.....                  | 42        |
| 4.2.13   | Load factory defaults.....                                     | 43        |
| 4.2.14   | Load application defaults.....                                 | 44        |
| 4.2.15   | Change password.....   | 46        |
| 4.2.16   | Check password .....   | 48        |
| 4.2.17   | Reboot device.....   | 49        |
| 4.2.18   | Set contamination measurement settings.....                    | 51        |
| 4.2.19   | Read contamination measurement settings.....                   | 52        |
| 4.2.20   | Read contamination measurement detailed values.....            | 53        |
| 4.2.21   | Save parameters permanently .....                              | 55        |
| 4.2.22   | Set to run.....  | 57        |
| 4.3      | Measurement output telegram.....                               | 58        |
| 4.3.1    | Configure the data content for the scan .....                  | 58        |
| 4.3.2    | Configure measurement angle of the scandata for output.....    | 62        |

|        |   |     |
|--------|---|-----|
| 4.3.3  | Read for actual output range.....                           | 64  |
| 4.3.4  | Poll one telegram.....                                      | 67  |
| 4.3.5  | Send data permanently.....                                  | 69  |
| 4.4    | Time stamp.....   | 88  |
| 4.4.1  | Set time stamp.....   | 88  |
| 4.4.2  | Read time stamp and status of the measurement function..... | 90  |
| 4.4.3  | Read device time .....                                      | 92  |
| 4.4.4  | Set NTP (Network Time Protocol) parameters.....             | 93  |
| 4.5    | Filter.....   | 103 |
| 4.5.1  | Set particle filter.....                                    | 103 |
| 4.5.2  | Set mean filter.....  | 104 |
| 4.5.3  | Set n-pulse to 1-pulse filter (Echo filter).....            | 105 |
| 4.5.4  | Set echo filter .....                                       | 106 |
| 4.5.5  | Set and read fog filter.....                                | 108 |
| 4.5.6  | Enable/disable digital nearfield filter.....                | 113 |
| 4.5.7  | Set digital nearfield filter sector selection.....          | 114 |
| 4.5.8  | Set Median Filter.....                                      | 115 |
| 4.5.9  | Set Edge Filter .....                                       | 116 |
| 4.6    | Encoder.....  | 118 |
| 4.6.1  | Set increment source.....                                   | 118 |
| 4.6.2  | Set encoder settings.....                                   | 119 |
| 4.6.3  | Set encoder resolution.....                                 | 120 |
| 4.6.4  | Set fixed speed.....  | 122 |
| 4.6.5  | Read speed threshold .....                                  | 123 |
| 4.6.6  | Read encoder speed.....                                     | 124 |
| 4.7    | Inputs and Outputs .....                                    | 126 |
| 4.7.1  | Port Configuration of all I/Os .....                        | 126 |
| 4.7.2  | Read state of the outputs.....                              | 128 |
| 4.7.3  | Send outputstate by event.....                              | 129 |
| 4.7.4  | Set output state.....                                       | 132 |
| 4.7.5  | Change output 6/3 function.....                             | 134 |
| 4.7.6  | Change output 1 function.....                               | 135 |
| 4.7.7  | Change output 1 logic state .....                           | 137 |
| 4.7.8  | Change output 2 function .....                              | 138 |
| 4.7.9  | Change output 2 logic state .....                           | 139 |
| 4.7.10 | Set synchronization mode .....                              | 140 |
| 4.7.11 | Set synchronization phase.....                              | 141 |
| 4.7.12 | Change input 4 function.....                                | 142 |
| 4.7.13 | Set debouncing time for input x .....                       | 143 |
| 4.7.14 | Read status of external sync signal.....                    | 144 |
| 4.8    | Status.....   | 146 |
| 4.8.1  | Read contamination status of the LMS.....                   | 146 |
| 4.8.2  | Read firmware version.....                                  | 147 |

---

|        |  |     |
|--------|--|-----|
| 4.8.3  | Read the device state.....                                 | 149 |
| 4.8.4  | Status commands for LD-XXX and NAV310 .....                | 151 |
| 4.8.5  | Read device order number.....                              | 157 |
| 4.8.6  | Read device type.....                                      | 158 |
| 4.8.7  | Read operating hours.....                                  | 160 |
| 4.8.8  | Read power on counter.....                                 | 161 |
| 4.8.9  | Read temperature.....                                      | 162 |
| 4.8.10 | Set device name.....                                       | 164 |
| 4.8.11 | Read device name.....                                      | 165 |
| 4.8.12 | Read angle compensation sine .....                         | 167 |
| 4.8.13 | Reset output counter.....                                  | 168 |
| 4.8.14 | Read heating state .....                                   | 170 |
| 4.9    | Interfaces.....  | 172 |
| 4.9.1  | Set IP address.....  | 172 |
| 4.9.2  | Read IP address .....                                      | 174 |
| 4.9.3  | Set Ethernet gateway .....                                 | 175 |
| 4.9.4  | Read Ethernet gateway.....                                 | 176 |
| 4.9.5  | Set IP mask.....   | 177 |
| 4.9.6  | Read IP mask.....  | 179 |
| 4.9.7  | Set baud rate for host interface.....                      | 181 |
| 4.9.8  | Read baud rate of host interface.....                      | 182 |
| 4.9.9  | Set interface type.....                                    | 184 |
| 4.9.10 | Read interface type .....                                  | 185 |
| 4.9.11 | Set function front panel.....                              | 187 |
| 4.9.12 | Set front LEDs.....  | 188 |
| 4.9.13 | Set function of LED1.....                                  | 190 |
| 4.9.14 | Set function of LED2.....                                  | 191 |
| 4.9.15 | Switch on/off LED1 or LED2 .....                           | 192 |
| 4.9.16 | Set 7-segment display to specific symbol or number.....    | 194 |
| 4.9.17 | Switching CoLa dialect on ethernet host port .....         | 197 |
| 4.10   | Application.....   | 199 |
| 4.10.1 | Request status change of monitoring fields on event.....   | 199 |
| 4.10.2 | Request SOPAS field data structure.....                    | 203 |
| 4.10.3 | Request perpendicular distance once.....                   | 208 |
| 4.10.4 | Request perpendicular distance continuously on event.....  | 214 |
| 4.10.5 | Request latest field infringement info.....                | 219 |
| 4.10.6 | Request field infringement info continuously on event..... | 223 |
| 5      | Diagnostics .....  | 228 |
| 5.1    | SOPAS error codes.....                                     | 228 |
| 5.2    | Additional information.....                                | 230 |
| 6      | List of tables.....  | 231 |

## **1** About this document

Please read this chapter carefully before beginning to use the telegram listing.

The document shows how to send telegrams via a terminal program using the SICK protocol CoLa A (ASCII and hexadecimal values, with TCP port 2111 or 2112) or CoLa B (binary/hexadecimal values, with TCP port 2112 only) to the laserscanners LMS1xx, LMS5xx, TiM5xx (TiM55x, TiM56x, TiM57x), TiM7xx, LMS1000, MRS1000, MRS6000, NAV310, LD-OEM15xx, LD-LRS36xx and LMS4000. This comprises the query of the current device state or certain parameter values, how to modify parameter values and the way in which the device confirms or responds to commands/telegrams.

The devices generally support automatic IP address discovery. Default IP address is:

- LMSxxx: 192.168.0.1
- TiMxxx: 192.168.0.1
- MRSxxxx: 192.168.0.1
- NAV310: 192.168.1.10
- LD-XXXXXXX: 192.168.1.10
- LMS4000: 192.168.0.1

Subnet mask is 255.255.255.0.

IP ports:

- 2111: CoLa A (fixed) (for LMS4000 fixed CoLa B)
- 2112: CoLa A (can be switched to CoLa B)
- 2213: UDP

The document does not or only in a few exceptional cases differentiate between individual device versions or sub product families such as LMS5xx Lite and LMS5xx PRO. Most parameter changes also require certain user levels. Additionally, commands may change during the product lifecycle and development process with a new firmware.

This telegram listing is based on the following firmware statuses (or newer):

- LMS1xx: V1.80 (V1.21 for LMS12x/13x)
- LMS5xx: V1.50.6 (V31.39 for LMS531)
- TiMxxx: V2.51
- MRS1000: 1.0.0 (1.0.0.0R)
- LMS1000: 1.4.0 (1.4.0.0R)
- NAV310: V1.03
- LD-OEM15xx: V1.12 (V1.32 for OEM1500)
- LD-LRS36xx: V1.12 (V1.32 for LRS3600)
- LMS4000: V1.4

If commands do not seem to work, please verify that your device version supports this functionality, that the minimum required user level has been selected and check on updates of this documentation.

## 2 Communication format

### 2.1 Binary telegram (CoLa B)

The binary telegram is the basic protocol of the scanner (CoLa B). All values are in hexadecimal code and grouped into pairs of two digits (= 1 byte). The string consists of four parts: header, data length, data and checksum (CS).

The header indicates with  $4 \times \text{STX}$  (02 02 02 02) the start of the telegram.

The data length defines the size of the data part (command part) by indicating the number of digit pairs in the third part. The size of the data length itself is 4 bytes, which means that the data part might have a maximum of  $16^8 = 4,294,967,295$  digit pairs.

The data part comprises the actual command with letters and characters converted to Hex (according to the ASCII chart) and the parameters of either decimal numbers converted to Hex or fixed Hex values with a specific, intrinsic meaning (no conversion). There is always a blank (20) between the command and the parameters, but not between the different parameter values.

The checksum finally serves to verify that the telegram has been transferred correctly. The length of the checksum is 1 byte, CRC8. It is calculated with XOR.

#### Example: Binary telegram

|             |             |  |    |
|-------------|-------------|--|----|
| 02 02 02 02 | 00 00 00 17 | 73 4D 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 03 F4 72 47 44 | B3 |
| Header      | Length      | Data   | CS |

Table 1: Example: Binary telegram

This is an example telegram for setting the user level “Authorized Client”:

- Header = 02 02 02 02
- Length = 23 digit pairs (17h)
- Data:
  - 73 4D 4E 20 = sMN = start of Sopas command (and blank)
  - 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 = Set Access Mode = the actual command for setting the user level (and blank)
  - 03 = fixed Hex value meaning user level “Authorized Client”
  - F4 72 47 44 = fixed Hex value, serving as password for the selected user level “Authorized Client”
- Checksum = B3 from XOR calculation

## 2.2 ASCII telegram (CoLa A)

The ASCII telegram is an alternative to the binary telegram. Due to the variable string length of ASCII telegrams, the Binary telegram is recommended when using scanners with a PLC.

The ASCII telegram has the advantage that commands can be written in plaintext. The string consists only of two parts: the framing and the data part.

The framing indicates with <STX> and <ETX> the start and stop of each telegram.

The data part comprises the actual command with letters and characters (plaintext), parameter values either in decimal (special indicator required) or in hexadecimal (example: a frequency of 25 Hz = +2500 (decimal) = 09C4 (Hex)) and fixed hexadecimal values with a specific, intrinsic meaning. As leading zeros are being deleted, there is always a blank required between all command parts and parameter parts.



### NOTE

**The device will confirm parameter values always in hexadecimal code, regardless of the code sent.**

As further alternative within CoLa A, depending on the preferences of the user, all values can be written directly in Hex. This means however a 1:1 conversion of all letters and characters including numbers and fixed hexadecimal values via the ASCII chart.

#### Example: ASCII telegram

|       |       |  |       |
|-------|-------|--|-------|
| ASCII | <STX> | sMN{SPC}SetAccessMode{SPC}03{SPC}F4724744  | <ETX> |
| Hex   | 02    | 73 4D 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 30 33 20 46 34 37 32 34 37 34 34 | 03    |
|       | Start | Data   | Stop  |

Table 2: Example: ASCII telegram

This is again an example telegram for setting the user level “Authorized Client”. As only fixed hexadecimal parameter values are needed, the option to use parameter values in decimal code with special indicator cannot be applied here:

- Framing = <STX> = telegram start = 02 (Hex)
- Data:
  - sMN = start of Sopas command (and blank) = 73 4D 4E 20 (Hex)
  - SetAccessMode = the actual command for setting the user level (and blank) = 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 (Hex)
  - 03 = fixed Hex value meaning user level “Authorized Client” (and blank) = 30 33 20 (Hex)
  - F4 72 47 44 = fixed Hex value, serving as password for the selected user level “Authorized Client” = 46 34 37 32 34 37 34 34 (Hex)
- Framing = <ETX> = telegram stop = 03 (Hex)

## 2.3 Variable types

| Variable type | Length (byte)     | Value range  | Sign |
|---------------|-------------------|--|------|
| Bool_1        | 1                 | 0 or 1   | No   |
| Uint_8        | 1                 | 0 ... 255  | No   |
| Int_8         | 1                 | -128 ... +127  | Yes  |
| Uint_16       | 2                 | 0 ... 65,535   | No   |
| Int_16        | 2                 | -32,768 ... +32,767  | Yes  |
| Uint_32       | 4                 | 0 ... 4,294,967,295  | No   |
| Int_32        | 4                 | -2,147,483,648 ... +2,147,483,647  | Yes  |
| Enum_8        | 1                 | Certain values defined in a list of Choices (0 ... 255)  | No   |
| Enum_16       | 2                 | Certain values defined in a list of Choices (0 ... 65535)  | No   |
| String        | Context-dependent | Strings are not terminated in zeroes   |      |
| Real          |                   | Float nach IEEE754 (see <a href="http://www.h-schmidt.net/FloatConverter/IEEE754de.html">www.h-schmidt.net/FloatConverter/IEEE754de.html</a> ) |      |

Data length is always given in Bytes!

## 2.4 Command basics

| Description   | Value ASCII | Value Hex | Value Binary               |
|---------------|-------------|-----------|----------------------------|
| Start of text | <STX>       | 02        | 02 02 02 02 + given length |
| End of text   | <ETX>       | 03        | Calculated checksum        |
| Read          | sRN         | 73 52 4E  |                            |
| Write         | sWN         | 73 57 4E  |                            |
| Method        | sMN         | 73 4D 4E  |                            |
| Event         | sEN         | 73 45 4E  |                            |
| Answer        | sRA         | 73 52 41  |                            |
|               | sWA         | 73 57 41  |                            |
|               | sAN         | 73 41 4E  |                            |
|               | SEA         | 73 45 41  |                            |
|               | SSN         | 73 53 4E  |                            |
| Space         | {SPC}       | 20        | 20                         |

If values are divided into two parts (e.g. measurement data), they are documented according to LSB 0 (e.g. 00 07), output however is according to MSB (e.g. 07 00).

## 2.5 Log in: Required user level

| Task   | Required user level |
|--|---------------------|
| Change sensor parameters   | Authorized Client   |
| Requests or queries<br>(e.g. for measurement data or device state) | None                |
| Manage password  | Service             |

## 3 Workflows

### 3.1 Parameterize the scan

- 1 Log in: sMN SetAccessMode (see 4.1, page 12)
- 2 Set frequency and resolution: sMN mLMPsetscancfg (see 4.2.1, page 14)
- 3 Configure scandata content: sWN LMDscandatacfg (see 4.3.1, page 58)
- 4 Configure scandata output: sWN LMPoutputRange (see 4.3.2 page 62)
- 5 Store parameters: sMN mEEwriteall (see 4.2.21, page 55)
- 6 Log out: sMN Run (see 4.2.22, page 57)
- 7 Request scan:  
sRN LMDscandata (see 4.3.4, page 67)  
sEN LMDscandata (see 4.3.5, page 69)  
(Device output...)

More detailed command descriptions can be found in the course of this document.

**Example: Sequence for LD-OEM1501, NAV310, LD-LR3601, LD-LR3611 to configure 2 sectors and get measurement scans**

Sector configuration: Resolution: 10Hz; 0,125°;  
Sector 1: 0° ... 44°(0h ... 6B6C0h);  
Sector 2: 45° ... 180° (6DDD6h ... 1B7740h)

- 1 Stop measurement: sMN LMCstopmeas  
**sAN LMCstopmeas 0**
- 2 Log in: sMN SetAccessMode (see 4.1, page 12)
- 3 Set Sectors : LCMstate001B7740 04E2 0000000000000000 04E2000000  
000000  
**sAN mLMPsetscancfg 0 3E82 4E20 6B6C04E26DDD61B77404E2 00 4E20 0**
- 4 Store parameters: sMN mEEwriteall (see 4.2.21, page 55)
- 5 Log out: sMN Run (see 4.2.22, page 57)
- 6 Start Measurement:sMN LMCstartmeas  
**sAN LMCstartmeas 0**
- 7 Request scan:  
sRN LMDscandata (see 4.3.4, page 67)  
sEN LMDscandata (see 4.3.5, page 69)  
(Device output...)

### 3.2 Set timestamp/data angle

- 1 Log in: sMN SetAccessMode (see 4.1, page 12)
- 2 Sopas command: sMNLSPsetdatetime (see 4.4.1, page 88)
- 3 Log out: sMN Run (see 4.2.22, page 57)

## 4 Telegrams

### 4.1 Log in



#### NOTES

- Please note that for TiMxxx and LMS4000 the laser is shut off after a successful log in and no measurement data is created any more. The laser is turned on again after log out (sMN Run).

| Telegram structure: sMN SetAccessMode |  |          |        |        |  |   |
|---------------------------------------|--|----------|--------|--------|--|---|
| Telegram part                         | Description                            | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)  |
| Command type                          | Method                                 | String   | 3      | All    | sMN  | 73 4D 4E  |
| Command                               | User level                             | String   | 13     | All    | SetAccessMode  | 53 65 74 41 63 63 65 73<br>73 4D 6F 64 65   |
| User level                            | Select user level                      | Int_8    | 1      | All    | Maintenance: 02<br>Authorized client: 03<br>Service: 04                      | Maintenance: 02<br>Authorized client: 03<br>Service: 04                               |
| Password                              | Hash value for the selected user level | Uint_32  | 4      | All    | Maintenance: B21ACE26<br>Authorized client:<br>F4724744<br>Service: 81BE23AA | Maintenance: B2 1A CE 26<br>Authorized client:<br>F4 72 47 44<br>Service: 81 BE 23 AA |


Table 3: Telegram structure: sMN SetAccessMode

#### Example: sMN SetAccessMode

Log in as “Authorized client” with password “F4724744”.

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]SetAccessMode[SPC]03[SPC]F4724744<ETX>   |
|        | Hex    | 02 73 4D 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 30 33 20 46 34 37 32 34 37 34 34 03    |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 4D 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 03 F4 72 47 44 B3 |

Table 4: Example: sMN SetAccessMode

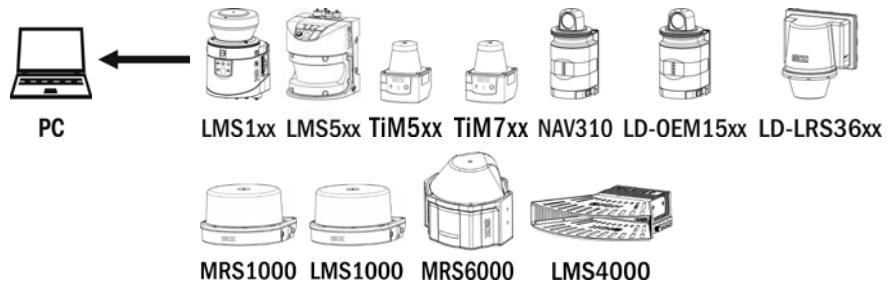

| Telegram structure: sAN SetAccessMode |               |          |        |        |                        |  |
|---------------------------------------|---------------|----------|--------|--------|------------------------|--|
| Telegram part                         | Description   | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)                 |
| Command type                          | Answer        | String   | 3      | All    | sAN                    | 73 41 4E                               |
| Command                               | User level    | String   | 13     | All    | SetAccessMode          | 53 65 74 41 63 63 65 73 73 4D 6F 64 65 |
| Change user level                     | Changed level | Bool_1   | 1      | All    | Error: 0<br>Success: 1 | Error: 00<br>Success: 01               |

Table 5: Telegram structure: sAN SetAccessMode

**Example for LMS100: sAN SetAccessMode**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN{SPC}SetAccessMode{SPC}1<ETX>   |
|        | Hex    | 02 73 41 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 41 4E 20 53 65 74 41 63 63 65 73 73 4D 6F 64 65 20 01 38 |

Table 6: Example for LMS100: sAN SetAccessMode

## 4.2 Basic Settings

### 4.2.1 Set frequency and angular resolution/measurement sectors




#### NOTES

- ▶ Please note that the new values will be activated only after log out (from the user level), when re-entering the Run mode (see Table 102 on page 57).



Coordination system of:

LMS5xx (-5° to 185°) → Start angle and stop angle are fixed values and not changeable for LMS5xx, only in the data output! This also applies for LMS1xx series.

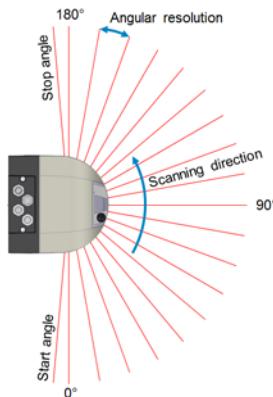

LMS1xx and TiMxxx (-45° to 225°)

MRS1000 (-47,5° to 227,5°) and LMS1000 (-48° to 228°)

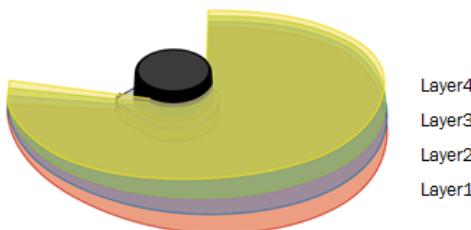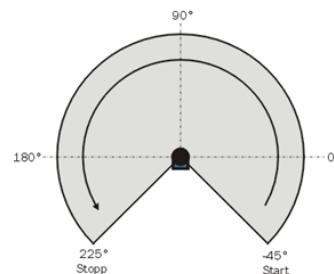


#### Sequence of the Layers in the Telegram

(Output sequence (DIN70000): 0, -250, 250, -500)


|      |        |        |
|------|--------|--------|
| 0    | → 0    | Layer2 |
| FF06 | → -250 | Layer3 |
| FA   | → 250  | Layer1 |
| FE0C | → -500 | Layer4 |

The LD series is available in two versions having a different rotation direction and coordinate system:

LD-OEM1501, NAV310, LD-LR3601, LD-LR3611  
(0° to 360°)

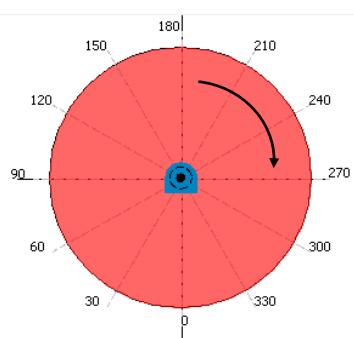

LD-OEM1500 and LD-LR3600  
(-90° to +270°)

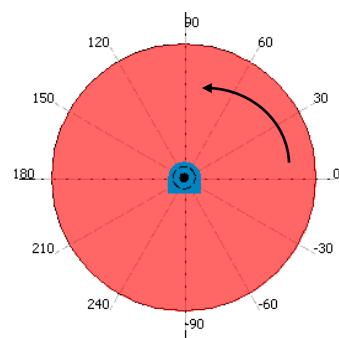

For sending the sector configuration there follow these rules:

- ▶ Send the sectors in their ascending sequence.
- ▶ For LD and NAV products: Send always the definition for all sectors (unused sector as “[SPC]0{SPC}0”.)
- ▶ For LMS products: They have only one measurement sector, send only the first one and leave the rest away.

For more details on sector configuration see examples below.

For complete workflow see example in section 3, page 11.




Telegram structure: sMN mLMPsetscancfg  
(Authorized client)

| Telegram part  | Description  | Variable | Length | Sensor               | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
|----------------|--|----------|--------|----------------------|---|---|
| Command type   | Method   | String   | 3      | All                  | sMN   | 73 4D 4E  |
| Command        | Configuration of scan frequency and angular resolution | String   | 14     | All                  | mLMPsetscancfg  | 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67   |
| Scan frequency | [1/100 Hz]   | Uint_32  | 4      | LMS1xx               | 25 Hz: +2500d (9C4h)<br>50 Hz: +5000d (1388h)   | 25 Hz: 00 00 09 C4<br>50 Hz: 00 00 13 88  |
|                |  |          |        | LMS5xx               | 25 Hz: +2500d (9C4h)<br>35 Hz: +3500d (DACH)<br>50 Hz: +5000d (1388h)<br>75 Hz: +7500d (1A0Bh)<br>100 Hz: +10000d (2710h) | 25 Hz: 00 00 09 C4<br>35 Hz: 00 00 0D AC<br>50 Hz: 00 00 13 88<br>75 Hz: 00 00 1A 0B<br>100 Hz: 00 00 27 10 |
|                |  |          |        | NAV310<br>LD-OEM15xx | 5 Hz ... 20 Hz:<br>500d ... 2000d<br>(1F4h ... 7D0h)  | 5 Hz ... 20 Hz:<br>00 00 01 F4 ...<br>00 00 07 D0   |
|                |  |          |        | LD-LRS36xx           | 5 Hz ... 15 Hz:<br>+500d ... +1500d<br>(1F4h ... 5DCh)  | 5 Hz ... 15 Hz:<br>00 00 01 F4 ...<br>00 00 05 DC   |

| Telegram structure: sMN mLMPsetscancfg<br>(Authorized client) |  |              |                                    |                                     |  |  |
|---|--|--------------|------------------------------------|-------------------------------------|--|--|
| Telegram part   | Description  | Variable     | Length                             | Sensor                              | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Number of active sectors                                      | Indicates the number of active sectors (e.g. NAV310 with 2 active sectors out of available 4)  | Int_16       | 2                                  | LMS1xx                              | +1 (0001h)   | 0001   |
|   |  |              |                                    | LMS5xx                              | +1 ... +4 (0001 ... 0004h)   | 0001 ... 0100 (binary)   |
| Angular resolution  | [1/10000°]<br>Same value for each sector required.   | Uint_32<br>4 | LMS1xx                             | 0.25°: +2500d (9C4h)                | 0.25°: 00 00 09 C4   |  |
|   |  |              |                                    | 0.5°: +5000d (1388h)                | 0.5°: 00 00 13 88  |  |
|   |  |              |                                    | LMS5xx                              | 0.1667°: +1667d (683h)<br>0.25°: +2500d (9C4h)<br>0.333°: +3333d (D05h)<br>0.5°: +5000d (1388h)<br>0.667°: +6667d (1A0Bh)<br>1°: +10000d (2710h) | 0.1667°: 00 00 06 83<br>0.25°: 00 00 09 C4<br>0.333°: 00 00 0D 05<br>0.5°: 00 00 13 88<br>0.667°: 00 00 1A 0B<br>1°: 00 00 27 10 |
|   |  |              |                                    | NAV310<br>LD-OEM15xx<br>LD-LRS36xx  | 0.125°... 1°:<br>+1250d° ... +10000d<br>(4E2h°... 2710h)   | 0.125°... 1°:<br>00 00 04 E2 ...<br>00 00 27 10  |
|   |  |              |                                    | LMS1xx                              | -450000d (FFF92230h)   | FF F9 22 30  |
|   |  |              |                                    | LMS5xx                              | -50000d (FFFF3CB0h)  | FF FF 3C B0  |
|   | Start angle<br><br>Value for start angle must always be greater than Stop angle of previous sector.<br><br>Set to 0 if sector is inactive (not used).<br><br><b>Values for LMSxxx are fixed.</b> | Int_32<br>4  | NAV310<br>LD-OEM15x1<br>LD-LRS36x1 | 0°... +3600000d<br>(0h ... 36EE80h) | 00 00 00 00 ...<br>00 36 EE 80   |  |
|   |  |              |                                    | LD-OEM15x0<br>LD-LRS36x0            | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)   | FF F2 44 60 ...<br>00 04 1E B0   |
|   |  |              |                                    | LMS1xx                              | +2250000d (225510h)  | 00 22 55 10  |
|   |  |              |                                    | LMS5xx                              | +1850000d (1C3A90h)  | 00 1C 3A 90  |
| Stop angle  | [1/10000°]<br><br>Value for stop angle must always be greater than start angle of previous sector.<br><br>Set to 0 if sector is inactive (not used).<br><br><b>Values for LMSxxx are fixed.</b>  | Int_32<br>4  | NAV310<br>LD-OEM15x1<br>LD-LRS36x1 | 0 ... +3600000d<br>(0h ... 36EE80h) | 00 00 00 00 ...<br>00 36 EE 80   |  |
|   |  |              |                                    | LD-OEM15x0<br>LD-LRS36x0            | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)   | FF F2 44 60 ...<br>00 04 1E B0   |

Table 7: Telegram structure: sMN mLMPsetscancfg

| <b>Example for LMS1xx</b>                                   |  |
|---|--|
| <b>Example for LMS1xx with 1 measurement sector of 270°</b> | ATTENTION: Scan angle can not be changed here, only in the data output! This applies for LMS1xx and LMS5xx series. |
|   | Scan frequency = 50 Hz   |
|   | Sectors = 1 sector (This value is always 1 for these devices)  |
|   | Angular resolution = 0,5 °   |
|   | Start angle of sector = -45 ° (Fix values, angle not changeable)   |
|   | Stop angle of sector = 225 ° (Fix values, angle not changeable)  |

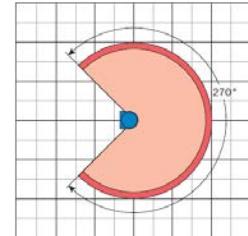

|       |        |  |
|-------|--------|--|
| Col A | ASCII  | <STX>sMN{SPC}mLM Psetscancfg{SPC}+5000{SPC}+1{SPC}+5000{SPC}-450000{SPC}+2250000<ETX><br>Alternatively:<br><STX>sMN{SPC}mLM Psetscancfg{SPC}1388{SPC}1{SPC}1388{SPC}FFF92230{SPC}225510<ETX>   |
|       | Hex    | 02 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 2B 35 30 30 30 20 2B 31 20 2B 35 30<br>30 30 20 2D 34 35 30 30 30 20 2B 32 32 35 30 30 30 30 03<br>Alternatively:<br>02 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 31 33 38 38 20 31 20 31 33 38 38 20<br>46 46 4639 32 32 33 30 20 32 32 35 35 31 30 03 |
| Col B | Binary | 02 02 02 02 00 00 00 25 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 00 00 13 88 00<br>01 00 00 13 88 FF F9 22 30 00 22 55 10 21   |

Table 8: Example: sMN mLMPsetscancfg for LMS1xx with 1 measurement sector of 270°

Examples for LD-OEM1501, NAV310, LD-LR3601, LD-LR3611

**Example for  
LD-xxx####1 with  
1 measurement sector  
of 360°**

Scan frequency = 8 Hz  
Sectors = 1 sector  
Angular resolution = 0,25 °  
Start angle of sector = 0 °  
Stop angle of sector = 360

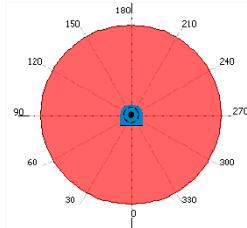


Table 9: Example: sMN mLMPsetscancfg for LD-XXXX###1 with 1 measurement sector of 360°

**Example for  
LD-XXX####1 with  
1 measurement sector  
of 270°**

Scan frequency = 10 Hz  
Sectors = 1 sector  
Angular resolution = 0,50 °  
Start angle of sector = +45 °  
Stop angle of sector = +315 °

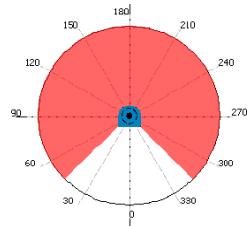


Table 10: Example: *sMN mLMPsetscancfg* for LD-XXXX###1 with 1 measurement sector of 270°

## Example for LD-xxx###1 with 2 measurement sectors

Scan frequency = 8 Hz

Sectors = 2 sectors

Sector 1 = +70° ... +90°

Sector 2 = +120° ... +150°

Angular resolution = 0,25 °

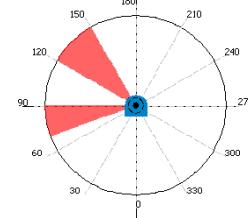


Table 11: Example:  $sMN\ mLMPsetscancfg$  for LD-XXX###1 with 2 measurement sectors


## Example for LD-xxx###1 with 4 measurement sectors

Scan frequency = 8 Hz

Sectors = 4 sectors

Sector 1 = +320° ... +45°  
Sector 2 = +70° ... +90°  
Sector 3 = +120° ... +150°  
Sector 4 = +210° ... +240°

Angular resolution = 0.25°

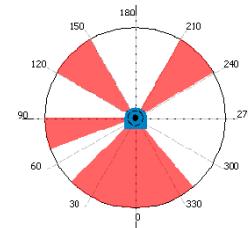

|       |        |  |
|-------|--------|--|
| Col A | ASCII  | <STX>sMN{SPC}mLM Psets cancfg{SPC}0320{SPC}04{SPC}09C4{SPC}+3200000{SPC}+450000{SPC}09C4{SPC}+700000{SPC}+900000{SPC}09C4{SPC}+1200000{SPC}+1500000{SPC}09C4{SPC}+2100000{SPC}+240000<ETX>   |
|       | Hex    | 02 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 30 33 32 30 20 30 34 20 30 39 43 34 20 2B 33 32 30 30 30 30 20 2B 34 35 30 30 30 30 20 30 39 43 34 20 2B 37 30 30 30 30 20 2B 39 30 30 30 30 20 30 39 43 34 20 2B 31 32 30 30 30 30 20 2B 31 35 30 30 30 30 20 30 39 43 34 20 2B 32 31 30 30 30 20 2B 32 34 30 30 30 30 03 |
| Col B | Binary | 02 02 02 02 00 00 00 49 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 00 00 03 20 00 04 00 00 09 C4 00 30 D4 00 00 06 DD D0 00 00 09 C4 00 0A AE 60 00 0D BB A0 00 00 09 C4 00 12 4F 80 00 16 E3 60 00 00 09 C4 00 200B 20 00 24 9F 00 B1   |

Table 12: Example: sMN mLMPsetscancfg for LD-XXX###1 with 4 measurement sectors

## **Examples for LD-OEM1500 and LD-LR3600**

## Example for LD-xxx###0 with 1 measurement sector of 360°

Scan frequency = 8 Hz  
Sectors = 1 sector  
Angular resolution = 0,25 °  
Start angle of sector = -90 °  
Stop angle of sector = +270 °

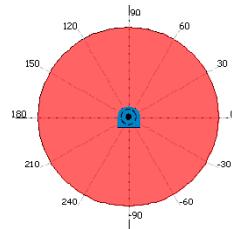


Table 13: Example: `sMN mLMPsetscancfg` for LD-XXX###0 with 1 measurement sector of 360°

## Example for LD-xxx###0 with 1 measurement sector of 270°

Scan frequency = 10 Hz  
Sectors = 1 sector  
Angular resolution =  $0,50^\circ$   
Start angle of sector =  $-45^\circ$   
Stop angle of sector =  $+225^\circ$

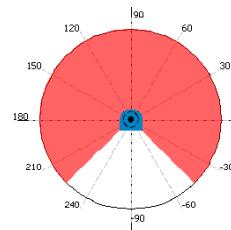


Table 14: Example: `sMN mLMPsetscancfg` for LD-XXX###0 with 1 measurement sector of 270°


## Example for LD-xxx####0 with 2 measurement sectors

Scan frequency = 8 Hz

Sectors = 2 sectors

Sector 1 = +120° ... +150°  
Sector 2 = +180° ... +200°

Angular resolution = 0,25 °

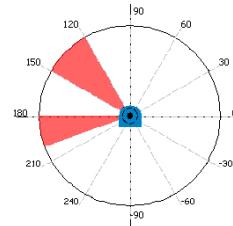

|        |        |  |
|--------|--------|--|
| ColA A | ASCII  | <STX>sMN{SPC}mLM Psetcancfg{SPC}320{SPC}2{SPC}9C4{SPC}+1200000{SPC}+1500000{SPC}9C4{SPC}+1800000{SPC}+2000000{SPC}9C4{SPC}0{SPC}0{SPC}9C4{SPC}0{SPC}0{SPC}0<ETX>   |
|        | Hex    | 02 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 33 32 30 20 32 20 39 43 34 20 2B 31 32 30 30 30 30 20 2B 31 35 30 30 30 30 20 39 43 34 20 2B 31 38 30 30 30 30 20 2B 32 30 30 30 30 30 20 39 43 34 20 30 20 39 43 34 20 30 20 30 03    |
| ColA B | Binary | 02 02 02 02 00 00 00 49 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 00 00 03 20 00 02 00 00 09 C4 00 12 4F 80 00 16 E3 60 00 00 09 C4 00 1B 77 40 00 1E 84 80 00 00 09 C4 00 00 00 00 00 00 00 09 C4 00 00 00 00 00 00 00 00 00 00 0C |

Table 15: Example: sMN mLMPsetscancfg for LD-XXX###0 with 2 measurement sectors


## Example for LD-xxx####0 with 4 measurement sectors

Scan frequency = 8 Hz

Sectors = 4 sectors

Sector 1 = +230° ... -50°  
Sector 2 = +30° ... +60°  
Sector 3 = +120° ... +150°  
Sector 4 = +210° ... +200°

Angular resolution = 0,25 °

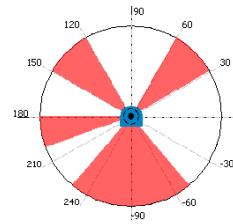

|        |        |   |
|--------|--------|---|
| ColA A | ASCII  | <STX>sMN{SPC}mLM Psetscancfg{SPC}320{SPC}4{SPC}9C4{SPC}+2300000{SPC}-500000{SPC}9C4{SPC}+300000{SPC}+600000{SPC}9C4{SPC}+1200000{SPC}+1500000{SPC}9C4{SPC}+1800000{SPC}+2000000<ETX>  |
|        | Hex    | 02 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 33 32 30 20 34 20 39 43 34 20 2B 32 33 30 30 30 30 20 2D 35 30 30 30 30 20 39 43 34 20 2B 33 30 30 30 30 20 2B 36 30 30 30 30 30 20 39 43 34 20 2B 31 32 30 30 30 30 20 2B 31 35 30 30 30 30 30 20 39 43 34 20 2B 31 38 30 30 30 30 30 20 2B 32 30 30 30 30 30 03 |
| ColA B | Binary | 02 02 02 02 00 00 00 49 73 4D 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 00 00 03 20 00 04 00 00 09 C4 00 23 18 60 FF F8 5E E0 00 00 09 C4 00 04 93 E0 00 09 27 C0 00 00 09 C4 00 12 4F 80 00 16 E3 60 00 00 09 C4 00 1B 77 40 00 1E 84 80 71   |

Table 16: Example: sMN mLMPsetscancfg for LD-XXXX##0 with 4 measurement sectors



| Telegram structure: sAN mLMPsetscancfg |   |          |        |  |  |   |
|--|---|----------|--------|--|--|---|
| Telegram part                          | Description                                   | Variable | Length | Sensor                                     | Values CoLa A (ASCII)  | Values CoLa B (Binary)  |
| Command type                           | Answer  | String   | 3      | All  | sAN  | 73 41 4E  |
| Command                                | Info of scan frequency and angular resolution | String   | 14     | All  | mLMPsetscancfg   | 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67   |
| Status code                            | Accepted when value is 0                      | Enum_8   | 1      | All  | No error: 0<br>Frequency error: 1<br>Resolution error: 2<br>Resolution and scanarea error: 3<br>Scanarea error: 4<br>Other errors: 5 | No error: 00<br>Frequency error: 01<br>Resolution error: 02<br>Resolution and scan area error: 03<br>Scanarea error: 04<br>Other errors: 05 |
| Scan frequency                         | [1/100 Hz]                                    | Uint_32  | 4      | LMS1xx                                     | 25 Hz: +2500d (9C4h)<br>50 Hz: +5000d (1388h)  | 25 Hz: 00 00 09 C4<br>50 Hz: 00 00 13 88  |
|  |   |          |        | LMS5xx                                     | 25 Hz: +2500d (9C4h)<br>35 Hz: +3500d (D4Ch)<br>50 Hz: +5000d (1388h)<br>75 Hz: +7500d (1A0Bh)<br>100 Hz: +10000d (2710h)            | 25 Hz: 00 00 09 C4<br>35 Hz: 00 00 0D AC<br>50 Hz: 00 00 13 88<br>75 Hz: 00 00 1A 0B<br>100 Hz: 00 00 27 10                                 |
|  |   |          |        | NAV310<br>LD-OEM<br>15xx                   | 5 Hz ... 20 Hz:<br>+500d ... +2000d<br>(1F4h ... 7D0h)   | 5 Hz ... 20 Hz:<br>00 00 01 F4 ...<br>00 00 07 D0   |
|  |   |          |        | LD-LRS<br>36xx                             | 5 Hz ... 15 Hz:<br>+500d ... +1500d<br>(1F4h ... 5DCh)   | 5 Hz ... 15 Hz:<br>00 00 01 F4 ...<br>00 00 05 DC   |
| Number of active sectors               | Indicates the number of active sectors        | Int_16   | 2      | LMS1xx<br>LMS5xx                           | 1 (0001h)  | 0001  |
|  |   |          |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | 1 ... 4 (0001h ... 0004h)  | 0001 ... 0100<br>(binary)   |

| Telegram structure: sAN mLMPsetsancfg    |                    |          |        |  |  |  |
|--|--------------------|----------|--------|--|--|--|
| Telegram part                            | Description        | Variable | Length | Sensor                                     | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Per sector (active and inactive sectors) | Angular resolution | Uint_32  | 4      | LMS1xx                                     | 0.25°: +2500d (9C4h)<br>0.5°: +5000d (1388h)   | 0.25°: 00 00 09 C4<br>0.5°: 00 00 13 88  |
|  |                    |          |        | LMS5xx                                     | 0.1667°: +1667d (683h)<br>0.25°: +2500d (9C4h)<br>0.333°: +3333d (D05h)<br>0.5°: +5000d (1388h)<br>0.667°: +6667d (1A0Bh)<br>1°: +10000d (2710h) | 0.1667°: 00 00 06 83<br>0.25°: 00 00 09 C4<br>0.333°: 00 00 0D 05<br>0.5°: 00 00 13 88<br>0.667°: 00 00 1A 0B<br>1°: 00 00 27 10 |
|  |                    |          |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | 0.125°... 1°:<br>+1250d°... +10000d<br>(4E2h°... 2710h)  | 0.125°... 1:<br>00 00 04 E2 ...<br>00 00 27 10   |
|  |                    |          |        | LMS1xx                                     | -450000d (FFF92230h)   | FF F9 22 30  |
|  | Start angle        | Int_32   | 4      | LMS5xx                                     | -50000d (FFFF3CB0h)  | FF FF 3C B0  |
|  |                    |          |        | NAV310<br>LD-OEM<br>15x1<br>LD-LRS<br>36x1 | 0°... +3600000d<br>(0h ... 36EE80h)  | 00 00 00 00 ...<br>00 36 EE 80   |
|  |                    |          |        | LD-OEM<br>15x0<br>LD-LRS<br>36x0           | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)   | FF F2 44 60 ...<br>00 04 1E B0   |
|  |                    |          |        | LMS1xx                                     | +2250000d (225510h)  | 00 22 55 10  |
|  | Stop angle         | Int_32   | 4      | LMS5xx                                     | +1850000d (1C3A90h)  | 00 1C 3A 90  |
|  |                    |          |        | NAV310<br>LD-OEM<br>15x1<br>LD-LRS<br>36x1 | 0 ... +3600000d<br>(0h ... 36EE80h)  | 00 00 00 00 ...<br>00 36 EE 80   |
|  |                    |          |        | LD-OEM<br>15x0<br>LD-LRS<br>36x0           | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)   | FF F2 44 60 ...<br>00 04 1E B0   |


Table 17: Telegram structure: sAN mLMPsetsancfg

**Example: sAN mLMPsetsancfg**

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sAN{SPC}mLM Psetsancfg{SPC}0{SPC}1388{SPC}1388{SPC}FFF92230{SPC}225510<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 30 20 31 33 38 38 20 31 20 31 33 38<br>38 20 46 46 46 39 32 32 33 30 20 32 32 35 35 31 30 03 |
| Cola B | Binary | 02 02 02 02 00 00 00 26 73 41 4E 20 6D 4C 4D 50 73 65 74 73 63 61 6E 63 66 67 20 00 00 00 13 88<br>00 01 00 00 13 88 FF F9 22 30 00 22 55 10 2D          |

Table 18: Example: sAN mLMPsetsancfg

### 4.2.2 Read for frequency and angular resolution

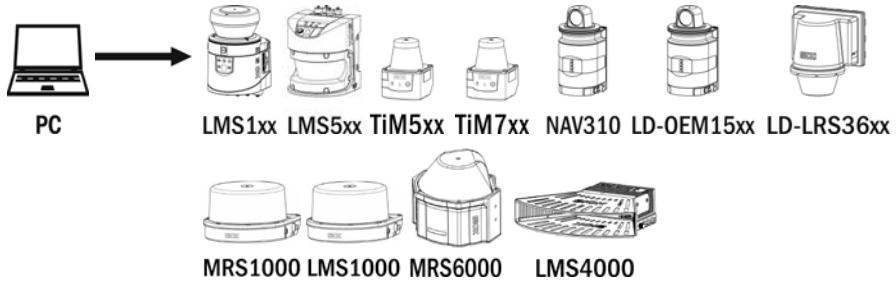

| Telegram structure: sRN LMPscancfg |   |          |        |        |                       |                               |
|------------------------------------|---|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description                                   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Read  | String   | 3      | All    | sRN                   | 73 52 4E                      |
| Command                            | Info of scan frequency and angular resolution | String   | 10     | All    | LMPscancfg            | 4C 4D 50 73 63 61 6E 63 66 67 |

Table 19: Telegram structure: sRN LMPscancfg

Example for LMS100: sRN LMPscancfg

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LMPscancfg<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 4D 50 73 63 61 6E 63 66 67 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 52 4E 20 4C 4D 50 73 63 61 6E 63 66 67 63 |

Table 20: Example for LMS100: sRN LMPscancfg



| Telegram structure: sRA LMPscancfg |   |          |        |        |                       |                               |
|------------------------------------|---|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description                                   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Answer  | String   | 3      | All    | sRA                   | 73 52 41                      |
| Command                            | Info of scan frequency and angular resolution | String   | 10     | All    | LMPscancfg            | 4C 4D 50 73 63 61 6E 63 66 67 |

| Telegram structure: sRA_LMPscancfg |  |          |        |   |  |  |
|------------------------------------|--|----------|--------|---|--|--|
| Telegram part                      | Description  | Variable | Length | Sensor  | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Scan frequency                     | [1/100 Hz]   | Uint_32  | 4      | LMS1xx  | 25 Hz: +2500d (9C4h)<br>50 Hz: +5000d (1388h)  | 25 Hz: 00 00 09 C4<br>50 Hz: 00 00 13 88   |
|                                    |  |          |        | LMS5xx  | 25 Hz: +2500d (9C4h)<br>35 Hz: +3500d (D4Ch)<br>50 Hz: +5000d (1388h)<br>75 Hz: +7500d (1A0Bh)<br>100 Hz: +10000d (2710h)                        | 25 Hz: 00 00 09 C4<br>35 Hz: 00 00 0D AC<br>50 Hz: 00 00 13 88<br>75 Hz: 00 00 1A 0B<br>100 Hz: 00 00 27 10                      |
|                                    |  |          |        | TiMxxx  | 15 Hz: +1500d (5DCh)   | 15 Hz: 00 00 05 DC   |
|                                    |  |          |        | NAV310<br>LD-OEM<br>15xx  | 5 Hz ... 20 Hz:<br>+500d ... +2000d<br>(1F4h ... 7D0h)   | 5 Hz ... 20 Hz:<br>00 00 01 F4 ...<br>00 00 07 D0  |
|                                    |  |          |        | LD-LRS<br>36xx  | 5 Hz ... 15 Hz:<br>+500d ... +1500d<br>(1F4h ... 5DCh)   | 5 Hz ... 15 Hz:<br>00 00 01 F4 ...<br>00 00 05 DC  |
|                                    |  |          |        | MRS1000   | 50 Hz: +5000d (1388h)  | 50 Hz: 00 00 13 88   |
|                                    |  |          |        | LMS1000   | 150 Hz: +15000d (3A98h)  |  |
|                                    |  |          |        | MRS6000   | 10 Hz: +1000d (3E8h)   | 10 Hz: 00 00 03 E8   |
|                                    |  |          |        |   |  |  |
| Number of sectors                  | Indicates the number of sectors.<br>The subsequent values will be transmitted 1 ... 4 accordingly. | Int_16   | 2      | LMS1xx<br>LMS5xx<br>TiMxxx<br>MRS1000<br><br>LMS1000<br>MRS6000 | Sector 1: 0001h  | Sector 1: 0001   |
|                                    |  |          |        | NAV310<br>LD-OEM<br>15xx<br><br>LD-LRS<br>36xx                  | Sector 1: 0001h<br>Sector 2: 0002h<br>Sector 3: 0003h<br>Sector 4: 0004h   | Sector 1: 0001<br>Sector 2: 0010<br>Sector 3: 0011<br>Sector 4: 0100   |
| Angular resolution                 | [1/10000°]   | Uint_32  | 4      | LMS1xx  | 0.25°: +2500d (9C4h)<br>0.5°: +5000d (1388h)   | 0.25°: 00 00 09 C4<br>0.5°: 00 00 13 88  |
|                                    |  |          |        | LMS5xx  | 0.1667°: +1667d (683h)<br>0.25°: +2500d (9C4h)<br>0.333°: +3333d (D05h)<br>0.5°: +5000d (1388h)<br>0.667°: +6667d (1A0Bh)<br>1°: +10000d (2710h) | 0.1667°: 00 00 06 83<br>0.25°: 00 00 09 C4<br>0.333°: 00 00 0D 05<br>0.5°: 00 00 13 88<br>0.667°: 00 00 1A 0B<br>1°: 00 00 27 10 |
|                                    |  |          |        | TiMxxx  | 0.333°: +3333d (D05h)<br>1°: +10000d (2710h)   | 0.333°: 00 00 0D 05<br>1°: 00 00 27 10   |
|                                    |  |          |        | NAV310<br>LD-OEM<br>15xx<br><br>LD-LRS<br>36xx                  | 0.125° ... 1°:<br>+1250d°... +10000d<br>(4E2h°... 2710h)   | 0.125° ... 1:<br>00 00 04 E2 ...<br>00 00 27 10  |
|                                    |  |          |        |   |  |  |

| Telegram structure: sRA LMPscancfg |             |          |        |  |   |                                |
|------------------------------------|-------------|----------|--------|--|---|--------------------------------|
| Telegram part                      | Description | Variable | Length | Sensor                                     | Values CoLa A (ASCII)                             | Values CoLa B (Binary)         |
| Start angle                        | [1/10000°]  | Int_32   | 4      | MRS1000                                    | 0.25°: +2500d (9C4h)                              | 0.25°: 00 00 09 C4             |
|                                    |             |          |        | LMS1000                                    | 0.75°: +7500d (1D4Ch)                             |                                |
|                                    |             |          |        | MRS6000                                    | 0.13°: +1300d (514h)                              | 0.13°: 00 00 05 14             |
|                                    |             |          |        | LMS1xx<br>TiMxxx                           | -450000d ... +2250000d<br>(FFF92230h ... 225510h) | FF F9 22 30 ...<br>00 22 55 10 |
|                                    |             |          |        | LMS5xx                                     | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)  | FF FF 3C B0 ...<br>00 1C 3A 90 |
|                                    |             |          |        | NAV310<br>LD-OEM<br>15x1<br>LD-LRS<br>36x1 | 0°... +3600000d<br>(0h ... 36EE80h)               | 00 00 00 00 ...<br>00 36 EE 80 |
|                                    |             |          |        | LD-OEM<br>15x0<br>LD-LRS<br>36x0           | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)  | FF F2 44 60 ...<br>00 04 1E B0 |
|                                    |             |          |        | MRS1000                                    | -475000d (FFF8C088h)                              | FF F8 C0 88                    |
|                                    |             |          |        | LMS1000                                    | -480000d (FFF8AD00h)                              |                                |
| Stop angle                         | [1/10000°]  | Int_32   | 4      | MRS6000                                    | +300000d (493E0h)                                 | 00 04 93 E0                    |
|                                    |             |          |        | LMS1xx<br>TiMxxx                           | -450000d ... +2250000d<br>(FFF92230h ... 225510h) | FF F9 22 30 ...<br>00 22 55 10 |
|                                    |             |          |        | LMS5xx                                     | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)  | FF FF 3C B0 ...<br>00 1C 3A 90 |
|                                    |             |          |        | NAV310<br>LD-OEM<br>15x1<br>LD-LRS<br>36x1 | 0 ... +3600000d<br>(0h ... 36EE80h)               | 00 00 00 00 ...<br>00 36 EE 80 |
|                                    |             |          |        | LD-OEM<br>15x0<br>LD-LRS<br>36x0           | -900000d ... +2700000d<br>(FFF24460h ... 41EB0h)  | FF F2 44 60 ...<br>00 04 1E B0 |
|                                    |             |          |        | MRS1000                                    | +2275000d (22B6B8h)                               | 00 22 B6 B8                    |
|                                    |             |          |        | LMS1000                                    | +2280000d (22CA40h)                               |                                |
|                                    |             |          |        | MRS6000                                    | +1500000d (16E360h)                               | 00 16 E3 60                    |

Table 21: Telegram structure: sRA LMPscancfg

**Example: sRA LMPscancfg**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LMPscancfg{SPC}1388{SPC}1{SPC}1388{SPC}FFF92230{SPC}225510<ETX>   |
|        | Hex    | 02 73 52 41 20 4C 4D 50 73 63 61 6E 63 66 67 20 31 33 38 38 20 31 20 31 33 38 38 20 46 46 46 39<br>32 32 33 30 20 32 32 35 35 31 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 21 73 52 41 20 4C 4D 50 73 63 61 6E 63 66 67 20 00 00 13 88 00 01 00 00 13<br>88 FF F9 22 30 00 22 55 10 3E          |

Table 22: Example: sRA LMPscancfg

#### 4.2.3 Alignment mode (one layer activation for adjustment)



| Telegram structure: sWN MMAAlignmentMode<br>(Service) (sMN SetAccessMode 04 81BE23AA) |                              |          |        |        |  |  |
|---|------------------------------|----------|--------|--------|--|--|
| Telegram part   | Description                  | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)                       |
| Command type  | Write                        | String   | 3      | All    | sWN  | 73 57 4E                                     |
| Command   | Set device to alignment mode | String   | 15     | All    | MMAAlignmentMode   | 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 |
| Layer activation  |                              |          |        |        | all Layer: 0<br>red Layer -2.5°: 1<br>blue Layer 0°: 2<br>green Layer +2.5°: 3<br>yellow Layer +5: 4 | 00<br>01<br>02<br>03<br>04                   |

Table 23: Telegram structure: sWN MMAAlignmentMode

#### Example: sWN MMAAlignmentMode 2

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}MMAAlignmentMode{SPC}2<ETX>  |
|        | Hex    | 02 73 57 4E 20 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 57 4E 20 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 20 02 14 |

Table 24: Example: sWN MMAAlignmentMode



| Telegram structure: sWA MMAAlignmentMode |                       |          |        |        |                       |  |
|--|-----------------------|----------|--------|--------|-----------------------|--|
| Telegram part                            | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                             | Answer                | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command                                  | Set device to standby | String   | 15     | All    | MMAAlignmentMode      | 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 |

Table 25: Telegram structure: sWA MMAAlignmentMode

#### Example: sWA MMAAlignmentMode

|        |       |  |
|--------|-------|--|
| CoLa A | ASCII | <STX>sWA{SPC}MMAAlignmentMode<ETX>                             |
|        | Hex   | 02 73 57 41 20 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 03 |

|        |        |  |
|--------|--------|--|
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 57 41 20 4D 4D 41 6C 69 67 6E 6D 65 6E 74 4D 6F 64 65 20 19 |
|--------|--------|--|

Table 26: Example: sWA MMAignmentMode

### 4.2.4 Set scan configuration

Sets the device to an defined scan configuration, consisting of scan frequency, angular resolution, sector definition and interlace mode.



| Telegram structure: sMN mCLsetsancfglist |                                  |          |        |        |  |  |
|--|----------------------------------|----------|--------|--------|--|--|
| Telegram part                            | Description                      | Variable | Length | Sensor | Values CoLa A (ASCII)                    | Values CoLa B (Binary)                                   |
| Command type                             | Method                           | String   | 3      | All    | sMN                                      | 73 4D 4E   |
| Command                                  | Set scan configuration           | String   | 17     | All    | mCLsetsancfglist                         | 6D 43 4C 73 65 74 73 63<br>61 6E 63 66 67 6C 69 73<br>74 |
| Mode                                     | Interlace mode (see table below) | Enum_8   | 1      | All    | +1d, +2d, +3d ...<br>(01h, 02h, 03h ...) | 01, 02, 03 ...   |

Table 27: Telegram structure: sMN mCLsetsancfglist

#### Interlace mode

The interlace mode allows to achieve a higher angular resolution by combining scans with lower resolution. The individual scans are shifted to each other.

The command *mCLsetsancfglist* selects combinations of scan resolution, scan frequency and resolution. If the scan area will not match to the application then an adjustment is possible by the command “*mLMPsetsancfg*” (see section 4.2.1 “Set frequency and angular resolution/measurement sectors” on page 14).

| Mode | Interlaced | Scan freq. | Result. scan freq. | Resolution | Total Resol. | Field of view | Sector                 | LRS 3601<br>3611 | OEM 1501 | NAV 310 | LRS 3600 | OEM 1500 |
|------|------------|------------|--------------------|------------|--------------|---------------|------------------------|------------------|----------|---------|----------|----------|
| 1    | 0x         | 8 Hz       | 8 Hz               | 0.25°      | 0.25°        | 360°          | 0 ... 360°             | x                | x        | x       | (x)      | (x)      |
| 2    | 0x         | 15 Hz      | 15 Hz              | 0.5°       | 0.5°         | 360°          | 0 ... 360°             | x                | x        | x       | (x)      | (x)      |
| 3    | 0x         | 10 Hz      | 10 Hz              | 0.25°      | 0.25°        | 300°          | 30 ... 330°            | x                | x        | x       | x        | x        |
| 4    | 0x         | 5 Hz       | 5 Hz               | 0.125°     | 0.125°       | 300°          | 30 ... 330°            | x                | x        | x       | x        | x        |
| 5    | 0x         | 6 Hz       | 6 Hz               | 0.1875°    | 0.1875°      | 360°          | 0 ... 360°             | x                | x        | x       | (x)      | (x)      |
| 6    | 0x         | 8Hz        | 8 Hz               | 0.25°      | 0.25°        | 359.5°        | 0.25°<br>...359.25°    |                  |          |         | x        | X        |
| 8    | 0x         | 15 Hz      | 15 Hz              | 0.375°     | 0.375°       | 300°          | 30...330°              | x                | X        | x       | x        | x        |
| 9    | 0x         | 15 Hz      | 15 Hz              | 0.5°       | 0.5°         | 359°          | 0.5 ...<br>.... 359.5° |                  |          |         | x        | x        |
| 21   | 0x         | 20 Hz      | 20 Hz              | 0.5°       | 0.5°         | 300°          | 30 ... 330°            |                  | X        | x       |          | x        |
| 22   | 0x         | 20 Hz      | 20 Hz              | 0.75°      | 0.75°        | 360°          | 0 ... 360°             |                  | x        | x       |          | (x)      |
| 44   | 4x         | 10 Hz      | 2.5 Hz             | 0.25°      | 0.0625°      | 300°          | 30 ... 330°            | x                | x        |         | (x)      | (x)      |
| 46   | 4x         | 16 Hz      | 4 Hz               | 0.5°       | 0.125°       | 300°          | 30 ... 330°            |                  | x        |         |          | (x)      |

Table 28: Interlace mode for sMN mCLsetsancfglist

(x): Only at raw data scan (field application)

**Example: Set scan configuration 1: sMN mCLsetsancfglist 1**

|       |        |  |
|-------|--------|--|
| Col A | ASCII  | <STX>sMN{SPC}mCLsetsancfglist{SPC}1<ETX>   |
|       | Hex    | 02 73 4D 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 31 03                         |
| Col B | Binary | 02 02 02 02 00 00 00 17 20 73 4D 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 01 0F |

Table 29: Example: Set scan configuration 1: sMN mCLsetsancfglist 1




| Telegram structure: sAN mCLsetsancfglist |                            |          |        |        |  |  |
|--|----------------------------|----------|--------|--------|--|--|
| Telegram part                            | Description                | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type                             | Answer                     | String   | 3      | All    | sAN  | 73 41 4E   |
| Command                                  | Confirm scan configuration | String   | 17     | All    | mCLsetsancfglist   | 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74   |
| Status code                              | Wrong setting              | Enum_8   | 1      | All    | Ok: 0<br>Error frequency: 1<br>Error resolution: 2<br>Err. res. and freq.: 3<br>Err. scan field: 4<br>Error: 5 | Ok: 00<br>Error frequency: 01<br>Error resolution: 02<br>Err. res. and freq.: 03<br>Err. scan field: 04<br>Error: 05 |

Table 30: Telegram structure: sAN mCLsetsancfglist

### Example: sAN mCLsetsancfglist Ok

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]mCLsetsancfglist[SPC]O<ETX>  |
|        | Hex    | 02 73 41 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 41 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 00 10 |

Table 31: Example: sAN mCLsetsancfglist Ok

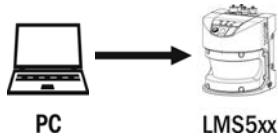

### Note



After sending this telegram, it will take 30 seconds to process the new configuration in the sensor.

| Telegram structure: sMN mCLsetsancfglist  |                        |          |        |        |                       |  |
|---|------------------------|----------|--------|--------|-----------------------|--|
| (user level 'authorized client' required) |                        |          |        |        |                       |  |
| Telegram part                             | Description            | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                             |
| Command type                              | Read                   | String   | 3      | All    | sMN                   | 73 4D 4E   |
| Command                                   | Set scan configuration | String   | 17     | All    | mCLsetsancfglist      | 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 |


| Telegram structure: sMN mCLsetsancfglist<br>(user level 'authorized client' required) |                    |          |        |        |   |  |
|---|--------------------|----------|--------|--------|---|--|
| Telegram part   | Description        | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
| Mode  | Scan configuration | Enum_8   | 1      | All    | 0d= 25Hz, 0.167°<br>1d = 25Hz, 0.25°<br>2d = 35Hz, 0.25°<br>3d = 35Hz, 0.5°<br>4d = 50Hz, 0.333°<br>5d = 50Hz, 0.5°<br>6d = 75Hz, 0.5°<br>7d = 75Hz, 1.0°<br>8d = 100Hz, 0.667°<br>9d = 100Hz, 1.0°<br>10d = 50Hz, 0.167° interl.<br>11d = 75Hz, 0.25° interl.<br>12d = 100Hz, 0.167° interl.<br>13d = 100Hz, 0.333° interl.<br>14d = 100Hz, 0.5° interl. | 00<br>01<br>02<br>03<br>04<br>05<br>06<br>07<br>08<br>09<br>0A<br>0B<br>0C<br>0D<br>0E |

Table 32: Telegram structure: sMN mCLsetsancfglist

**Example: sMN mCLsetsancfglist 5**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN{SPC}mCLsetsancfglist{SPC}5<ETX>  |
|        | Hex    | 02 73 4D 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 35 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 4D 4E 20 6D 43 4C 73 65 74 73 63 61 6E 63 66 67 6C 69 73 74 20 05 0A |

Table 33: Example: sMN mCLsetsancfglist 5

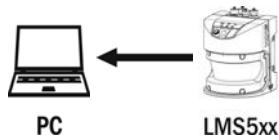

| Telegram structure: sAN mCLsetsancfglist<br>(user level 'authorized client' required) |                            |          |        |        |   |   |
|---|----------------------------|----------|--------|--------|---|---|
| Telegram part   | Description                | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                    |
| Command type  | Answer                     | String   | 3      | All    | sAN   | 73 41 4E                                  |
| Command   | Confirm scan configuration | String   | 17     | All    | mCLsetsancfglist  | 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 |
| Status code   | Result                     | Enum_8   | 1      | All    | 0d = Ok<br>1d = Frequency error<br>2d = Resolution error<br>3d = Frequency and resolution combination error<br>4d = Range error<br>5d = General error | 00<br>01<br>02<br>03<br>04<br>05          |

Table 34: Telegram structure: sAN mCLsetsancfglist

**Example: sAN mCLsetsancfglist 0**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN{SPC}mCLsetsancfglist{SPC}0<ETX>   |
|        | Hex    | 02 73 41 4E 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 41 4E 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 20 00 03 |

Table 35: Example: sAN mCLsetsancfglist 0

#### 4.2.5 Activate standby mode

Shut off the laser in order to extend the lifetime of laser diode. The motor keeps on turning.



| Telegram structure: sMN LMCstandby<br>(All = Authorized client; LMS4000 = Operator) |                       |          |        |        |                       |                               |
|---|-----------------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part   | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type  | Method                | String   | 3      | All    | sMN                   | 73 4D 4E                      |
| Command   | Set device to standby | String   | 10     | All    | LMCstandby            | 4C 4D 43 73 74 61 6E 64 62 79 |

Table 36: Telegram structure: sMN LMCstandby

#### Example: sMN LMCstandby

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN[SPC]LM Cstandby<ETX>  |
|        | Hex    | 02 73 4D 4E 20 4C 4D 43 73 74 61 6E 64 62 79 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 4D 4E 20 4C 4D 43 73 74 61 6E 64 62 79 65 |

Table 37: Example: sMN LMCstandby



| Telegram structure: sAN LMCstandby |                          |          |        |        |                       |                               |
|------------------------------------|--------------------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Answer                   | String   | 3      | All    | sAN                   | 73 41 4E                      |
| Command                            | Set device to standby    | String   | 10     | All    | LMCstandby            | 4C 4D 43 73 74 61 6E 64 62 79 |
| Status code                        | Accepted when value is 0 | Enum_8   | 1      | All    | No error: 0           | No error: 00                  |

Table 38: Telegram structure: sAN LMCstandby


#### Example: sAN LMCstandby

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN[SPC]LM Cstandby[SPC]0<ETX>  |
|        | Hex    | 02 73 41 4E 20 4C 4D 43 73 74 61 6E 64 62 79 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 41 4E 20 4C 4D 43 73 74 61 6E 64 62 79 20 00 49 |

Table 39: Example: sAN LMCstandby

### 4.2.6 Start measurement

Start the laser and (unless in Standby mode) the motor of the device

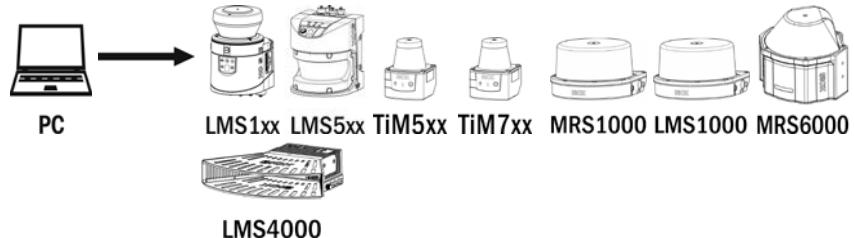


| Telegram structure: sMN LMCstartmeas<br>(All = Authorized client; LMS4000 = Operator) |                   |          |        |        |                       |  |
|---|-------------------|----------|--------|--------|-----------------------|--|
| Telegram part   | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type  | Method            | String   | 3      | All    | sMN                   | 73 4D 4E                               |
| Command   | Start measurement | String   | 12     | All    | LMCstartmeas          | 4C 4D 43 73 74 61 72 74<br>6D 65 61 73 |

Table 40: Telegram structure: sMN LMCstartmeas

#### Example: sMN LMCstartmeas

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN{SPC}LMCstartmeas<ETX>   |
|        | Hex    | 02 73 4D 4E 20 4C 4D 43 73 74 61 72 74 6D 65 61 73 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 4D 4E 20 4C 4D 43 73 74 61 72 74 6D 65 61 73 68 |

Table 41: Example: sMN LMCstartmeas

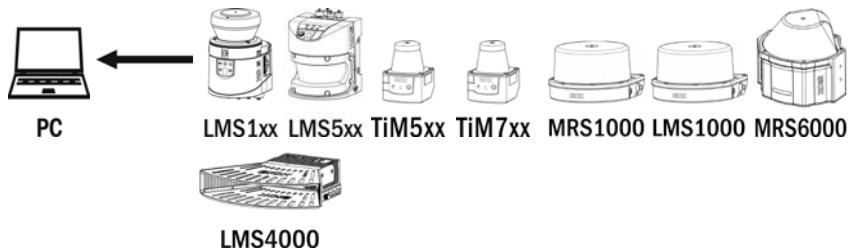

| Telegram structure: sAN LMCstartmeas |                          |          |        |        |                               |                                     |
|--------------------------------------|--------------------------|----------|--------|--------|-------------------------------|-------------------------------------|
| Telegram part                        | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)         | Values CoLa B (Binary)              |
| Command type                         | Answer                   | String   | 3      | All    | sAN                           | 73 41 4E                            |
| Command                              | Start measurement        | String   | 12     | All    | LMCstartmeas                  | 4C 4D 43 73 74 61 72 74 6D 65 61 73 |
| Status code                          | Accepted when value is 0 | Enum_8   | 1      | All    | No error: 0<br>Not allowed: 1 | No error: 00<br>Not allowed: 01     |

Table 42: Telegram structure: sAN LMCstartmeas


**Example: sAN LMCstartmeas**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN{SPC}LMCstartmeas{SPC}0<ETX>   |
|        | Hex    | 02 73 41 4E 20 4C 4D 43 73 74 61 72 74 6D 65 61 73 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 41 4E 20 4C 4D 43 73 74 61 72 74 6D 65 61 73 20 00 44 |

Table 43: Example: sAN LMCstartmeas

**4.2.7 Stop measurement**

Shut off the laser and stop the motor of the device

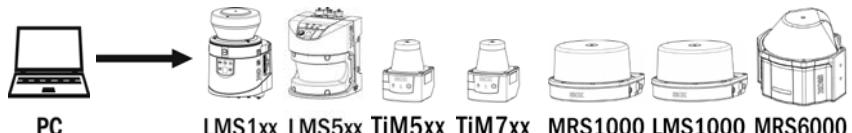


| Telegram structure: sMN LMCstopmeas<br>(Authorized client) |                  |          |        |        |                       |                                  |
|--|------------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part  | Description      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type   | Method           | String   | 3      | All    | sMN                   | 73 4D 4E                         |
| Command  | Stop measurement | String   | 11     | All    | LMCstopmeas           | 4C 4D 43 73 74 6F 70 6D 65 61 73 |

Table 44: Telegram structure: sMN LMCstopmeas

### Example: sMN LMCstopmeas

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]LMCstopmeas<ETX>   |
|        | Hex    | 02 73 4D 4E 20 4C 4D 43 73 74 6F 70 6D 65 61 73 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 4D 4E 20 4C 4D 43 73 74 6F 70 6D 65 61 73 10 |

Table 45: Example: sMN LMCstopmeas

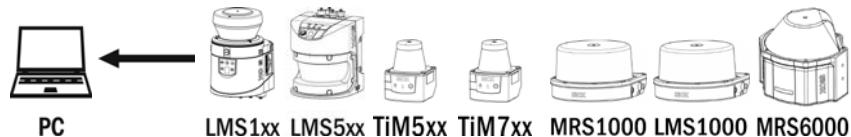

### Telegram structure: sAN LMCstopmeas

| Telegram part | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)         | Values CoLa B (Binary)           |
|---------------|--------------------------|----------|--------|--------|-------------------------------|----------------------------------|
| Command type  | Answer                   | String   | 3      | All    | sAN                           | 73 41 4E                         |
| Command       | Stop measurement         | String   | 11     | All    | LMCstopmeas                   | 4C 4D 43 73 74 6F 70 6D 65 61 73 |
| Status code   | Accepted when value is 0 | Enum_8   | 1      | All    | No error: 0<br>Not allowed: 1 | No error: 00<br>Not allowed: 01  |

Table 46: Telegram structure: sAN LMCstopmeas

### Example: sAN LMCstopmeas

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]LMCstopmeas[SPC]0<ETX>   |
|        | Hex    | 02 73 41 4E 20 4C 4D 43 73 74 6F 70 6D 65 61 73 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 41 4E 20 4C 4D 43 73 74 6F 70 6D 65 61 73 20 00 3C |

Table 47: Example: sAN LMCstopmeas

#### 4.2.8 Autostart measurement



| Telegram structure: sWN LMPautostartmeas<br>(Authorized client) |                                 |          |        |        |                                     |   |
|---|---------------------------------|----------|--------|--------|-------------------------------------|---|
| Telegram part   | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII)               | Values CoLa B (Binary)                          |
| Command type  | Write                           | String   | 3      | All    | sWN                                 | 73 57 4E  |
| Command   | Autostart measurement           | String   | 16     | All    | LMPautostartmeas                    | 4C 4D 50 61 75 74 6F 73 74 61 72 74 6D 65 61 73 |
| Status code   | Activate / Deactivate Autostart | Bool_1   | 1      | All    | Autostart off: 0<br>Autostart on: 1 | 00<br>01  |

Table 48: Telegram structure: sWN LMPautostartmeas

#### Example: sWN LMPautostartmeas 1

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}LMPautostartmeas{SPC}1 <ETX>  |
|        | Hex    | 02 73 57 4E 20 4C 4D 50 61 75 74 6F 73 74 61 72 74 6D 65 61 73 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 16 73 57 4E 20 4C 4D 50 61 75 74 6F 73 74 61 72 74 6D 65 61 73 20 01 4F |

Table 49: Example: sWN LMPautostartmeas 1

This parameter defines whether the scanner will start directly rotate and measure when powering up or remain in idle mode. The changed setting (saved with the command sMN mEEWriteall) will be then be active with the next power-up cycle.



| Telegram structure: sWA LMPautostartmeas |                       |          |        |        |                       |  |
|--|-----------------------|----------|--------|--------|-----------------------|--|
| Telegram part                            | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type                             | Answer                | String   | 3      | All    | sWA                   | 73 57 41                               |
| Command                                  | Autostart measurement | String   | 14     | All    | LMPautostartmeas      | 4C 4D 43 73 74 61 72 74<br>6D 65 61 73 |

Table 50: Telegram structure: sWA LMDautostartmeas


### Example: sWA LMPautostartmeas

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}LMPautostartmeas<ETX>  |
|        | Hex    | 02 73 57 41 20 4C 4D 43 73 74 61 72 74 6D 65 61 73 03                                     |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 57 41 20 4C 4D 50 61 75 74 6F 73 74 61 72 74 6D 65 61 73 20 41 |

Table 51: Example: sWA LMPautostartmeas

### 4.2.9 Laser Control

Define if laser is always on or rather switched on and off by specific trigger signal. Also select delay times and timeout.

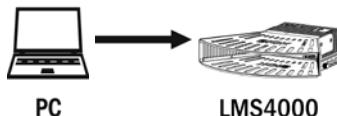

| Telegram structure: sWN IOlasc<br>(Authorized client) |                       |          |        |        |   |                            |
|---|-----------------------|----------|--------|--------|---|----------------------------|
| Telegram part   | Description           | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)     |
| Command type  | Write                 | String   | 3      | All    | sWN   | 73 57 4E                   |
| Command   | Autostart measurement | String   | 6      | All    | IOlasc  | 49 4F 6C 61 73 63          |
| Trigger Source  | Select Trigger Source | Uint_8   | 1      | All    | Free running: 0<br>Software: 1<br>Input 1: 2<br>Input 2: 3<br>Input 1 or 2: 4 | 00<br>01<br>02<br>03<br>04 |
| Delay on Start  | Delay on Start in ms  | Uint_16  | 2      | All    | 0 ... +65535d (0 ... FFFFh)   | 00 00 ... FF FF            |
| Delay on Stop   | Delay on Stop in ms   | Uint_16  | 2      | All    | 0 ... +65535d (0 ... FFFFh)   | 00 00 ... FF FF            |


| Telegram structure: sWN IOlasc<br>(Authorized client) |  |          |        |        |   |                          |
|---|--|----------|--------|--------|---|--------------------------|
| Telegram part   | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)                       | Values CoLa B (Binary)   |
| Laser Timeout   | Laser shuts down after defined time in s, if trigger signal does not disappear | Uint_16  | 2      | All    | 0 = inactive<br>1 ... +65535d (0 ... FFFFh) | 00 00<br>00 01 ... FF FF |
| Delay settings  | Reserved   | Uint_8   | 1      | All    | Always: 0                                   | 00                       |

Table 52: Telegram structure: sWN IOlasc

**Example: sWN IOlasc 1 +500 0 0 0**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN[SPC]IOlasc[SPC]1[SPC]+500[SPC]0[SPC]0[SPC]0<ETX>                                    |
|        | Hex    | 02 73 57 4E 20 49 4F 6C 61 73 63 20 31 20 2B 35 30 30 20 30 20 30 20 30 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 16 73 57 4E 20 49 4F 6C 61 73 63 20 01 01 F4 00 00 00 00 00 00 00 20 A5 |

Table 53: Example: sWN IOlasc with Software Trigger and 0.5 s delay on start.

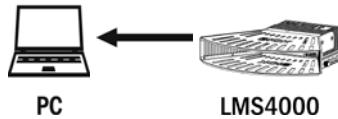

| Telegram structure: sWA IOlasc |                       |          |        |        |                       |                        |
|--------------------------------|-----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer                | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Autostart measurement | String   | 14     | All    | IOlasc                | 49 4F 6C 61 73 63      |

Table 54: Telegram structure: sWA IOlasc


**Example: sWA IOlasc**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]IOlasc<ETX>                                    |
|        | Hex    | 02 73 57 41 20 49 4F 6C 61 73 63 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 0B 73 57 41 20 49 4F 6C 61 73 63 20 7E |

Table 55: Example: sWA IOlasc

#### 4.2.10 Activate/deactivate field application

With the aid of the integrated field application, the LD-OEM1500/LD-LRS3600 evaluates up to four evaluation fields within its scan area.

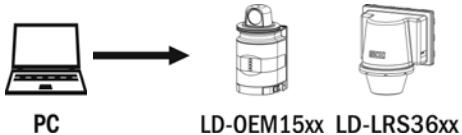


| Telegram structure: sWN CLApplication<br>(Authorized client) |                                       |          |        |        |  |  |
|--|---------------------------------------|----------|--------|--------|--|--|
| Telegram part  | Description                           | Variable | Length | Sensor | Values CoLa A (ASCII)                  | Values CoLa B (Binary)                       |
| Command type   | Write                                 | String   | 3      | All    | sWN                                    | 73 57 4E                                     |
| Command  | Activate/deactivate field application | String   | 13     | All    | CLApplication                          | 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E       |
| Mode   | Application                           | Enum_16  | 2      | All    | Scan only: 00<br>Field application: 11 | Scan only: 00 00<br>Field application: 00 11 |

Table 56: Telegram structure: sWN CLApplication

#### Example: Activate the field application: sWN CLApplication 11

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sWN{SPC}CLApplication{SPC}11<ETX>   |
|        | Hex    | 02 73 57 4E 20 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E 20 31 31 03                      |
| Cola B | Binary | 02 02 02 02 00 00 00 17 73 57 4E 20 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E 20 00 11 1F |

Table 57: Example: Activate the field application: sWN CLApplication 11

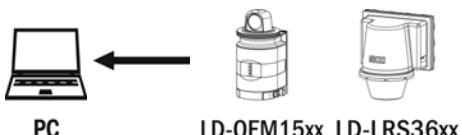

| Telegram structure: sWA CLApplication |                                       |          |        |        |                       |  |
|---------------------------------------|---------------------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                         | Description                           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type                          | Answer                                | String   | 3      | All    | sWA                   | 73 57 41                               |
| Command                               | Activate/deactivate field application | String   | 13     | All    | CLApplication         | 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E |

Table 58: Telegram structure: sWA CLApplication

**Example: sWA CLApplication correct and accepted**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}CLApplication<ETX>   |
|        | Hex    | 02 73 57 41 20 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 41 20 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E 1A |

Table 59: Example: sWA CLApplication correct and accepted

**4.2.11 Application selection and switching**

Selection between the field application (default) and the ranging application in the device.



| Telegram structure: sWN SetActiveApplications<br>(Authorized client) |  |          |        |        |  |  |
|--|--|----------|--------|--------|--|--|
| Telegram part  | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)                      | Values CoLa B (Binary)                 |
| Command type   | Write  | String   | 3      | All    | sWN  | 73 57 4E                               |
| Command  | Selects all currently active applications of the scanner | String   | 13     | All    | SetActiveApplications                      | 43 4C 41 70 70 6C 69 63 61 74 69 6F 6E |
| Array lenght   |  |          |        | All    | 0..1                                       | 00...01                                |
| Identifier   | Application  | String   |        |        | FEVL (Field Application)<br>RANG (Ranging) | 46 45 56 4C<br>52 41 4E 47             |
| Active   |  | Bool     |        |        | False = 0<br>True = 1                      | False = 00<br>True = 01                |

Table 60: Telegram structure: sWN SetActiveApplications

**Example: Activate the field application: sWN CLApplication 11**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}SetActiveApplications{SPC}1{SPC}FEVL{SPC}1<ETX>   |
|        | Hex    | 73 57 4E 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73 20 31 20 46 45 56 4C 20 31                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 22 73 57 4E 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73 20 31 20 46 45 56 4C 20 31 34 |

Table 61: Example: Activate the field application: sWN SetActiveApplications 1 FEVL 1



| Telegram structure: sWA SetActiveApplications |  |          |        |        |                       |  |
|---|--|----------|--------|--------|-----------------------|--|
| Telegram part                                 | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type                                  | Answer   | String   | 3      | All    | sWA                   | 73 57 41   |
| Command                                       | Selects all currently active applications of the scanner | String   |        | All    | SetActiveApplications | 53 65 74 41 63 74 69 76<br>65 41 70 70 6C 69 63 61<br>74 69 6F 6E 73 |

Table 62: Telegram structure: sWA SetActiveApplications

### Example: sWA CLApplication correct and accepted

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}SetActiveApplications<ETX>  |
|        | Hex    | 73 57 41 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73                               |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 57 41 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73<br>02 |

Table 63: Example: sWA SetActiveApplications correct and accepted

### 4.2.12 Read Application selection and switching



| Telegram structure: sRN SetActiveApplications |   |          |        |        |                       |  |
|---|---|----------|--------|--------|-----------------------|--|
| Telegram part                                 | Description                                   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type                                  | Read  | String   | 3      | All    | sRN                   | 73 52 4E   |
| Command                                       | Info of scan frequency and angular resolution | String   | 10     | All    | SetActiveApplications | 53 65 74 41 63 74 69 76<br>65 41 70 70 6C 69 63 61<br>74 69 6F 6E 73 |

Table 64: Telegram structure: sRN SetActiveApplications

### Example for MRS1000: sRN SetActiveApplications

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}SetActiveApplications<ETX>  |
|        | Hex    | 73 52 4E 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73                               |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 52 4E 20 53 65 74 41 63 74 69 76 65 41 70 70 6C 69 63 61 74 69 6F 6E 73<br>08 |

Table 65: Example for MRS1000: sRN SetActiveApplications




| Telegram structure: sRA SetActiveApplications |   |          |        |        |                       |   |
|---|---|----------|--------|--------|-----------------------|---|
| Telegram part                                 | Description                                   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                                  | Answer  | String   | 3      | All    | sRA                   | 73 52 41  |
| Command                                       | Info of scan frequency and angular resolution | String   | 10     | All    | SetActiveApplications | 73 52 4E 20 53 65 74 41<br>63 74 69 76 65 41 70 70<br>6C 69 63 61 74 69 6F 6E<br>73 |

#### 4.2.13 Load factory defaults


**NOTE**

The Factory-Reset (Load factory defaults) deletes the entire parametrization of the device. All parameters, settings and system applications will be set to default.

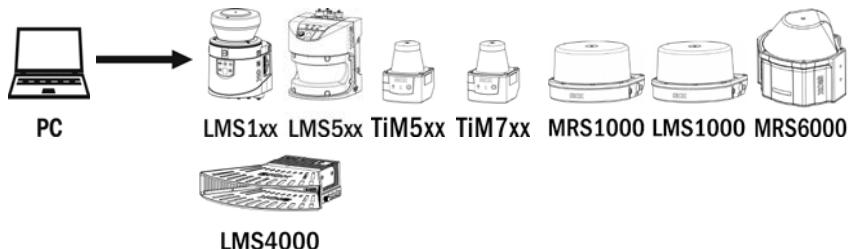


| Telegram structure: sMN mSCloadfacdef<br>(Authorized client) |                       |          |        |        |                       |                        |
|--|-----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part  | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type   | Method                | String   | 3      | All    | sMN                   | Not possible           |
| Command  | Load factory defaults | String   | 13     | All    | mSCloadfacdef         | Not possible           |

Table 66: Telegram structure: sMN mSCloadfacdef

**Example: sMN mSCloadfacdef**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN{SPC}mSCloadfacdef<ETX>                          |
|        | Hex    | 02 73 4D 4E 20 6D 53 43 6C 6F 61 64 66 61 63 64 65 66 03 |
| CoLa B | Binary | Not possible   |

Table 67: Example: sMN mSCloadfacdef

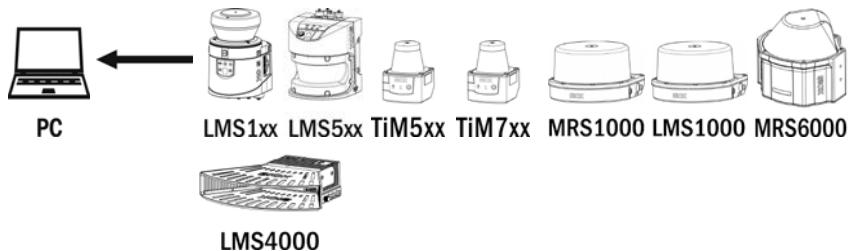

| Telegram structure: sAN mSCloadfacdef |                       |          |        |        |                       |                        |
|---------------------------------------|-----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                         | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                          | Answer                | String   | 3      | All    | sAN                   | Not possible           |
| Command                               | Load factory defaults | String   | 13     | All    | mSCloadfacdef         | Not possible           |

Table 68: Telegram structure: sAN mSCloadfacdef

**Example: sAN mSCloadfacdef**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN[SPC]mSCloadfacdef<ETX>                          |
|        | Hex    | 02 73 41 4E 20 6D 53 43 6C 6F 61 64 66 61 63 64 65 66 03 |
| CoLa B | Binary | Not possible   |


Table 69: Example: sAN mSCloadfacdef

#### 4.2.14 Load application defaults



**NOTE**

The Application-Reset (Load application defaults) deletes only the user parametrization of the Fields, Evaluation cases (EVC) and parameters under the header “Application”. Other parameters like Interface settings, Echo Filter, etc. remain unaffected.

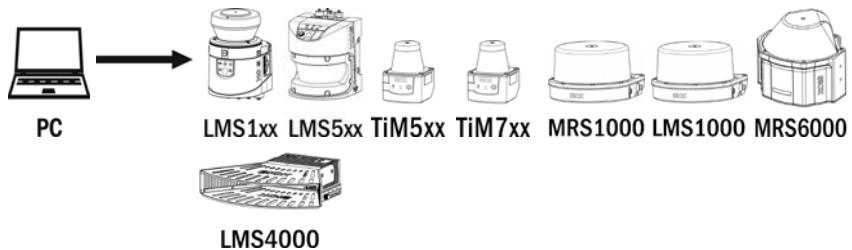


| Telegram structure: sMN mSCloadappdef<br>(Authorized client) |                           |          |        |        |                       |                        |
|--|---------------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part  | Description               | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type   | Method                    | String   | 3      | All    | sMN                   | Not possible           |
| Command  | Load application defaults | String   | 13     | All    | mSCloadappdef         | Not possible           |

Table 70: Telegram structure: sMN mSCloadappdef

**Example: sMN mSCloadappdef**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN{SPC}mSCloadappdef<ETX>                          |
|        | Hex    | 02 73 4D 4E 20 6D 53 43 6C 6F 61 64 61 70 70 64 65 66 03 |
| CoLa B | Binary | Not possible   |

Table 71: Example: sMN mSCloadappdef

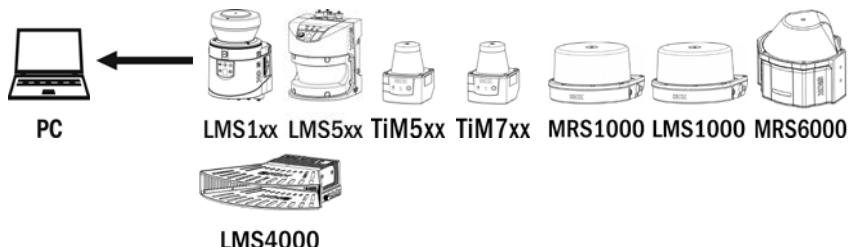

| Telegram structure: sAN mSCloadappdef |                           |          |        |        |                       |                        |
|---------------------------------------|---------------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                         | Description               | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                          | Answer                    | String   | 3      | All    | sAN                   | Not possible           |
| Command                               | Load application defaults | String   | 13     | All    | mSCloadappdef         | Not possible           |

Table 72: Telegram structure: sAN mSCloadappdef

**Example: sAN mSCloadappdef**

|        |       |  |
|--------|-------|--|
| CoLa A | ASCII | <STX>sAN{SPC}mSCloadappdef<ETX>                          |
|        | Hex   | 02 73 41 4E 20 6D 53 43 6C 6F 61 64 61 70 70 64 65 66 03 |

|        |        |              |
|--------|--------|--------------|
| CoLa B | Binary | Not possible |
|--------|--------|--------------|

Table 73: Example: sAN mSCloadappdef

### 4.2.15 Change password



#### NOTE

If logged in with a higher level you may set the password for lower levels as well.



| Telegram structure: sMN SetPassword<br>(the same User level or higher) |   |          |        |        |   |   |
|--|---|----------|--------|--------|---|---|
| Telegram part  | Description                                     | Variable | Length | Sensor | Values CoLa A (ASCII)                                   | Values CoLa B (Binary)                                  |
| Command type   | Method  | String   | 3      | All    | sMN   | 73 4D 4E  |
| Command  | Set password request                            | String   | 13     | All    | SetPassword   | 53 65 74 50 61 73 73 77 6F 72 64                        |
| User level   | User level that the password will be applied to | Int_8    | 1      | All    | Maintenance: 02<br>Authorized client: 03<br>Service: 04 | Maintenance: 02<br>Authorized client: 03<br>Service: 04 |
| Password   | Hash value of the new password                  | Uint_32  | 4      | All    | <Hash value>  | <Hash value>  |

Table 74: Telegram structure: sMN SetPassword

#### Example: sMN SetPassword


Set password for Authorized user to “testtest”.

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]SetPassword[SPC]03[SPC]19 20 E4 C9<ETX>  |
|        | Hex    | 02 73 4D 4E 20 53 65 74 50 61 73 73 77 6F 72 64 20 30 33 20 19 20 E4 C9 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 4D 4E 20 53 65 74 50 61 73 73 77 6F 72 64 20 30 33 20 19 20 E4 C9 3A |

Table 75: Example: sMN SetPassword

### Calculating the hash value of the password

- ▶ Login SOPAS with user level “Service”.
- ▶ Select [Device] > Password > Calculate Hash value.

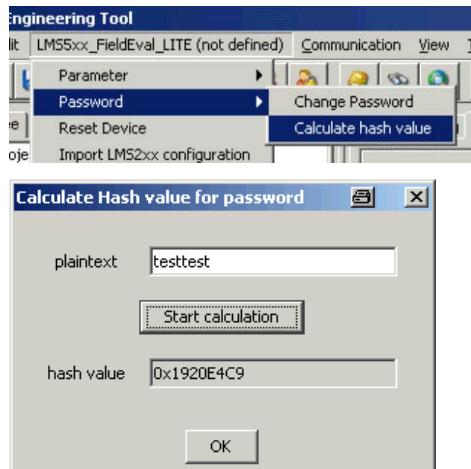

| Telegram structure: sAN SetPassword |                        |          |        |        |                         |                                     |
|-------------------------------------|------------------------|----------|--------|--------|-------------------------|-------------------------------------|
| Telegram part                       | Description            | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)              |
| Command type                        | Answer                 | String   | 3      | All    | sAN                     | Not possible                        |
| Command                             | Set password requested | String   | 13     | All    | SetPassword             | 53 65 74 50 61 73 73 77<br>6F 72 64 |
| Success                             | Confirmation           | Int_8    | 1      | All    | 0: Failed<br>1: Success | 0: Failed<br>1: Success             |

Table 76: Telegram structure: sAN SetPassword

### Example: sAN SetPassword

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN{SPC}SetPassword{SPC}1<ETX>   |
|        | Hex    | 02 73 4D 4E 20 53 65 74 50 61 73 73 77 6F 72 64 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 41 4E 20 53 65 74 50 61 73 73 77 6F 72 64 20 31 30 |

Table 77: Example: sAN SetPassword

4.2.16 Check password



| Telegram structure: sMN CheckPassword<br>(the same User level or higher) |  |          |        |        |   |   |
|--|--|----------|--------|--------|---|---|
| Telegram part  | Description                              | Variable | Length | Sensor | Values CoLa A (ASCII)                                   | Values CoLa B (Binary)                                  |
| Command type   | Method                                   | String   | 3      | All    | sMN   | 73 4D 4E  |
| Command  | Check password request                   | String   | 13     | All    | CheckPassword   | 43 68 65 63 6B 50 61 73 73 77 6F 72 64                  |
| User level   | User level to check the password for     | Int_8    | 1      | All    | Maintenance: 02<br>Authorized client: 03<br>Service: 04 | Maintenance: 02<br>Authorized client: 03<br>Service: 04 |
| Password   | Hash value of the password to be checked | Uint_32  | 4      | All    | <Hash value>  | <Hash value>  |

Table 78: Telegram structure: sMN CheckPassword

**Example: sMN CheckPassword**

Check password “testtest” for Authorized user.

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]CheckPassword[SPC]03[SPC]19 20 E4 C9<ETX>  |
|        | Hex    | 02 73 4D 4E 20 43 68 65 63 6B 50 61 73 73 77 6F 72 64 20 30 33 20 19 20 E4 C9 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 4D 4E 20 43 68 65 63 6B 50 61 73 73 77 6F 72 64 20 30 33 20 19 20 E4 C9 0E |

Table 79: Example: sMN CheckPassword



| Telegram structure: sAN CheckPassword |                          |          |        |        |                         |  |
|---------------------------------------|--------------------------|----------|--------|--------|-------------------------|--|
| Telegram part                         | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                 |
| Command type                          | Answer                   | String   | 3      | All    | sAN                     | Not possible                           |
| Command                               | Check password requested | String   | 13     | All    | CheckPassword           | 43 68 65 63 6B 50 61 73 73 77 6F 72 64 |
| Success                               | Confirmation             | Int_8    | 1      | All    | 0: Failed<br>1: Success | 0: Failed<br>1: Success                |

Table 80: Telegram structure: sAN CheckPassword


**Example: sAN CheckPassword**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]CheckPassword[SPC]1<ETX>                             |
|        | Hex    | 02 73 41 4E 20 43 68 65 63 6B 50 61 73 73 77 6F 72 64 20 30 31 03 |
| CoLa B | Binary | 02 73 41 4E 20 43 68 65 63 6B 50 61 73 73 77 6F 72 64 20 31 03    |

Table 81: Example: sAN CheckPassword

**4.2.17 Reboot device**

This command includes saving all parameters.

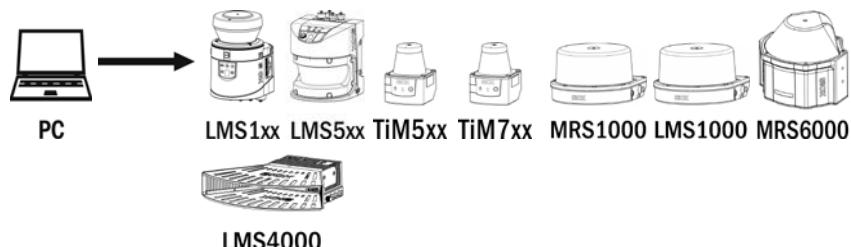


| Telegram structure: sMN mSCreboot<br>(Authorized client) |               |          |        |        |                       |                            |
|--|---------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part  | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type   | Method        | String   | 3      | All    | sMN                   | 73 4D 4E                   |
| Command  | Reboot device | String   | 9      | All    | mSCreboot             | 6D 53 43 72 65 62 6F 6F 74 |

Table 82: Telegram structure: sMN mSCreboot

**Example: sMN mSCreboot**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]mSCreboot<ETX>                                       |
|        | Hex    | 02 73 4D 4E 20 6D 53 43 72 65 62 6F 6F 74 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 4D 4E 20 6D 53 43 72 65 62 6F 6F 74 2C |

Table 83: Example: sMN mSCreboot

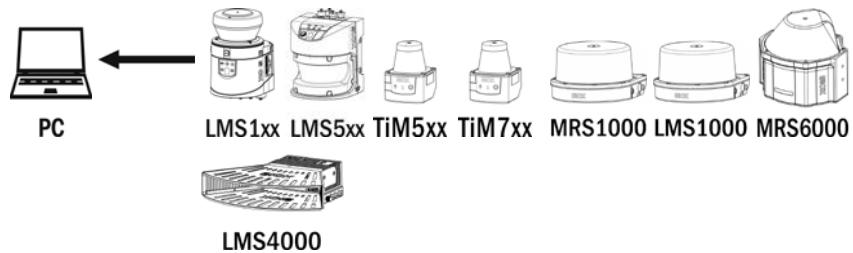

| Telegram structure: sAN mSCreboot |               |          |        |        |                       |                            |
|-----------------------------------|---------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Answer        | String   | 3      | All    | sAN                   | 73 41 4E                   |
| Command                           | Reboot device | String   | 9      | All    | mSCreboot             | 6D 53 43 72 65 62 6F 6F 74 |


Table 84: Telegram structure: sAN mSCreboot

**Example: sAN mSCreboot**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN[SPC]mSCreboot<ETX>  |
|        | Hex    | 02 73 41 4E 20 6D 53 43 72 65 62 6F 6F 74 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E 73 41 4E 20 6D 53 43 72 65 62 6F 6F 74 00 |

Table 85: Example: sAN mSCreboot

#### 4.2.18 Set contamination measurement settings

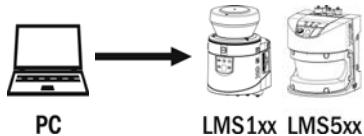


| Telegram structure: sWN LCMcfg<br>(Authorized client) |                 |          |        |        |   |  |
|---|-----------------|----------|--------|--------|---|--|
| Telegram part   | Description     | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
| Command type  | Write           | String   | 3      | All    | sWN   | 73 57 4E   |
| Command   |                 | String   | 6      | All    | LCMcfg  | 4C 43 4D 63 66 67  |
| Strategy  | Strategy code   | Enum_8   | 1      | All    | Inactive: 0<br>High available: 1<br>Available: 2<br>Sensitive: 3<br>Semi-sensitive: 4 | Inactive: 00<br>High available: 01<br>Available: 02<br>Sensitive: 03<br>Semi-sensitive: 04 |
| Response time   | Time lapse      | Uint_32  | 4      | All    | +1d ... +60d (01h ... 3Ch)  | 00 00 00 01 ...<br>00 00 00 3C   |
| Threshold warning                                     | Threshold value | Uint_32  | 4      | All    | 0d ... +100d (00h ... 64h)  | 00 00 00 00 ...<br>00 00 00 64   |
| Threshold error                                       | Threshold value | Uint_32  | 4      | All    | 0d ... +100d (00h ... 64h)  | 00 00 00 00 ...<br>00 00 00 64   |

Table 86: Telegram structure: sWN LCMcfg

#### Example: sWN LCMcfg

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]LCMcfg[SPC]1[SPC]+30[SPC]+65[SPC]+45<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 43 4D 63 66 67 20 31 20 2B 33 30 20 2B 36 35 20 2B 34 35 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 18 73 57 4E 20 4C 43 4D 63 66 67 20 01 00 00 00 1E 00 00 00 41 00 00 00 2D 39 |

Table 87: Example: sWN LCMcfg

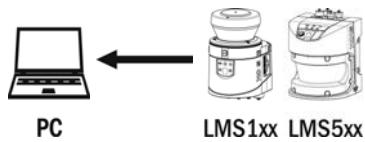

| Telegram structure: sWA LCMcfg |             |          |        |        |                       |                        |
|--------------------------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer      | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        |             | String   | 6      | All    | LCMcfg                | 4C 43 4D 63 66 67      |


Table 88: Telegram structure: sWA LCMcfg

### Example: sWA LCMcfg

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}LCMcfg<ETX>                                 |
|        | Hex    | 02 73 57 41 20 4C 43 4D 63 66 67 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0B 73 57 41 20 4C 43 4D 63 66 67 45 |

Table 89: Example: sWA LCMcfg

### 4.2.19 Read contamination measurement settings

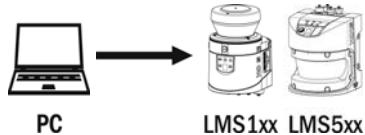


| Telegram structure: sRN LCMcfg |             |          |        |        |                       |                        |
|--------------------------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Read        | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                        |             | String   | 6      | All    | LCMcfg                | 4C 43 4D 63 66 67      |

Table 90: Telegram structure: sRN LCMcfg

### Example: sRN LCMcfg

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LCMcfg<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 4C 43 4D 63 66 67 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 4C 43 4D 63 66 67 6F |

Table 91: Example: sRN LCMcfg

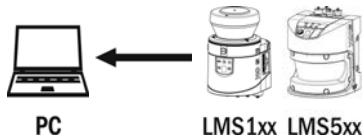

| Telegram structure: sRA LCMcfg |                   |          |        |        |   |  |
|--------------------------------|-------------------|----------|--------|--------|---|--|
| Telegram part                  | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
| Command type                   | Answer            | String   | 3      | All    | sRA   | 73 52 41   |
| Command                        | Read for settings | String   | 6      | All    | LCMcfg  | 4C 43 4D 63 66 67  |
| Strategy                       | Strategy code     | Enum_8   | 1      | All    | Inactive: 0<br>High available: 1<br>Available: 2<br>Sensitive: 3<br>Semi-sensitive: 4 | Inactive: 00<br>High available: 01<br>Available: 02<br>Sensitive: 03<br>Semi-sensitive: 04 |
| Response time                  | Time lapse        | Uint_16  | 2      | All    | +1d ... +60d (00h ... 3Ch)  | 00 00 ... 00 3C  |
| Threshold warning              | Threshold value   | Uint_16  | 2      | All    | 0d ... +100d (00h ... 64h)  | 00 00 ... 00 64  |
| Threshold error                | Threshold value   | Uint_16  | 2      | All    | 0d ... +100d (00h ... 64h)  | 00 00 ... 00 64  |

Table 92: Telegram structure: sRA LCMcfg

**Example: sRA LCMcfg**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LCMcfg{SPC}1{SPC}1{SPC}46{SPC}1E<ETX>                               |
|        | Hex    | 02 73 57 41 20 4C 43 4D 63 66 67 20 31 20 31 20 34 36 20 31 45 03                |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 41 20 4C 43 4D 63 66 67 20 01 00 01 00 46 00 1E 18 |

Table 93: Example: sRA LCMcfg

**4.2.20 Read contamination measurement detailed values**

| Telegram structure: sRN CMContLvIM |             |          |        |        |                       |                               |
|------------------------------------|-------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Read        | String   | 3      | All    | sRN                   | 73 52 4E                      |
| Command                            |             | String   | 10     | All    | CMContLvIM            | 43 4D 43 6F 6E 74 4C 76 6C 4D |

Table 94: Telegram structure: sRN CMContLvIM

**Example: sRN CMContLvIM**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}CMContLvIM <ETX>  |
|        | Hex    | 02 73 52 4E 20 43 4D 43 6F 6E 74 4C 76 6C 4D 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 52 4E 20 43 4D 43 6F 6E 74 4C 76 6C 4D 6C |

Table 95: Example: sRN CMContLvIM



**Telegram structure: sRA CMContLvIM**

| Telegram part                             | Description  | Variable | Length | Sensor   | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
|---|--|----------|--------|--|---|--|
| Command type                              | Answer   | String   | 3      | All  | sRA   | 73 52 41   |
| Command                                   |  | String   | 10     | All  | CMContLvIM  | 43 4D 43 6F 6E 74 4C 76 6C 4D  |
| Contamination data for different channels | [% of transparency] in order of the different channels | Uint_8   | 1      | LMS1xx   | Order of 7 channels:<br>-25.8°/12.8°/51.4°/90°/<br>128.6°/167.2°/205.8°<br><br>0d ... +100d (00h ... 64h) | Order of 7 channels:<br>-25.8°/12.8°/51.4°/90°/<br>128.6°/167.2°/205.8°<br><br>00 ... 64 |
|   |  |          |        | LMS5xx<br>NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | Order of 6 channels:<br>5°/35°/70°/110°/145°/<br>175°<br><br>0d ... +100d (00h ... 64h)                   | Order of 6 channels:<br>5°/35°/70°/110°/145°/<br>175°<br><br>00 ... 64                   |

Table 96: Telegram structure: sRA CMContLvIM


**Example for LMS5xx: sRA CMContLvIM**

5 ° -to 110 ° -channel: 100%, 145 ° -and 175 ° -channel only 84 % availability:

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}CMContLvIM{SPC}64{SPC}64{SPC}64{SPC}54{SPC}54{SPC}<ETX>                      |
|        | Hex    | 02 73 52 41 20 43 4D 43 6F 6E 74 4C 76 6C 4D 20 64 64 64 64 54 54 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 52 41 20 43 4D 43 6F 6E 74 4C 76 6C 4D 20 64 64 64 64 54 54 43 |

Table 97: Example for LMS5xx: sRA CMContLvIM

#### 4.2.21 Save parameters permanently

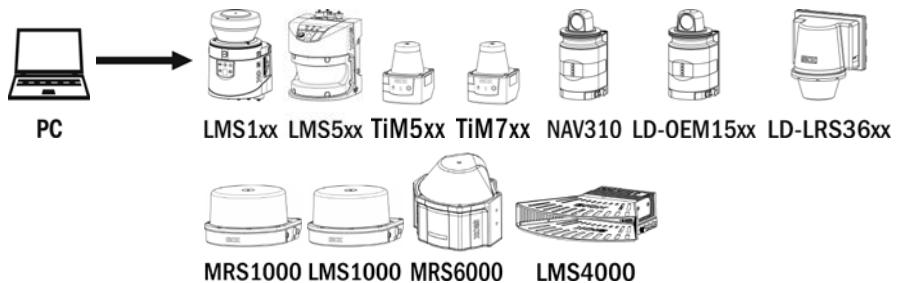


| Telegram structure: sMN mEEwriteall<br>(Authorized client) |                              |          |        |        |                       |                                  |
|--|------------------------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part  | Description                  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type   | Method                       | String   | 3      | All    | sMN                   | 73 4D 4E                         |
| Command  | Store parameters permanently | String   | 11     | All    | mEEwriteall           | 6D 45 45 77 72 69 74 65 61 6C 6C |

Table 98: Telegram structure: sMN mEEwriteall

#### Example: sMN mEEwriteall

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN{SPC}mEEwriteall<ETX>   |
|        | Hex    | 02 73 4D 4E 20 6D 45 45 77 72 69 74 65 61 6C 6C 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 4D 4E 20 6D 45 45 77 72 69 74 65 61 6C 6C 21 |

Table 99: Example: sMN mEEwriteall

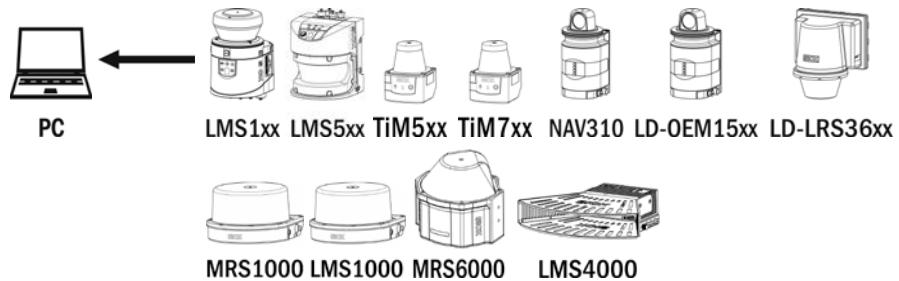

| Telegram structure: sAN mEEwriteall |                              |          |        |        |                        |                                  |
|-------------------------------------|------------------------------|----------|--------|--------|------------------------|----------------------------------|
| Telegram part                       | Description                  | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)           |
| Command type                        | Answer                       | String   | 3      | All    | sAN                    | 73 41 4E                         |
| Command                             | Store parameters permanently | String   | 11     | All    | mEEwriteall            | 6D 45 45 77 72 69 74 65 61 6C 6C |
| Status code                         | Accepted when value is 1     | Bool_1   | 1      | All    | Error: 0<br>Success: 1 | Error: 00<br>Success: 01         |


Table 100: Telegram structure: sAN mEEwriteall

**Example: sAN mEEwriteall**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN{SPC}mEEwriteall{SPC}1<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 45 45 77 72 69 74 65 61 6C 6C 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 41 4E 20 6D 45 45 77 72 69 74 65 61 6C 6C 20 01 0C |

Table 101: Example: sAN mEEwriteall

#### 4.2.22 Set to run

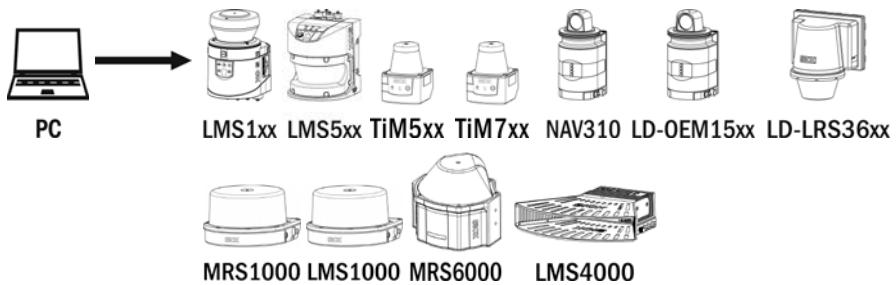

Log out from device and activate all parameter changes.

| Telegram structure: sMN Run |                  |          |        |        |                       |                        |
|-----------------------------|------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part               | Description      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                | Method           | String   | 3      | All    | sMN                   | 73 4D 4E               |
| Command                     | Start the device | String   | 3      | All    | Run                   | 52 75 6E               |

Table 102: Telegram structure: sMN Run

#### Example: sMN Run

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN{SPC}Run<ETX>                           |
|        | Hex    | 02 73 4D 4E 20 52 75 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 07 73 4D 4E 20 52 75 6E 19 |

Table 103: Example: sMN Run



| Telegram structure: sAN Run |                          |          |        |        |                        |                          |
|-----------------------------|--------------------------|----------|--------|--------|------------------------|--------------------------|
| Telegram part               | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type                | Answer                   | String   | 3      | All    | sAN                    | 73 41 4E                 |
| Command                     | Start the device         | String   | 3      | All    | Run                    | 52 75 6E                 |
| Status code                 | Accepted when value is 1 | Bool_1   | 1      | All    | Error: 0<br>Success: 1 | Error: 00<br>Success: 01 |

Table 104: Telegram structure: sAN Run


**Example: sAN Run**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]Run[SPC]1<ETX>                           |
|        | Hex    | 02 73 41 4E 20 52 75 6E 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 09 73 41 4E 20 52 75 6E 20 01 34 |

Table 105: Example: sAN Run

### 4.3 Measurement output telegram

#### 4.3.1 Configure the data content for the scan

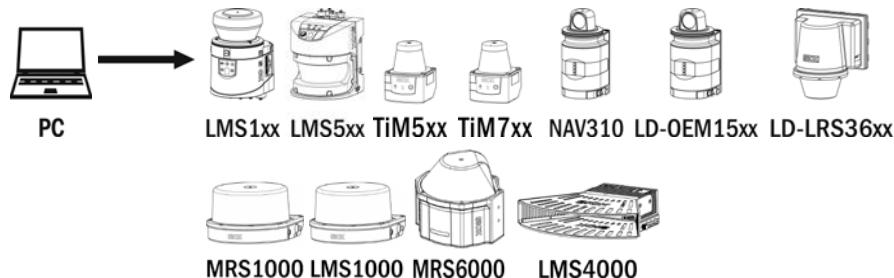

| Telegram structure: sWN LMDscandatacfg<br>(Authorized client) |                                     |          |        |  |   |   |
|---|-------------------------------------|----------|--------|--|---|---|
| Telegram part   | Description                         | Variable | Length | Sensor   | Values CoLa A (ASCII)   | Values CoLa B (Binary)                    |
| Command type  | Write                               | String   | 3      | All  | sWN   | 73 57 4E                                  |
| Command   | Configure scandata                  | String   | 14     | All  | LMDscandatacfg  | 4C 4D 44 73 63 61 6E 64 61 74 61 63 66 67 |
| Data channel  | Defines the telegram content (DIST) | Uint_8   | 2      | LMS1xx   | Output channel 1: 1 0<br>Output channel 2: 2 0<br>Output channel 1+2: 3 0                                 | 01 00<br>02 00<br>03 00                   |
|   |                                     |          |        | LMS5xx   | Set via Echo Filter, therefore: 0   | 00  |
|   |                                     |          |        | TiMxxx<br>NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | Output channel 1: 1 0   | 01 00                                     |
|   |                                     |          |        | MRS1000<br>LMS1000                                   | Output channel 1: 1 0<br>Output channel 2: 2 0<br>Output channel 1+2: 3 0<br>Output channel 1+2+3:<br>7 0 | 01 00<br>02 00<br>03 00<br>07 00          |

| Telegram structure: sWN LMDscandatacfg<br>(Authorized client) |  |          |        |   |  |  |
|---|--|----------|--------|---|--|--|
| Telegram part   | Description                                | Variable | Length | Sensor  | Values CoLa A (ASCII)  | Values CoLa B (Binary)                             |
|   |  |          |        | MRS 6000  | Output channel 1: 01 00<br>Output channel 2: 02 00<br>Output channel 3: 04 00<br>Output channel 4: 08 00<br>Verticle-angle: 10 00<br>Channel 1+2+3+4+Verticle angle: 1F 00 | 01 00<br>02 00<br>04 00<br>08 00<br>10 00<br>1F 00 |
|   |  |          |        | LMS 4000  | No distance values: 0 0<br>Distance values: 1 0  | 00 00<br>01 00                                     |
| Remission & Angle   | Remission & Angle offset data output       | Uint_8   | 1      | All   | No values: 0<br>RSSI: 1  | 00<br>01   |
|   |  |          |        | MRS1000<br>LMS  | No values: 0<br>RSSI: 1<br>AINF: 8<br>RSSI & AINF: 9   | 00<br>01<br>08<br>09                               |
|   |  |          |        | LMS4000   | No values: 0<br>Remission only: 1<br>Angle only: 2<br>Remission & Angle: 3   | 00<br>01<br>02<br>03                               |
| Resolution  | Resolution of remission data <sup>1)</sup> | Enum_8   | 1      | All   | 8 Bit: 0<br>16 Bit: 1  | 00<br>01   |
|   |  |          |        | LMS4000   | Always: 1  | 01   |
| Unit  | Unit of remission data                     | Enum_8   | 1      | All   | Digits: 0  | 00   |
|   |  |          |        | LMS4000   | Digits (RSSI): 0<br>Percent (REFL): 1  | 00<br>01   |
| Encoder   | Encoder data                               | Uint_8   | 2      | LMS1xx<br>LMS5xx<br>LMS4000   | No encoder: 0 0<br>Channel 1: 1 0  | 00 00<br>01 00                                     |
|   |  |          |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx<br>TiMxxx<br>MRS1000<br>LMS1000<br>MRS6000 | No encoder: 0 0  | No encoder: 00 00                                  |
| Position  | Position values                            | Bool_1   | 1      | All   | No: 0<br>Yes: 1  | 00<br>01   |

<sup>1)</sup> LMS5xx since V1.10, 8 bit only. ; MRS1000/LMS1000 8bit only

| Telegram structure: sWN_LMDscandatacfg<br>(Authorized client) |                        |          |        |         |   |                                |
|---|------------------------|----------|--------|---------|---|--------------------------------|
| Telegram part   | Description            | Variable | Length | Sensor  | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Device name   | Sends the device name  | Bool_1   | 1      | All     | No: 0<br>Yes: 1   | 00<br>01                       |
| Comment   | Saved comment          | Bool_1   | 1      | All     | No: 0<br>Yes: 1   | 00<br>01                       |
| Time  | Sends time information | Bool_1   | 1      | All     | No: 0<br>Yes: 1   | 00<br>01                       |
| Output rate   | Sends the output rate  | Uint_16  | 2      | LMS1xx  | All scans: +1d (1h)   | 00 01                          |
|   |                        |          |        | LMS5xx  | Each 2 <sup>nd</sup> scan: +2d (2h)   | 00 02                          |
|   |                        |          |        | TiMxxx  | Each 50000 <sup>th</sup> scan:<br>+50000d (C350h)   | C3 50                          |
|   |                        |          |        | LMS4000 |   |                                |
|   |                        |          |        | MRS1000 | All scans: +1d (1h)   | 00 01                          |
|   |                        |          |        | LMS1000 |   |                                |
|   |                        |          |        | MRS6000 | All scans: +1d (1h)<br>Each 2 <sup>nd</sup> scan: +2d (2h)<br>...<br>Max: Each 100 <sup>th</sup> Scan:<br>+100d (64h) | 00 01<br>00 02<br>...<br>00 64 |
|   |                        |          |        | NAV310  | All scans: +1d (1h)   | 00 01                          |
|   |                        |          |        | LD-OEM  | Each 2 <sup>nd</sup> scan: +2d (2h)   | 00 02                          |
|   |                        |          |        | 15xx    | Each 200 <sup>th</sup> scan: +200d<br>(C8h)   | 00 C8                          |
|   |                        |          |        | LD-LRS  |   |                                |
|   |                        |          |        | 36xx    |   |                                |

Table 106: Telegram structure: sWN LMDscandatacfg

### **Example 1: output channel 1, no encoder and all scans**


Table 107: Example 1: sWN LMDscandatacfg

**Example 2: output channel 1, remission, no encoder, each 10<sup>th</sup> scan**

Table 108: Example 2: sWN LMDscandatacfg

### **Example 3: output channel 2, encoder active, each 10<sup>th</sup> scan**

Table 109: Example3: sWN LMDscandatacfg

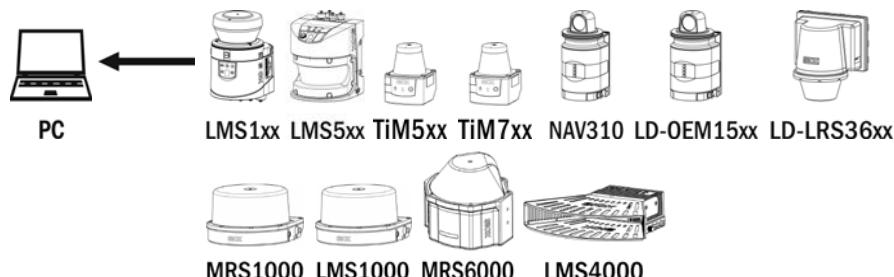

Telegram structure: sWA LMDscandatacfg

| Telegram part | Description        | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
|---------------|--------------------|----------|--------|--------|-----------------------|--|
| Command type  | Answer             | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command       | Configure scandata | String   | 14     | All    | LMDscandatacfg        | 4C 4D 44 73 63 61 6E 64<br>61 74 61 63 66 67 |


Table 110: Telegram structure: sWA LMDscandatacfg

#### **Example: sWA LMDscandatacfg**

|       |        |   |
|-------|--------|---|
| Col A | ASCII  | <STX>sWA{SPC LMDscandatacfg<ETX>  |
|       | Hex    | 02 73 57 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 63 66 67 03                         |
| Col B | Binary | 02 02 02 02 00 00 00 13 73 57 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 63 66 67 20 4D |

Table 111: Example: sWA LMDscandatacfg

## 4.3.2 Configure measurement angle of the scandata for output

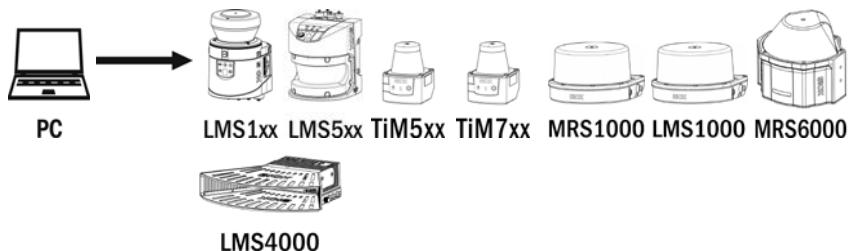

| Telegram structure: sWN LMPoutputRange<br>(Authorized client) |                           |          |        |                  |  |  |
|---|---------------------------|----------|--------|------------------|--|--|
| Telegram part   | Description               | Variable | Length | Sensor           | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type  | Write                     | String   | 3      | All              | sWN  | 73 57 4E   |
| Command   | Change output angle range | String   | 14     | All              | LMPoutputRange   | 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65  |
| Status code   | Length                    | Int_16   | 2      | All              | 1  | 00 01  |
| Angular resolution <sup>2)</sup>                              | [1/10000°]                | Uint_32  | 4      | LMS1xx           | 0.25°: +2500d (9C4h)<br>0.5°: +5000d (1388h)   | 0.25°: 00 00 09 C4<br>0.5°: 00 00 13 88  |
|   |                           |          |        | LMS5xx           | 0.1667°: +1667d (683h)<br>0.25°: +2500d (9C4h)<br>0.333°: +3333d (D05h)<br>0.5°: +5000d (1388h)<br>0.667°: +6667d (1A0Bh)<br>1°: +10000d (2710h) | 0.1667°: 00 00 06 83<br>0.25°: 00 00 09 C4<br>0.333°: 00 00 0D 05<br>0.5°: 00 00 13 88<br>0.667°: 00 00 1A 0B<br>1°: 00 00 27 10 |
|   |                           |          |        | TiMxxx           | 0.333°: +3333d (D05h)<br>1°: +10000d (2710h)   | 0.333°: 00 00 0D 05<br>1°: 00 00 27 10   |
|   |                           |          |        | MRS1000          | 0.25°: +2500d (9C4h)   | 0.25°: 00 00 09 C4   |
|   |                           |          |        | LMS1000          | 0.75°: +7500d (1D4Ch)  |  |
|   |                           |          |        | MRS 6000         | 0.13°: +1300d (514h)   | 0.13°: 00 00 05 14   |
|   |                           |          |        | LMS 4000         | 0.0833°: +833 (341h)   | 0.0833°: 00 00 03 41   |
|   |                           |          |        | LMS1xx<br>TiMxxx | -450000d ... +2250000d<br>(FFF92230h ... 225510h)  | FF F9 22 30 ...<br>00 22 55 10   |
|   |                           |          |        | LMS5xx           | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)   | FF FF 3C B0 ...<br>00 1C 3A 90   |
|   |                           |          |        | MRS1000          | -475000d ... +2275000d<br>(FF8C088h ... 22B6B8h)   | FF F8 C0 88 ...<br>00 22 B6 B8   |
|   |                           |          |        | LMS1000          | -480000d (FFF8AD00h)   |  |
|   |                           |          |        | MRS 6000         | 30000d...1500000d  | 00 04 93 E0 ...  |

<sup>2)</sup> Note: Angular resolution can not be changed here, it is taken automatically from the basic scan settings! The angular resolution is not exactly 0.1667 degree, and this value should not be used for calculations. The result is an angular resolution of 0,16 or 1/6 of a degree (six measurements per degree). When used for calculations a customer should recover the real value, e.g. by double AngRes = 2.0 / round(2.0 / GivenAngRes).


| Telegram structure: sWN LMPOutputRange<br>(Authorized client) |             |          |        |                  |   |                                  |
|---|-------------|----------|--------|------------------|---|----------------------------------|
| Telegram part   | Description | Variable | Length | Sensor           | Values CoLa A (ASCII)                             | Values CoLa B (Binary)           |
|   |             |          |        |                  | (493E0h ... 16E360h)                              | 00 16 E3 60                      |
|   |             |          |        | LMS 4000         | +550000d... +1250000d<br>(86470h ... 1312D0h)     | 00 08 64 70 ...<br>00 13 12 D0   |
| Stop angle [1/10000°]   | Int_32      | 4        |        | LMS1xx<br>TiMxxx | -450000d ... +2250000d<br>(FFF92230h ... 225510h) | FF F9 22 30 ...<br>00 22 55 10   |
|   |             |          |        | LMS5xx           | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)  | FF FF 3C B0 ...<br>00 1C 3A 90   |
|   |             |          |        | MRS1000          | -475000d ... +2275000d<br>(FFF8C088h ... 22B6B8h) | FF F8 C0 88 ...<br>00 22 B6 B8   |
|   |             |          |        | LMS1000          | +2280000d (22CA40h)                               |                                  |
|   |             |          |        | MRS 6000         | 30000d...1500000d<br>(493E0h ... 16E360h)         | 00 04 93 E0h ...<br>00 16 E3 60h |
|   |             |          |        | LMS 4000         | +550000d... +1250000d<br>(86470h ... 1312D0h)     | 00 08 64 70 ...<br>00 13 12 D0   |

Table 112: Telegram structure: sWN LMPOutputRange

**Example: sWN LMPOutputRange 0,50°resolution, 0°-90°**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}LMPOutputRange{SPC}1{SPC}1388{SPC}0{SPC}DBBA0<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 20 31 20 31 33 38 38 20 30 20 44 42 42 41 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 21 73 57 4E 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 20 00 01 00 00 13 88 00 00 00 00 00 0D BB A0 F7 |

Table 113: Example: sWN LMPOutputRange 0,50°resolution, 0°-90°

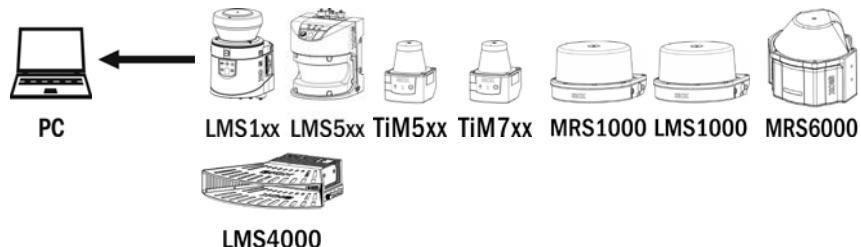

| Telegram structure: sWA LMPOutputRange |                  |          |        |        |                       |   |
|--|------------------|----------|--------|--------|-----------------------|---|
| Telegram part                          | Description      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                           | Answer           | String   | 3      | All    | sWA                   | 73 57 41                                  |
| Command                                | Store parameters | String   | 14     | All    | LMPOutputRange        | 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 |


Table 114: Telegram structure: sWA LMPOutputRange

**Example: sWA LMPoutputRange**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]LMPoutputRange<ETX>   |
|        | Hex    | 02 73 57 41 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 41 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 74 |

Table 115: Example: sWA LMPoutputRange

### 4.3.3 Read for actual output range

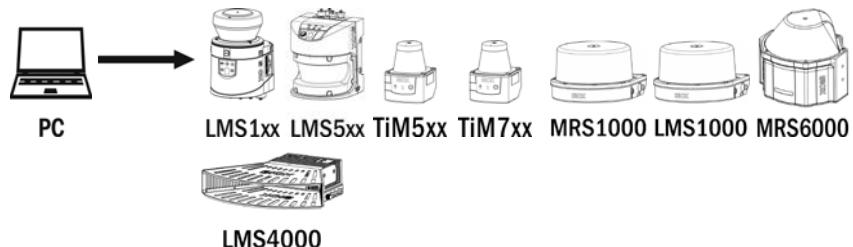

**Telegram structure: sRN LMPoutputRange**


| Telegram part | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
|---------------|--------------|----------|--------|--------|-----------------------|---|
| Command type  | Read         | String   | 3      | All    | sRN                   | 73 52 4E                                  |
| Command       | Output range | String   | 14     | All    | LMPoutputRange        | 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 |

Table 116: Telegram structure: sRN LMPoutputRange

**Example: sRN LMPoutputRange**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]LMPoutputRange<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 5E |

Table 117: Example: sRN LMPoutputRange

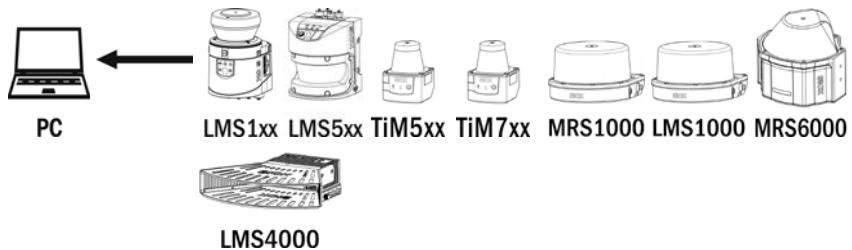

| Telegram structure: sRA LMPoutputRange |  |          |        |                  |  |  |
|--|--|----------|--------|------------------|--|--|
| Telegram part                          | Description  | Variable | Length | Sensor           | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type                           | Answer   | String   | 3      | All              | sRA  | 73 52 41   |
| Command                                | Output range   | String   | 14     | All              | LMPoutputRange   | 4C 4D 50 6F 75 74 70 75<br>74 52 61 6E 67 65   |
| Number of sectors                      | Indicates the number of sectors.<br>The subsequent values will be transmitted 1 ... 4 accordingly. | Int_16   | 2      | All              | Sector 1: 0001h  | Sector 1: 0001   |
| Angular resolution                     | [1/10000°]   | Uint_32  | 4      | LMS1xx           | 0.25°: +2500d (9C4h)<br>0.5°: +5000d (1388h)   | 0.25°: 00 00 09 C4<br>0.5°: 00 00 13 88  |
|  |  |          |        | LMS5xx           | 0.1667°: +1667d (683h)<br>0.25°: +2500d (9C4h)<br>0.333°: +3333d (D05h)<br>0.5°: +5000d (1388h)<br>0.667°: +6667d (1A0Bh)<br>1°: +10000d (2710h) | 0.1667°: 00 00 06 83<br>0.25°: 00 00 09 C4<br>0.333°: 00 00 0D 05<br>0.5°: 00 00 13 88<br>0.667°: 00 00 1A 0B<br>1°: 00 00 27 10 |
|  |  |          |        | TiMxxx           | 0.333°: +3333d (D05h)<br>1°: +10000d (2710h)   | 0.333°: 00 00 0D 05<br>1°: 00 00 27 10   |
|  |  |          |        | MRS1000          | 0.25°: +2500d (9C4h)   | 0.25°: 00 00 09 C4   |
|  |  |          |        | LMS1000          | 0.75°: +7500d (1D4Ch)  |  |
|  |  |          |        | MRS 6000         | 0.13°: +1300d (514h)   | 0.13°: 00 00 05 14   |
|  |  |          |        | LMS 4000         | 0.0833°: +833 (341h)   | 0.0833°: 00 00 03 41   |
|  |  |          |        | LMS1xx<br>TiMxxx | -450000d ... +2250000d<br>(FF92230h ... 225510h)   | FF F9 22 30 ...<br>00 22 55 10   |
|  |  |          |        | LMS5xx           | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)   | FF FF 3C B0 ...<br>00 1C 3A 90   |
|  |  |          |        | MRS1000          | -475000d ... +2275000d<br>(FFF8C088h ... 22B6B8h)  | FF F8 C0 88 ...<br>00 22 B6 B8   |
| Start angle                            | [1/10000°]   | Int_32   | 4      | LMS1000          | -480000d ... +2280000d<br>(FFF8AD00h ... 22CA40h)  |  |
|  |  |          |        | MRS 6000         | 30000d...1500000d<br>(493E0h ... 16E360h)  | 00 04 93 E0h ...<br>00 16 E3 60h   |
|  |  |          |        | LMS 4000         | +550000d... +1250000d<br>(86470h ... 1312D0h)  | 00 08 64 70 ...<br>00 13 12 D0   |

| Telegram structure: sRA LMPoutputRange |             |          |        |                  |   |                                  |
|--|-------------|----------|--------|------------------|---|----------------------------------|
| Telegram part                          | Description | Variable | Length | Sensor           | Values CoLa A (ASCII)                             | Values CoLa B (Binary)           |
| Stop angle<br>[1/10000°]               |             | Int_32   | 4      | LMS1xx<br>TiMxxx | -450000d ... +2250000d<br>(FFF92230h ... 225510h) | FF F9 22 30 ...<br>00 22 55 10   |
|  |             |          |        | LMS5xx           | -50000d ... +1850000d<br>(FFFF3CB0h ... 1C3A90h)  | FF FF 3C B0 ...<br>00 1C 3A 90   |
|  |             |          |        | MRS1000          | -475000d ... +2275000d<br>(FFF8C088h ... 22B6B8h) | FF F8 C0 88 ...<br>00 22 B6 B8   |
|  |             |          |        | LMS1000          | -480000d ... +2280000d<br>(FFF8AD00h ... 22CA40h) |                                  |
|  |             |          |        | MRS 6000         | 30000d...1500000d<br>(493E0h ... 16E360h)         | 00 04 93 E0h ...<br>00 16 E3 60h |
|  |             |          |        | LMS 4000         | +550000d... +1250000d<br>(86470h ... 1312D0h)     | 00 08 64 70 ...<br>00 13 12 D0   |

Table 118: Telegram structure: sRA LMPoutputRange

**Example: sRA LMPoutputRange**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LMPoutputRange {SPC}1{SPC}1388{SPC}FFF92230{SPC}225510<ETX>   |
|        | Hex    | 02 73 52 41 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 20 31 20 31 33 38 38 20 46 46 46 39 32 32 33 30 20 32 32 35 35 31 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 21 73 52 41 20 4C 4D 50 6F 75 74 70 75 74 52 61 6E 67 65 20 00 01 00 00 13 88 FF F9 22 30 00 22 55 10 98    |

Table 119: Example: sRA LMPoutputRange

#### 4.3.4 Poll one telegram


Output of values from last scan.

Asking the device for the measurement values of the last valid scan. The device will respond, even if it is not running at the moment.



##### NOTE

**After changing the scanning frequency, there will be no data telegram or answer from the devices LMS1xx, LMS5xx and TiMxxx for up to 30 seconds. The same applies when the device is powering up or rebooting.**

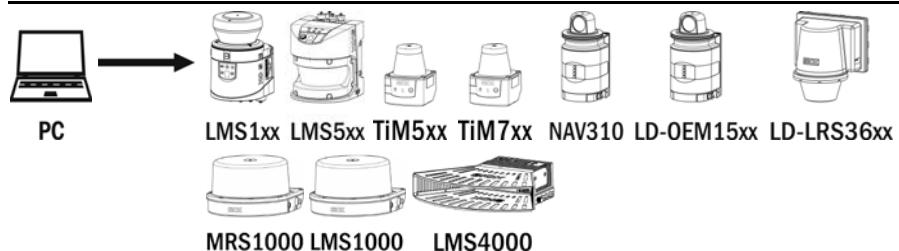


| Telegram structure: sRN LMDscandata |                   |          |        |        |                       |                                  |
|-------------------------------------|-------------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Read              | String   | 3      | All    | sRN                   | 73 52 4E                         |
| Command                             | Only one telegram | String   | 11     | All    | LMDscandata           | 4C 4D 44 73 63 61 6E 64 61 74 61 |

Table 120: Telegram structure: sRN LMDscandata

##### Example: sRN LMDscandata

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]LMDscandata<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 4D 44 73 63 61 6E 64 61 74 61 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 4E 20 4C 4D 44 73 63 61 6E 64 61 74 61 05 |

Table 121: Example: sRN LMDscandata

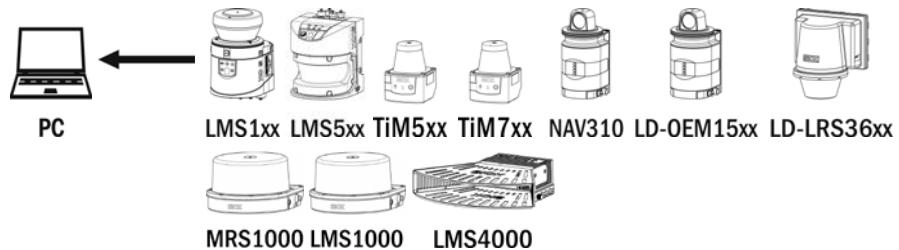

| Telegram structure: sRA LMDscandata   |             |          |        |        |                       |                        |
|---|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part   | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Find complete telegram structure of the answer in section 4.3.5 „Send data permanent“ on page 69. |             |          |        |        |                       |                        |

Table 122: Telegram structure: sRA LMDscandata

**Example: sRA LMDscandata**


|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | No ASCII answer possible.  |
|        | Hex    | 02 73 52 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 01 20 01 20 89 C9 97 20 00 20 00 20 1A AE 1A B1 20 58 1C BC 15 20 58 1D 15 3D 20 00 20 00 20 07 20 00 20 00 20 13 88 20 15 20 F6 20 F9 20 F5 20 EF 20 F6 20 F2 20 EF 20 ED 20 F5 20 E9 20 F2 20 FA 20 FC 20 FF 20 F1 20 F2 20 01 07 20 FC 20 FC 20 01 02 20 FF 20 00 20 00 20 00 20 00 20 00 03 |
| CoLa B | Binary | Find complete telegram structure of the answer in section 4.3.5 „Send data permanent“ on page 69.  |

Table 123: Example: sRA LMDscandata

#### 4.3.5 Send data permanently

**NOTE**

After changing the scanning frequency, there will be no data telegram or answer from the devices LMS1xx, LMS5xx and TiMxxx for up to 30 seconds. The same applies when the device is powering up or rebooting.

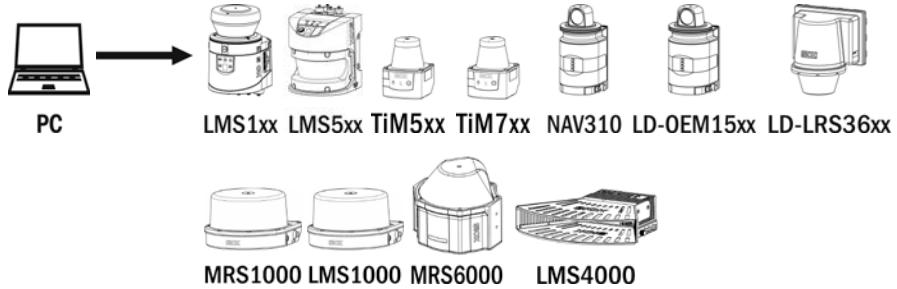


| Telegram structure: sEN LMDscandata |               |          |        |        |                       |                                  |
|-------------------------------------|---------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Event         | String   | 3      | All    | sEN                   | 73 45 4E                         |
| Command                             | Data telegram | String   | 11     | All    | LMDscandata           | 4C 4D 44 73 63 61 6E 64 61 74 61 |
| Measurement                         | Start/stop    | Enum_8   | 1      | All    | Stop: 0<br>Start: 1   | Stop: 00<br>Start: 01            |

Table 124: Telegram structure: sEN LMDscandata

**Example: sEN LMDscandata**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sEN[SPC]LMDscandata [SPC]1<ETX>  |
|        | Hex    | 02 73 45 4E 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 45 4E 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 01 33 |

Table 125: Example: sEN LMDscandata

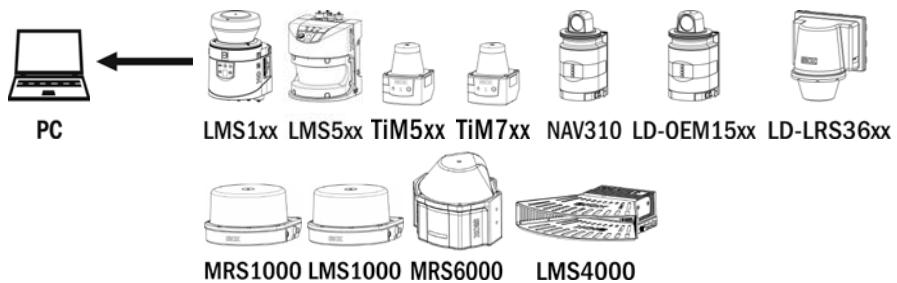

| Telegram structure: sEA LMDscandata |               |          |        |        |                       |                                  |
|-------------------------------------|---------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Answer        | String   | 3      | All    | sEA                   | 73 45 41                         |
| Command                             | Data telegram | String   | 11     | All    | LMDscandata           | 4C 4D 44 73 63 61 6E 64 61 74 61 |
| Measurement                         | Start/stop    | Enum_8   | 1      | All    | Stop: 0<br>Start: 1   | Stop: 00<br>Start: 01            |

Table 126: Telegram structure: sEA LMDscandata

#### Example: Confirmation of sEA LMDscandata

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sEA{SPC}LMDscandata{SPC}1<ETX>   |
|        | Hex    | 02 73 45 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 45 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 01 33 |

Table 127: Example: Confirmation of sEA LMDscandata

#### Telegram stream

The answer to the telegram will be followed by the scandata:



Leading zeros of a value will not be displayed in ASCII.

| Telegram structure: sRA LMDscandata/sSN LMDscandata |   |          |        |        |                       |                                  |
|---|---|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                                       | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type  | Read  | String   | 3      | All    | sRA<br>sSN            | 73 52 41<br>73 53 4E             |
| Command   | Data telegram   | String   | 11     | All    | LMDscandata           | 4C 4D 44 73 63 61 6E 64 61 74 61 |
| Version number                                      | For detecting format changes by the version. Version is always 1 up to now. | Uint_16  | 2      | All    | 0000h ... FFFFh       | 00 00 ... FF FF                  |
| Device number                                       | Defined with SOPAS  | Uint_16  | 2      | All    | 0000h ... FFFFh       | 00 00 ... FF FF                  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |                              |          |        |          |                          |                             |  |  |  |
|---|------------------------------|----------|--------|----------|--------------------------|-----------------------------|--|--|--|
| Telegram part                                       | Description                  | Variable | Length | Sensor   | Values CoLa A (ASCII)    | Values CoLa B (Binary)      |  |  |  |
| Serial number                                       | Defined in factory           | Uint_32  | 4      | All      | 00000000h ... FFFFFFFFh  | 00 00 00 00 ... FF FF FF FF |  |  |  |
| Device status                                       | (See values column)          | Uint_8   | 2 × 1  | All      | Ok: 00 00                | 00 00                       |  |  |  |
|   |                              |          |        |          | Error: 00 01             | 00 01                       |  |  |  |
| Status info   | LMS1xx                       |          |        |          | Pollution warning: 00 02 | 00 02                       |  |  |  |
|   |                              |          |        |          | Pollution error: 00 05   | 00 05                       |  |  |  |
|   | Telegram counter             | Uint_16  | 2      | All      | 0000h ... FFFFh          | 00 00 ... FF FF             |  |  |  |
|   | Scan counter                 | Uint_16  | 2      | All      | 0000h ... FFFFh          | 00 00 ... FF FF             |  |  |  |
|   | Time since start up in µs    | Uint_32  | 4      | All      | 00000000h ... FFFFFFFFh  | 00 00 00 00 ... FF FF FF FF |  |  |  |
|   | Time of transmission in µs   | Uint_32  | 4      | All      | 00000000h ... FFFFFFFFh  | 00 00 00 00 ... FF FF FF FF |  |  |  |
| Status of digital inputs                            | Low byte represents input 1. | Uint_8   | 2 × 1  | LMS1xx   | All inputs low: 00 00    | 00 00                       |  |  |  |
|   |                              |          |        | LMS5xx   | All inputs high: 00 03   | 00 03                       |  |  |  |
|   |                              |          |        | MRS 1000 | 00 00                    | 00 00                       |  |  |  |
|   |                              |          |        | LMS 1000 |                          |                             |  |  |  |
|   |                              |          |        | MRS 6000 |                          |                             |  |  |  |
|   |                              |          |        | LMS 4000 |                          |                             |  |  |  |

<sup>3)</sup> Does not count how many telegrams were really given out; is relevant if not all scans are delivered from the scan core.

| Telegram structure: sRA LMDscandata/sSN LMDscandata |  |            |         |                     |   |   |
|---|--|------------|---------|---------------------|---|---|
| Telegram part                                       | Description  | Variable   | Length  | Sensor              | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
|   | Status of digital outputs<br>Low byte represents output 1. | Uint_8     | 2 × 1   | All                 | All outputs low: 00 00<br>TiMxxx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 OF</li> </ul> LMS1xx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 07</li> <li>• All outputs high (inkl. Ext. Out): 07 FF</li> </ul> LMS5xx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 3F</li> <li>• All outputs high (inkl. Ext. Out): 3F FF</li> </ul> LDXXX<br><ul style="list-style-type: none"> <li>• All outputs high: 00 OF</li> </ul> MRS1000 (1.0.0)<br>LMS1000<br>MRS6000 (1.0.1)<br>LMS4000<br><ul style="list-style-type: none"> <li>• Always 00 00</li> </ul> | All outputs low: 00 00<br>TiMxxx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 OF</li> </ul> LMS1xx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 07</li> <li>• All outputs high (inkl. Ext. Out): 07 FF</li> </ul> LMS5xx:<br><ul style="list-style-type: none"> <li>• All internal outputs high: 00 3F</li> <li>• All outputs high (inkl. Ext. Out): 3F FF</li> </ul> LDXXX<br><ul style="list-style-type: none"> <li>• All outputs high: 00 OF</li> </ul> MRS1000 (1.0.0)<br>LMS1000<br>MRS6000 (1.0.1)<br>LMS4000<br><ul style="list-style-type: none"> <li>• Always 00 00</li> </ul> |
| former Reserved now Layer angle.                    | -  | Uint_16    | 2       | All except MRS 1000 | 0<br>0 → 0 Layer2<br>FF06 → -250 Layer3<br>FA → 250 Layer1<br>FE0C → -500 Layer4<br>(value 1/100)   | 0<br>00 00 00 00<br>46 46 30 36<br>00 00 46 41<br>46 45 30 43   |
|   |  | Int_16     |         | MRS600 0            | Angle = value / 200<br>Example:<br>F5B2h → -2638/200 =<br>-13.19° → Layer 24<br>EDh → 237/200 =<br>1.185° → Layer 1<br>Range: -13.19° ~ 1.185°<br>(each layer is 0.625°)  | Angle = value / 200<br>Example:<br>F5 B2 → Layer 24<br>00 ED → Layer 1  |
| frequency   | Scan frequency   | [1/100 Hz] | Uint_32 | 4                   | LMS1xx<br>25 Hz: +2500d (9C4h)<br>50 Hz: +5000d (1388h)   | 09 C4<br>13 88  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |   |                  |         |   |   |   |
|---|---|------------------|---------|---|---|---|
| Telegram part                                       | Description   | Variable         | Length  | Sensor  | Values CoLa A (ASCII)   | Values CoLa B (Binary)                    |
|   |   |                  |         | LMS5xx  | 25 Hz: +2500d (9C4h)<br>35 Hz: +3500d (D4Ch)<br>50 Hz: +5000d (1388h)<br>75 Hz: +7500d (1A0Bh)<br>100 Hz: +10000d (2710h) | 09 C4<br>0D AC<br>13 88<br>1A 0B<br>27 10 |
|   |   |                  |         | TiMxxx  | 15 Hz: +1500d (5DCh)  | 05 DC                                     |
|   |   |                  |         | NAV310<br>LD-OEM<br>15xx                                    | 5 Hz ... 20 Hz:<br>+500d ... +2000d<br>(1F4h ... 7D0h)  | 01 F4 ... 07 D0                           |
|   |   |                  |         | LD-LRS<br>36xx  | 5 Hz ... 15 Hz:<br>+500d ... +1500<br>(1F4h ... 5DCh))  | 01 F4 ... 05 DC                           |
|   |   |                  |         | MRS<br>1000   | 50 Hz: +5000d (1388h)   | 50 Hz: 13 88                              |
|   |   |                  |         | LMS<br>1000   | 150 Hz: +15000d (3A98h)   |   |
|   |   |                  |         | MRS<br>6000   | 10 Hz: +1000d (3E8h)  | 10 Hz: 03 E8                              |
|   |   |                  |         | LMS<br>4000   | 600 Hz: +60000d (EA60h)   | 600 Hz: EA 60                             |
|   |   |                  |         | AII   | 00000000h ... FFFFFFFFh   | 00 00 00 00 ... FF FF FF FF               |
|   |   |                  |         | LMS<br>4000   | 000021C0h   | 00 00 21 C0                               |
| Amount of encoder                                   | Inverse of the time between two measurement shots (in 100 Hz), Example: 50 Hz, 0.5° resolution → 720 shots/20 ms → 36 kHz | Uint_32          | 4       | TiMxxx<br>MRS<br>1000<br><br>LMS<br>1000<br><br>MRS<br>6000 | Always: 0   | Always: 00 00                             |
|   |   |                  |         | LMS1xx<br>LMS5xx  | 0 ... 3   | 00 00 ... 00 03                           |
|   |   |                  |         | LMS<br>4000   | 0 ... 1   | 00 00 ... 00 01                           |
|   |   |                  |         | LMS1xx<br>LMS5xx<br>LMS<br>4000                             | 00000000h ... FFFFFFFFh   | 00 00 00 00 ... FF FF FF FF               |
| Values  | Encoder position  | Info in ticks    | Uint_32 | 4   | LMS1xx<br>LMS5xx<br>LMS<br>4000   | 00000000h ... FFFFFFFFh                   |
|   | Encoder speed   | Ticks/mm         | Uint_16 | 2   | LMS1xx<br>LMS5xx  | 0000h ... FFFFh                           |
| <b>Amount of</b>                                    |   | Number of 16 bit | Uint_16 | 2   | TiMxxx  | Output channel: 1                         |
|   |   |                  |         |   |   | Output channel: 01                        |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |                                     |  |        |  |  |  |  |
|---|-------------------------------------|--|--------|--|--|--|--|
| Telegram part                                       | Description                         | Variable   | Length | Sensor                                     | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |  |
| <b>16 bit channels</b>                              | channels that provide measured data |  |        | LMS1xx                                     | Output channels: 1, 2 or 4   | Output channels: 01, 02 or 04  |  |
|   |                                     |  |        | LMS5xx                                     | Output channels: 1 or 5  | Output channels: 01 or 05  |  |
|   |                                     |  |        | MRS 1000<br>LMS 1000                       | Output channels: 1 or 3  | Output channels: 01 or 03  |  |
|   |                                     |  |        | MRS 6000                                   | Output channels: 1..9  | Output channels: 01..09  |  |
|   |                                     |  |        | LMS 4000                                   | Output channels: 0...3   | Output channels: 00...03   |  |
|   |                                     |  |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | Depending on amount of sectors and selection of output of distance or distance and remission RSSI<br><br>Example (2 sectors):<br><br>If 2 channels: sectors 1 + 2 contain Dist1<br><br>If 4 channels: sectors 1 + 2 contain Dist + RSSI1 | Depending on amount of sectors and selection of output of distance or distance and remission RSSI<br><br>Example (2 sectors):<br><br>If 2 channels: sectors 1 + 2 contain Dist1<br><br>If 4 channels: sectors 1 + 2 contain Dist + RSSI1 |  |
| Output channel (16 bit)                             | Content                             | Defines the content of the output channel<br><br>Unit of radial distance values (DIST) is mm | String | 5  | LMS1xx   | DIST1: Distance values of first pulse<br><br>DIST2: Distance values of second pulse<br><br>RSSI1: Energy values of first pulse<br><br>RSSI2: Energy values of second pulse   | 44 49 53 54 31<br><br>44 49 53 54 32<br><br>52 53 53 49 31<br><br>52 53 53 49 32 |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |             |  |        |   |  |                        |
|---|-------------|--|--------|---|--|------------------------|
| Telegram part                                       | Description | Variable                                   | Length | Sensor  | Values CoLa A (ASCII)  | Values CoLa B (Binary) |
|   |             | LMS5xx<br>(with Software ≥V1.10 only)      |        | DIST1: Distance values of first pulse<br>DIST2: Distance values of second pulse<br>DIST3: Distance values of third pulse<br>DIST4: Distance values of fourth pulse<br>DIST5: Distance values of fifth pulse<br>RSSI1: Energy values of first pulse<br>RSSI2: Energy values of second pulse<br>RSSI3: Energy values of third pulse<br>RSSI4: Energy values of forth pulse<br>RSSI5: Energy values of fifth pulse | 44 49 53 54 31<br>44 49 53 54 32<br>44 49 53 54 33<br>44 49 53 54 34<br>44 49 53 54 35<br>52 53 53 49 31<br>52 53 53 49 32<br>52 53 53 49 33<br>52 53 53 49 34<br>52 53 53 49 35 |                        |
|   |             | TiMxxx                                     |        | DIST1: Distance values  | 44 49 53 54 31   |                        |
|   |             | MRS 1000<br>LMS 1000                       |        | DIST1: Distance values<br>DIST2: Distance values<br>DIST3: Distance values<br>RSSI1: Energy values<br>RSSI2: Energy values<br>RSSI3: Energy values  | 44 49 53 54 31<br>44 49 53 54 32<br>44 49 53 54 33<br>52 53 53 49 31<br>52 53 53 49 32<br>52 53 53 49 33   |                        |
|   |             | MRS600 0                                   |        | DIST1: Distance values<br>DIST2: Distance values<br>DIST3: Distance values<br>DIST4: Distance values<br>RSSI1: Energy values<br>RSSI2: Energy values<br>RSSI3: Energy values<br>RSSI4: Energy values<br>VANGL: Vertical Angle   | 44 49 53 54 31<br>44 49 53 54 32<br>44 49 53 54 33<br>44 49 53 54 34<br>52 53 53 49 31<br>52 53 53 49 32<br>52 53 53 49 33<br>52 53 53 49 34<br>56 41 4E 47 4C                   |                        |
|   |             | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx |        | DIST1: Distance values<br>RSSI1: Energy values  | 44 49 53 54 31<br>52 53 53 49 31   |                        |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |  |                                    |        |  |   |  |
|---|--|------------------------------------|--------|--|---|--|
| Telegram part                                       | Description  | Variable                           | Length | Sensor   | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
|   |  |                                    |        | LMS 4000   | DIST1: Distance values<br>RSSI1: Energy values in digit<br>REFL1: Calibrated energy values in percent<br>ANGL1: Angle Offset values | 44 49 53 54 31<br>52 53 53 49 31<br>52 45 46 4C 31<br>41 4E 47 4C 31 |
| Scale factor  | Scale factor or factor of the measurement values (for the LMS5xx this depends on the angular resolution) | Real as float according to IEEE754 | 4      | LMS1xx<br>LMS5xx<br>TiMxxx<br>MRS 1000<br>LMS 1000 | Factor × 1: 3F800000h<br>Factor × 2: 40000000h  | 3F 80 00 00<br>40 00 00 00   |
|   |  |                                    |        | MRS 6000   | Factor × 12.5: 41480000h<br>Factor × 1: 3F800000h<br>Factor × -0.00025: B983126Fh   | 41 48 00 00<br>3F 80 00 00<br>B9 83 12 6F                            |
|   |  |                                    |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx         | Factor × 4: 40800000h   | 04 08 00 00  |
|   |  |                                    |        | LMS 4000   | Factor × 0.1: 3DCCCDDh (DIST1)<br>Factor × 1: 3F800000h (RSSI1)<br>Factor × 1: 3F800000h (REFL1)<br>Factor × 1: 3F800000h (ANGL1)   | 3D CC CC CD<br>3F 80 00 00<br>3F 80 00 00<br>3F 80 00 00             |
| Scale factor offset                                 | Sets starting point of measurement   | Real as float according to IEEE754 | 4      | LMS1xx<br>LMS5xx<br>TiMxxx<br>MRS 1000<br>LMS 1000 | 00000000h   | 00 00 00 00  |
|   |  |                                    |        | MRS6000  | Offset 0 : 00000000<br>Offset 1.5: 3FC00000<br>(1.5 offset for VANGL)   | 00 00 00 00<br>3F C0 00 00<br>(1.5 offset for VANGL)                 |
|   |  |                                    |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx         | 00000000h ... FFFFFFFFh   | 00 00 00 00 ... FF FF FF FF  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |  |          |        |  |   |  |
|---|--|----------|--------|--|---|--|
| Telegram part                                       | Description                                    | Variable | Length | Sensor                                     | Values CoLa A (ASCII)   | Values CoLa B (Binary)                                   |
|   |  |          |        | LMS 4000                                   | DIST1: 0000000h<br>RSSI1: 0000000h<br>REFL1: 0000000h<br>ANGL1: C700000h (-32768)           | 00 00 00 00<br>00 00 00 00<br>00 00 00 00<br>C7 00 00 00 |
| Start angle   | [1/10000°]                                     | Uint_32  | 4      | LMS1xx                                     | -450000d ... +2250000d (FFF92230h ... 225510h)  | FF F9 22 30 ... 00 22 55 10                              |
|   |  |          |        | LMS5xx                                     | -50000d ... +1850000d (FFFFF3CB0h ... 1C3A90h)  | FF FF 3C B0 ... 00 1C 3A 90                              |
|   |  |          |        | MRS 1000                                   | -475000d ... +2275000d (FFF8C088h ... 22B6B8h)  | FF F8 C0 88 ... 00 22 B6 B8                              |
|   |  |          |        | LMS 1000                                   | -480000d ... +2280000d (FFF8AD00h ... 22CA40h)  |  |
|   |  |          |        | MRS 6000                                   | +30000d...+1500000d (493E0h ... 16E360h)  | 00 04 93 E0h ...<br>00 16 E3 60h                         |
|   |  |          |        | NAV310<br>LD-OEM<br>15x1<br>LD-LRS<br>36x1 | 0d ... +3600000d (0h ... 36EE80h)   | 00 00 00 00 ... 00 36 EE 80                              |
|   |  |          |        | LD-OEM<br>15x0<br>LD-LRS<br>36x0           | -900000d ... +2700000d (FFF24460h ... 41EB0h)   | FF F2 44 60 ... 00 04 1E B0                              |
|   |  |          |        | LMS 4000                                   | +550000d... +1250000d (86470h ... 1312D0h)  | 00 08 64 70 ...<br>00 13 12 D0                           |
| Size of single angular step                         | Output format in degree: 1/10000°              | Uint_16  | 2      | LMS1xx                                     | +2500d ... +5000d (9C4h ... 1388h)  | 09 C4 ... 13 88  |
|   |  |          |        | LMS5xx                                     | +1667d ... +10000d (683h ... 2710h)   | 06 83 ... 27 10  |
|   |  |          |        | TiMxxx                                     | +333d ... +10000d (D05h ... 2710h)  | 0D 05 ... 27 10  |
|   |  |          |        | MRS 1000                                   | +2500d (9C4h)   | 09 C4  |
|   |  |          |        | LMS 1000                                   | +7500d (1D4Ch)  |  |
|   |  |          |        | MRS 6000                                   | +1300d (= 0.13°) (514h)   | 05 14  |
|   |  |          |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | 0.125° ... 1° def. 0.25°<br>+1250d ... +10000d (4E2h ... 2710h)<br>(Default: 09C4h = 0.25°) | 04 E2 ... 27 10<br>(Default: 09 C4)                      |
|   |  |          |        | LMS 4000                                   | 0.0833°: +833 (341h)  | 0.0833°: 03 41   |
| Amount of data                                      | Defines the number of items on measured output | Uint_16  | 2      | All  | 0000h ... FFFFh   | 00 00 ... FF FF  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |   |          |        |  |   |  |
|---|---|----------|--------|--|---|--|
| Telegram part                                       | Description   | Variable | Length | Sensor                                     | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
| Data_1<br>Data_n                                    | Data stream starting Data_1 to Data_n <sup>4)</sup> | Uint_16  | 2      | LMS100                                     | 0000h ... 4E20h   | 00 00 00 00 ... 00 00 4E 20  |
|   |   |          |        | LMS150                                     | 0000h ... C350h   | 00 00 00 00 ... 00 00 C3 50  |
|   |   |          |        | LMS5xx                                     | 0000h ... FDE8h   | 00 00 00 00 ... 00 00 FD E8  |
|   |   |          |        | TiMxxx                                     | 0000h ... 61A8h   | 00 00 00 00 ... 00 00 61 A8  |
|   |   |          |        | MRS 1000                                   | 0000h ... FA00h   | 00 00 00 00 .. 00 00 FA 00   |
|   |   |          |        | LMS 1000                                   |   |  |
|   |   |          |        | MRS 6000                                   | 0000h...8CA0h(DIST)<br>0000h...FFFFh(RSSI)<br>00EDh...F5B2h(VANGL)                              | 00 00...8C A0 (DIST)<br>00 00...FF FF (RSSI)<br>00 ED...F5 B2 (VANGL)    |
|   |   |          |        | LMS 4000                                   | 0000h...C4Eh (DIST1)<br>0000h...FFFFh (RSSI1)<br>0000h...FFFFh (REFL1)<br>0000h...FFFFh (ANGL1) | 00 00 ... 0C 4E<br>00 00 ... FF FF<br>00 00 ... FF FF<br>00 00 ... FF FF |
|   |   |          |        | NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | 0000h ... 0992h   | 00 00 00 00 ... 00 00 09 92  |

For NAV310/LD-OEM15xx/LRS:

The array "Output channel 16 bit" has various dimensions "Amount of 16 Bit Channels", depending on the amount of sectors and if RSSI (output of remission values) is selected as on or off:

- If RSSI was not selected (by LMDscandatacfg); there are 2 channels with the contents
  - Channel 1: First sector (Test target), content: DIST1
  - Channel 2: Second sector (Main profile data), content: DIST1
- If RSSI was selected (by LMDscandatacfg); there are 4 channels with the contents
  - Channel 1: First sector (Test target), content: DIST1
  - Channel 2: First sector (Test target), content: RSSI1
  - Channel 3: Second sector (Main profile data), content: DIST1
  - Channel 4: Second sector (Main profile data), content: RSSI1

The number behind DIST and RSSI is the order number of the pulse. As the NAV310/LD-OEM15xx/LD-LRS36xx scanner are working with a single pulse measurement, it is always "1".

|                                 |  |         |   |                      |                         |                           |
|---------------------------------|--|---------|---|----------------------|-------------------------|---------------------------|
| <b>Amount of 8 bit channels</b> | Amount of 8 bit channels, giving out the measured data | Enum_16 | 2 | LMS1xx               | Output channels: 1 or 2 | Output channels: 01 or 02 |
|                                 |  |         |   | LMS5xx               | Output channels: 1 or 5 | Output channels: 01 or 05 |
|                                 |  |         |   | MRS 1000<br>LMS 1000 | Output channels: 1 or 3 | Output channels: 01 or 03 |

<sup>4)</sup> LMS1xx without limit.

| Telegram structure: sRA LMDscandata/sSN LMDscandata |   |                                    |        |  |  |  |
|---|---|------------------------------------|--------|--|--|--|
| Telegram part                                       | Description   | Variable                           | Length | Sensor   | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
|   |   |                                    |        | TiMxxx<br>NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx<br>MRS<br>6000<br>LMS<br>4000 | Output channels: 0   | Output channels: 00  |
| Output channel (8 bit)                              | Content<br><br>Defines the content of the output channel                                | String                             | 5      | LMS1xx   | DIST1<br>DIST2<br>RSSI1<br>RSSI2   | 44 49 53 54 31<br>44 49 53 54 32<br>52 53 53 49 31<br>52 53 53 49 32   |
|   |   |                                    |        | LMS5xx<br>(with Software<br>≥V1.10<br>only)  | DIST1<br>DIST2<br>DIST3<br>DIST4<br>DIST5<br>RSSI1<br>RSSI2<br>RSSI3<br>RSSI4<br>RSSI5 | 44 49 53 54 31<br>44 49 53 54 32<br>44 49 53 54 33<br>44 49 53 54 34<br>44 49 53 54 35<br>52 53 53 49 31<br>52 53 53 49 32<br>52 53 53 49 33<br>52 53 53 49 34<br>52 53 53 49 35 |
|   |   |                                    |        | TiMxxx   | DIST1<br>RSSI1   | 44 49 53 54 31<br>52 53 53 49 31   |
|   |   |                                    |        | MRS<br>1000<br>LMS<br>1000   | DIST1<br>DIST2<br>DIST3<br>RSSI1<br>RSSI2<br>RSSI3<br>AINF1 (Ambient light)            | 44 49 53 54 31<br>44 49 53 54 32<br>44 49 53 54 33<br>52 53 53 49 31<br>52 53 53 49 32<br>52 53 53 49 33<br>41 49 4E 46 31   |
| Scale factor  | Scale factor or of the measurement values (in LMS5xx depends on the angular resolution) | Real as float according to IEEE754 | 4      | All  | Factor × 1: 3F80000h<br>Factor × 2 (values have to be scaled by factor two): 40000000h | 3F 80 00 00<br>40 00 00 00   |
| Scale factor offset                                 | Sets starting point of measurement  | Real as float according to IEEE754 | 4      | LMS1xx<br>LMS5xx<br>MRS<br>1000<br>LMS<br>1000                                     | 0000000h   | 00 00 00 00  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |                                       |  |        |                      |   |   |
|---|---------------------------------------|--|--------|----------------------|---|---|
| Telegram part                                       | Description                           | Variable                               | Length | Sensor               | Values CoLa A (ASCII)   | Values CoLa B (Binary)                                    |
| Start angle   | Output format:<br>1/10000°            | Int_32                                 | 4      | LMS1xx               | -450000d ... +2250000d  | FF F9 22 30 ... 00 22 55 10                               |
|   |                                       |  |        | LMS5xx               | -50000d ... 1850000d  | FF FF 3C B0 ... 00 1C 3A 90                               |
|   |                                       |  |        | LMS 1000             | -480000d ... +2280000d<br>(FFF8AD00h ... 22CA40h)   |   |
|   |                                       |  |        | MRS 1000             | -475000d ... +2275000d<br>(FFF8C088h ... 22B6B8h)   | FF F8 C0 88 ... 00 22 B6 B8                               |
| Size of single angular step                         | Output format:<br>1/10000°            | Uint_16                                | 2      | LMS1xx               | +1000d ... +10000d  | 03 E8 ... 27 10   |
|   |                                       |  |        | LMS5xx               | +1667d ... +10000d  | 06 83 ... 27 10   |
|   |                                       |  |        | LMS 1000             | +7500d (1D4Ch)  |   |
|   |                                       |  |        | MRS 1000             | +2500d (9C4h)   | 09 C4   |
| Amount of data                                      | Amount                                | Uint_16                                | 2      | All                  | 0000h ... FFFFh   | 00 00 ... FF FF   |
| Data_1<br>Data_n                                    | Data stream starting Data_1 to Data_n | Uint_8                                 | 1      | All                  | 00h ... FFh   | 00 ... FF   |
|   |                                       |  |        | MRS 1000<br>LMS 1000 | DIST & RSSI: 00h ... FFh<br>AINF (Intensity):<br>0: 00<br>1: 04<br>2: 08<br>3: 0C<br>4: 10<br>5: 14<br>6: 18<br>7: 1C | 00 ... FF<br>00<br>04<br>08<br>0C<br>10<br>14<br>18<br>1C |
| Position  | Output of position data               | Enum_16                                | 2      | All                  | No position data: 0<br>Position data: 1   | No position data: 00 00<br>Position data: 00 01           |
| Position information                                | X position                            | X-coordinate as float acco. to IEEE754 | Real   | 4                    | All   | 0h ... FFFFFFFFh  |
|   | Y position                            | Y-coordinate as float acco. to IEEE754 | Real   | 4                    | All   | 0h ... FFFFFFFFh  |
|   | Z position                            | Z-coordinate as float acco. to IEEE754 | Real   | 4                    | All   | 0h ... FFFFFFFFh  |
|   | X rotation                            | X rotation in the coordinate system    | Real   | 4                    | All   | 0h ... FFFFFFFFh  |
|   | Y rotation                            | Y rotation in the coordinate system    | Real   | 4                    | All   | 0h ... FFFFFFFFh  |
|   | Z rotation                            | Z rotation in the coordinate system    | Real   | 4                    | All   | 0h ... FFFFFFFFh  |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |                              |   |         |        |   |  |
|---|------------------------------|---|---------|--------|---|--|
| Telegram part                                       | Description                  | Variable                                | Length  | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                               |
| Rotations type                                      | Kind of rotation             | Enum_8                                  | 1       | All    | No rotation: 0<br>Pitch: 1<br>Roll: 2<br>Free: 3                  | No rotation: 00<br>Pitch: 01<br>Roll: 02<br>Free: 03 |
|   | Transmits the name of device | Uint_8                                  | 1       | All    | No name: 0<br>Name: 1   | No name: 00<br>Name: 01                              |
| <b>Name</b>   |                              | Device name                             | Uint_16 | 2      | All   | No name: 0<br>Name: 1                                |
| Name information                                    | Length                       | Length of name                          | Uint_8  | 1      | All   | 0h ... Fh  |
|   | Name                         | Device name in characters               | String  | 16     | All   | 20h ... 7Ah  |
| <b>Comment</b>                                      |                              | Comment                                 | Uint_16 | 2      | All   | No comment: 0<br>Comment: 1                          |
| Comment information                                 | Length                       | Length of comment                       | Uint_8  | 1      | All   | 0h ... Fh  |
|   | Comment                      | Transmits a comment in characters       | String  | 16     | All   | 20h ... 7Ah  |
| <b>Time</b>   |                              | Transmits a time stamp                  | Uint_16 | 2      | All   | No time: 0   |
|   |                              |   |         |        | LMS1xx,<br>LMS5xx,<br>NAV310,<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx | Time: 1  |
| Time info   | Year                         |   | Uint_16 | 2      | All   | 0000h ... 270Fh                                      |
|   | Month                        | 1 to 12                                 | Uint_8  | 1      | All   | 00h ... 0Ch  |
|   | Day                          | Day of month 1 to 31                    | Uint_8  | 1      | All   | 00h ... 1Fh  |
|   | Hour                         | 0 to 23                                 | Uint_8  | 1      | All   | 00h ... 17h  |
|   | Minute                       | 0 to 59                                 | Uint_8  | 1      | All   | 00h ... 3Bh  |
|   | Second                       | 0 to 59                                 | Uint_8  | 1      | All   | 00h ... 3Bh  |
|   | Micro-second                 | 0 to 999999                             | Uint_32 | 4      | All   | 00000000h ... 000F423Fh                              |
| <b>Event info</b>                                   |                              | Display event info                      | Uint_16 | 2      | All   | No info: 0<br>Transmit info: 1                       |
| Event Information                                   | Type                         | Fast digital input                      | String  | 4      | All   | FDIN   |
|   | Encoder position             | Position of encoder when event happened | Uint_32 | 4      | All   | 00000000h ... FFFFFFFFh                              |

| Telegram structure: sRA LMDscandata/sSN LMDscandata |  |          |        |        |                         |                             |
|---|--|----------|--------|--------|-------------------------|-----------------------------|
| Telegram part                                       | Description                                    | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)      |
| Time of event                                       | Time ( $\mu$ s) of encoder when event happened | Uint_32  | 4      | All    | 00000000h ... FFFFFFFFh | 00 00 00 00 ... FF FF FF FF |
| Angle of event                                      | Angle of encoder when event happened           | Int_32   | 4      | All    | 0 ... 3600000           | 00 00 00 00 ... 00 36 EE 80 |

Table 128: Telegram structure: Datastream of sRA LMDscandata/sSN LMDscandata



### NOTE

- The grey written parts are not given out by the sensor.
- The event information is not available with the LMS1xx and with the LMS5xx only with firmware V1.20 or higher.
- The order of events within the data structure is “newest” first.

### LMDscandata - reserved values

Valid distance measurement values are values starting from 16d upwards; everything below has the following meaning:

| DIST     | RSSI  | Description  |
|----------|---|--|
| 0d       | 0h  | no meas value detected; means that in the angle, there was no valid measurement value. Probably the object to measure was out of the range of the or the object was reflecting too less light back (black objects) |
| 1d       | FFFFh<br>(16Bit output)<br><br>FFh<br>(8Bit output) | dazzled, blinded   |
| 2d       | 0h  | implausible measurement values   |
| 3d       | 0h  | value was set to invalid by a filter (Echo Filter, Particle Filter in old firmware)  |
| 4d – 15d | 0h  | reserved, at the moment not given out, if there occurs a value in that range anyway → perform a Softwareupdate   |
| ≥16d     | >0h   | valid measurement values   |

Valid for LMS1xx/5xx, TiMxxx

max. measurement value TiM5xx: Dez: 10.000mm --> Hex: 2710  
max. measurement value TiM57x: Dez: 25.000mm --> Hex: 61A8  
max. measurement value LMS1xx: Dez: 20.000mm --> Hex: 4E20  
max. measurement value LMS15x: Dez: 50.000mm --> Hex: C350  
max. measurement value LMS5xx: Dez: 65.000mm --> Hex: FDE8  
max. measurement value LMS5xx: Dez: 80.000mm --> Hex: 9C40 with scale factor 2 --> 13880

Higher measurement values will be given out with a zero, that means no measurement value detected.

### Calculation and amount of data for LMS5xx

Example how to calculate the amount of data for a measurement telegram.

Sizes of values and telegram parts:

- one measurement value: 5 byte (4 byte value itself, 1 byte blank after the value)
- one RSSI value: 3 byte (2 byte value itself, 1 byte blank after the value)
- telegram header: 81 byte
- telegram end: 12 byte

Calculation of number of Measurement values depends always on the resolution:

$0.5^\circ = 2$  measurements per degree

$0.25^\circ = 4$  measurements per degree

Always one additional measurement for the last measurement

*Number of measurement values =*

*Number of degrees × measurements per degree + 1*

Example for measurement of  $56^\circ$  in  $0.5^\circ$  resolution (without RSSI data):

$56 \times 2 + 1 = 113$  Measurement values

Amount of Data for this measurement values:

$113 \times 5 \text{ Byte} = \underline{565 \text{ Byte}}$

Calculation of amount of data per telegram:

*Data of one Telegram = Header + Measurements + end of telegram*

81 Byte + 113 Measurements + 12 Byte

$81 \text{ Byte} + (113 \times 5 \text{ Byte}) + 12 \text{ Byte} =$

658 Byte per Telegram (= 5264 Bit (658 × 8 Bit))

Possible amount for delivery with special Speed:

*Number of telegrams per second = Speed ÷ telegram size*

Speed Example:

$115200 \text{ Bit/s} = 11520 \text{ Byte/s} = 11,52 \text{ Byte/s}$

$11520 (\text{Byte/s}) \div 658 \text{ Byte} = \underline{17.5 \text{ Telegrams/s}}$

Telegram size with **0,25°** resolution:

Degrees:  $270^\circ$

Resolution:  $0.25^\circ$

→ Measurement Values =  $270 \times 4 + 1 = 1081$

Data per Telegram =

$$81 \text{ Byte} + (1081 \times 5 \text{ Byte}) + 12 \text{ Byte} = \underline{\underline{5498 \text{ Byte}}} (= 43984 \text{ Bit})$$

Telegram size with **0,5 °** resolution:

Degrees: 270 °

Resolution: 0.5 °

$$\rightarrow \text{Measurement Values} = 270 \times 2 + 1 = 541$$

Data per Telegram =

$$81 \text{ Byte} + (541 \times 5 \text{ Byte}) + 12 \text{ Byte} = \underline{\underline{2798 \text{ Byte}}} (= 22384 \text{ Bit})$$

As a result in that configuration a 10 MBit connection will not be enough. With a 100 MBit Hub, 3-4 scanner can be used, with a 1 GBit Hub accordingly more.

### Example of a telegram stream

**Example:** telegram LMS1xx, LMS5xx similar with corresponding values (10 °-20 ° data range)

### ASCII

```
<STX>sRA{SPC}LMDscandata{SPC}1{SPC}1{SPC}89A27F{SPC}0{SPC}0{SPC}343{SPC}347{SPC}2
7477BA9{SPC}2747813B{SPC}0{SPC}0{SPC}7{SPC}0{SPC}0{SPC}1388{SPC}168{SPC}0{SPC}1{SP
PC}DIST1{SPC}3F800000{SPC}00000000{SPC}186A0{SPC}1388{SPC}15{SPC}8A1{SPC}8A5{SP
C}8AB{SPC}8AC{SPC}8A6{SPC}8AC{SPC}8B6{SPC}8C8{SPC}8C2{SPC}8C9{SPC}8CB{SPC}8C4{SP
C}8E4{SPC}8E1{SPC}8EB{SPC}8E0{SPC}8F5{SPC}908{SPC}8FC{SPC}907{SPC}906{SPC}0{SPC}0
{SPC}0{SPC}0{SPC}0{SPC}<ETX>
```

### BINARY

```
02 02 02 02 00 00 00 83 73 52 41 20 4C 4D 44 73 63 61 6E 64 61 74 61 20 00 01 00 01
00 89 A2 7F 00 00 03 43 03 47 27 47 7B A9 27 47 81 3B 00 00 07 00 00 00 00 00 13 88 00
00 01 68 00 00 00 01 44 49 53 54 31 3F 80 00 00 00 00 00 00 01 86 A0 13 88 00 15 08
93 08 95 08 AF 08 B3 08 B0 08 A4 08 B0 08 BF 08 B9 08 BA 08 D0 08 D3 08 CF 08 DE 08 EB
08 E3 08 FE 08 EC 09 03 08 FD 08 FD 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 2B
```



| Telegram structure: sRA LMDscandata (Example) |          |        |                       |                                     |
|---|----------|--------|-----------------------|-------------------------------------|
| Telegram part                                 | Variable | Length | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Frame/header                                  |          |        | 02<br><STX>           | 02 02 02 02                         |
| Length  |          |        |                       | 00 00 00 83                         |
| Command type                                  | String   | 3      | sRA{SPC}              | 73 52 41 20                         |
| Command                                       | String   | 11     | LMDscandata{SPC}      | 4C 4D 44 73 63 61 6E 64 61 74 61 20 |
| Version number                                | Uint_16  | 2      | 1{SPC}                | 00 01                               |
| Device number                                 | Uint_16  | 2      | 1{SPC}                | 00 01                               |

| Telegram structure: sRA LMDscandata (Example) |                                      |          |        |   |   |
|---|--------------------------------------|----------|--------|---|---|
| Telegram part                                 |                                      | Variable | Length | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
|   | Serial number                        | Uint_32  | 4      | 89A27F{SPC}<br>Dec: 9020031   | 00 89 A2 7F   |
|   | Device status                        | Uint_8   | 2 × 1  | 0{SPC}0{SPC}  | 00 00   |
| Status information                            | Telegram counter                     | Uint_16  | 2      | 343{SPC}<br>Dec: 835  | 03 43   |
|   | Scan counter                         | Uint_16  | 2      | 347{SPC}<br>Dec: 839  | 03 47   |
|   | Time since start up<br>[μs]          | Uint_32  | 4      | 27477BA9{SPC}<br>Dec: 658996137   | 27 47 7B A9   |
|   | Time of transmission<br>[μs]         | Uint_32  | 4      | 2747813B{SPC}<br>Dec: 568997563   | 27 47 81 3B   |
|   | Status of digital inputs             | Uint_8   | 2 × 1  | 0{SPC}0{SPC}  | 00 00   |
|   | Status of digital outputs            | Uint_8   | 2 × 1  | 7{SPC}0{SPC}<br>Corresponds to status 0111  | 07 00   |
|   | Reserved                             | Uint_16  | 2      | 0{SPC}  | 00 00   |
| Frequencies                                   | Scan frequency                       | Uint_32  | 4      | 1388{SPC}<br>Dec: 50 Hz: 5000   | 00 00 13 88   |
|   | Measurement frequency                | Uint_32  | 4      | 168{SPC}  | 00 00 01 68   |
| Amount of encoder                             |                                      | Enum_16  | 2      | 0{SPC}<br>No encoder data   | 00 00   |
| Position information                          | Encoder position                     | Uint_16  | 2      | Not generated, not existing because amount is 0   | Not generated, not existing because amount is 0   |
|   | Encoder speed                        | Uint_16  | 2      | Not generated, not existing because amount is 0   | Not generated, not existing because amount is 0   |
| Amount of 16 bit channels                     |                                      | Enum_16  | 2      | 1{SPC}  | 00 01   |
| Output channel (16 bit)                       | Content                              | String   | 5      | DIST1{SPC}  | 44 49 53 54 31  |
|   | Scale factor according to IEEE754    | Real     | 4      | 3F800000{SPC}<br>Floating Point: Value = 1  | 3F 80 00 00   |
|   | Scale factor offset acco. to IEEE754 | Real     | 4      | 0{SPC}<br>Floating Point: Value = 0   | 00 00 00 00   |
|   | Start angle                          | Int_32   | 4      | 186A0{SPC}<br>Dec: 100000   | 00 01 86 A0   |
|   | Size of single angular step          | Uint_16  | 2      | 1388{SPC}<br>Dec: 5000  | 13 88   |
|   | Amount of data                       | Uint_16  | 2      | 15{SPC}<br>Dec: 21 measurement points   | 00 15   |
|   | Data_1 ... Data_21                   | Uint_16  | 2      | 8A1{SPC}8A5{SPC}8AB{SPC}8AC{SPC}8A6{SPC}8AC{SPC}8B6{SPC}8C8{SPC}8C2{SPC}8C9{SPC}8CB{SPC}8C4{SPC}8E4{SPC}8E1{SPC}8EB{SPC}8E0{SPC}8F5{SPC}908{SPC}8FC{SPC}907{SPC}906{SPC}<br><br>Measurement data<br>Min. 22 mm: 16h<br>Max. 20000 mm: 4E20h | 08 A1 08 A5 08 AB 08 AC 08 A6 08 AC 08 B6 08 C8 08 C2 08 C9 08 CB 08 C4 08 E4 08 E1 08 EB 08 E0 08 F5 09 08 08 FC 09 07 09 06 |

| Telegram structure: sRA LMDscandata (Example) |                              |         |                            |                           |
|---|------------------------------|---------|----------------------------|---------------------------|
| Telegram part                                 | Variable                     | Length  | Values CoLa A (ASCII)      | Values CoLa B (Binary)    |
| Amount of 8 bit channels                      | Enum_16                      | 2       | 0{SPC}<br>No 8 bit data    | 00 00<br>No 8 bit data    |
| Output channel (8 bit)                        | Content                      | String  | 5                          | -                         |
|   | Scale factor                 | Real    | 4                          | -                         |
|   | Scale factor offset          | Real    | 4                          | -                         |
|   | Start angle                  | Int_32  | 4                          | -                         |
|   | Size of single angular step  | Uint_16 | 2                          | -                         |
|   | Amount of data               | Uint_16 | 2                          | -                         |
|   | Data_1<br>Data_n             | Uint_8  | 1                          | -                         |
| Position                                      | Enum_16                      | 2       | 0{SPC}<br>No position data | 00 00<br>No position data |
| Position information                          | X position                   | Real    | 4                          | -                         |
|   | Y position                   | Real    | 4                          | -                         |
|   | Z position                   | Real    | 4                          | -                         |
|   | X rotation                   | Real    | 4                          | -                         |
|   | Y rotation                   | Real    | 4                          | -                         |
|   | Z rotation                   | Real    | 4                          | -                         |
|   | Rotations type               | Enum_8  | 1                          | -                         |
|   | Transmits the name of device | Uint_8  | 1                          | -                         |
| Name  | Enum_16                      | 2       | 0{SPC}<br>No device name   | 00 00<br>No device name   |
| Name info                                     | Length of name               | Enum_8  | 1                          | -                         |
|   | Name in characters           | String  | 2                          | -                         |
| Comment                                       | Enum_16                      | 2       | 0{SPC}<br>No comment       | 00 00<br>No comment       |
| Comment                                       | Length of comment            | Enum_8  | 1                          | -                         |
|   | Comment in characters        | String  | 2                          | -                         |

| Telegram structure: sRA LMDscandata (Example) |                  |          |        |                                   |
|---|------------------|----------|--------|-----------------------------------|
| Telegram part                                 |                  | Variable | Length | Values CoLa A (ASCII)             |
| Time  |                  | Enum_16  | 2      | 0[SPC]<br>No time transmitted     |
| Time info                                     | Year             | Uint_16  | 2      | -                                 |
|   | Month            | Uint_8   | 1      | -                                 |
|   | Day              | Uint_8   | 1      | -                                 |
|   | Hour             | Uint_8   | 1      | -                                 |
|   | Minute           | Uint_8   | 1      | -                                 |
|   | Second           | Uint_8   | 1      | -                                 |
|   | Microsecond      | Uint_32  | 4      | -                                 |
| Event info                                    |                  | Enum_16  | 2      | 0[SPC]<br>No event info available |
| Event information                             | Type             | String   | 4      | -                                 |
|   | Encoder position | Uint_32  | 4      | -                                 |
|   | Time of event    | Uint_32  | 4      | -                                 |
|   | Angle of event   | Int_32   | 4      | -                                 |
| Frame   |                  |          |        | 03<br><ETX>                       |
|   |                  |          |        | 2B<br>Checksum                    |

Table 129: Example of one telegram stream

## 4.4 Time stamp

### 4.4.1 Set time stamp

The data format in the telegram is:

+2009{SPC}+7{SPC}+22{SPC}+12{SPC}+0{SPC}+0{SPC}+0.

The numbers represent year, month, day, hour, minute, second, microsecond).

If plus is used up-front the data is interpreted as an integer decimal number, without the plus it's the scanner reads the data as hex format.

The answer is always in ASCII format.

Attention: There is no real time clock inside the device. When the scanner is switched off and after a reboot, the time has to be set again.

However, it is possible to analyze the Off-time in order to evade this issue.



| Telegram structure: sMN LSPsetdatetime<br>(Authorized client) |                |          |        |        |   |   |
|---|----------------|----------|--------|--------|---|---|
| Telegram part   | Description    | Variable | Length | Sensor | Values CoLa A (ASCII)                                       | Values CoLa B (Binary)                    |
| Command type  | Method         | String   | 3      | All    | sMN   | 73 4D 4E                                  |
| Command   | Set time stamp | String   | 14     | All    | LSPsetdatetime  | 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 |
| Year  |                | Uint_16  | 2      | All    | 1970d ... +2099d<br>(07B2h ... 0833h)                       | 07 b2 ... 08 33                           |
| Month   |                | Uint_8   | 1      | All    | 01d ... +12d<br>(01h ... 0Ch)                               | 01 ... 0C                                 |
| Day   |                | Uint_8   | 1      | All    | 01d ... +31d<br>(01h ... 1Fh)                               | 00 ... 1F                                 |
| Hour  |                | Uint_8   | 1      | All    | 00d ... +23d<br>(00h ... 17h)                               | 00 ... 17                                 |
| Minute  |                | Uint_8   | 1      | All    | 00d ... +59d<br>(00h ... 3Bh)                               | 00 ... 3B                                 |
| Second  |                | Uint_8   | 1      | All    | 00d ... +59d<br>(00h ... 3Bh)                               | 00 ... 3B                                 |
| Micro-second  |                | Uint_32  | 4      | All    | 00000000d ...<br>+00999999d<br>(00000000h ...<br>000F423Fh) | 00 00 00 00 ...<br>00 0F 42 3F            |

Table 130: Telegram structure: sMN LSPsetdatetime

**Example 1: sMN LSPsetdatetime**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN[SPC]LSPsetdatetime[SPC]7D9[SPC]2[SPC]11[SPC]10[SPC]22[SPC]0[SPC]0<ETX>                                      |
|        | Hex    | 02 73 4D 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 37 44 39 20 32 20 31 31 20 31 30 20 32 32 20 30 20 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 1E 73 4D 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 07 D9 02 11 10 22 00 00 00 00 00 A3 |

Table 131: Example 1: sMN LSPsetdatetime

**Example 2: sMN LSPsetdatetime**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]LSPsetdatetime[SPC]+2010[SPC]+01[SPC]+26[SPC]+10[SPC]+35[SPC]0[SPC]0<ETX>  |
|        | Hex    | 02 73 4D 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 2B 32 30 31 30 20 2B 30 31 20 2B 32 36 20 2B 31 30 20 2B 33 35 20 2B 30 30 20 2B 30 30 30 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 1E 73 4D 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 07 DA 01 1A 0A 23 00 00 00 00 00 A3  |

Table 132: Example 2: sMN LSPsetdatetime

**Telegram structure: sAN LSPsetdatetime**

| Telegram part | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
|---------------|----------------|----------|--------|--------|-----------------------|---|
| Command type  | Answer         | String   | 3      | All    | sAN                   | 73 41 4E                                  |
| Command       | Set time stamp | String   | 14     | All    | LSPsetdatetime        | 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 |
| Status code   | Code number    | Enum_8   | 1      | All    | Success: 1            | Success: 01                               |

Table 133: Telegram structure: sAN LSPsetdatetime

**Example 1, 2: sAN LSPsetdatetime**


|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN[SPC]LSPsetdatetime[SPC]1<ETX>   |
|        | Hex    | 02 73 41 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 41 4E 20 4C 53 50 73 65 74 64 61 74 65 74 69 6D 65 20 01 51 |

Table 134: Example 1, 2: sAN LSPsetdatetime

Activate time stamp in the output string format or on SOPAS page “data processing”.

### 4.4.2 Read time stamp and status of the measurement function

#### Command: sRN STlms

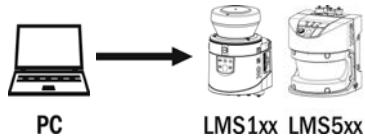

| Telegram structure: sRN STlms |                 |          |        |        |                       |                        |
|-------------------------------|-----------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                 | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                  | Read            | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                       | Status and time | String   | 5      | All    | STlms                 | 53 54 6C 6D 73         |


Table 135: Telegram structure: sRN STlms

#### Example: sRN STlms

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]STlms<ETX>                               |
|        | Hex    | 02 73 52 4E 20 53 54 6C 6D 73 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 09 73 52 4E 20 53 54 6C 6D 73 3A |

Table 136: Example: sRN STlms

#### Answer: sRA STlms

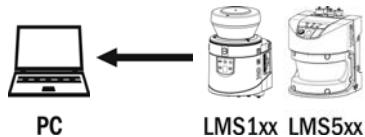

| Telegram structure: sRA STlms |                                      |          |        |        |   |   |
|-------------------------------|--------------------------------------|----------|--------|--------|---|---|
| Telegram part                 | Description                          | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type                  | Answer                               | String   | 3      | All    | sRA   | 73 52 41  |
| Command                       | Status and time                      | String   | 5      | All    | STlms   | 53 54 6C 6D 73  |
| Status code                   | Status of the measurement function.  | Enum_16  | 2      | All    | Undefined: 0<br>Initialization: 1<br>Configuration: 2<br>Lower case: 3<br>Rotating: 4<br>In preparation: 5<br>Ready: 6<br>Measurement active: 7 | Undefined: 00 00<br>Initialization: 00 01<br>Configuration: 00 02<br>Lower case: 00 03<br>Rotating: 00 04<br>In preparation: 00 05<br>Ready: 00 06<br>Measurement active: 00 07 |
| Temp. out of range            | Device running in temp. range or not | Uint_8   | 1      | All    | False (in range) = 0<br>True (out of range) = 1   | False (in range) = 00<br>True (out of range) = 01   |
| Length of time para-          |                                      | Uint_16  | 2      | All    | 0d ... +65535d (00h ... FFFFh)  | 00 00 ... FF FF   |

| Telegram structure: sRA STlms |             |          |        |        |                                   |                                  |
|-------------------------------|-------------|----------|--------|--------|-----------------------------------|----------------------------------|
| Telegram part                 | Description | Variable | Length | Sensor | Values CoLa A (ASCII)             | Values CoLa B (Binary)           |
| meter                         |             |          |        |        |                                   |                                  |
| Time                          | HH HH       | Uint_16  | 2      | All    | 0d ... 99d                        | 00 00 ... 00 63                  |
|                               | :           | Uint_8   | 1      | All    | :                                 | 3A                               |
|                               | MM MM       | Uint_16  | 2      | All    | 0d ... 99d                        | 00 00 ... 00 63                  |
|                               | :           | Uint_8   | 1      | All    | :                                 | 3A                               |
|                               | SS SS       | Uint_16  | 2      | All    | 0d ... 99d                        | 00 00 ... 00 63                  |
| Length of date parameter      |             | Uint_16  | 2      | All    | 0d ... +65535d<br>(00h ... FFFFh) | 00 00 ... FF FF                  |
| Date                          | DD DD       | Uint_16  | 2      | All    | 0d ... 99d                        | 00 00 ... 00 63                  |
|                               | .           | Uint_8   | 1      | All    | .                                 | 2E                               |
|                               | MM MM       | Uint_16  | 2      | All    | 0d ... 99d                        | 00 00 ... 00 63                  |
|                               | .           | Uint_8   | 1      | All    | .                                 | 2E                               |
|                               | YY YY YY YY | Uint_32  | 4      | All    | 0d ... 9999d                      | 00 00 00 00 ...<br>00 00 27 0F   |
| LED1                          |             | Uint_16  | 2      | All    | Inactive: 0<br>Active: 1          | Inactive: 00 00<br>Active: 00 01 |
| LED2                          |             | Uint_16  | 2      | All    | Inactive: 0<br>Active: 1          | Inactive: 00 00<br>Active: 00 01 |
| LED3                          |             | Uint_16  | 2      | All    | Inactive: 0<br>Active: 1          | Inactive: 00 00<br>Active: 00 01 |
| Reserved                      |             | Uint_16  | 3 × 2  | All    | 0 0 0                             | 00 00 00 00 00 00                |

Table 137: Telegram structure: sRA STlms

**Example: sRA STlms**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}STlms{SPC}7{SPC}0{SPC}8{SPC}16:36:54{SPC}10{SPC}17.03.2030{SPC}0{SPC}0{SPC}0<ETX>  |
| CoLa B | Hex    | Not available   |
| CoLa B | Binary | 02 02 02 02 00 00 00 2F 73 52 41 20 53 54 6C 6D 73 20 00 07 00 00 08 00 10 3A 00 24 3A 00 36 00 0A<br>00 11 2E 00 03 2E 00 00 07 EE 00 00 00 00 00 00 00 00 00 00 00 00 00 17 |

Table 138: Example: sRA STlms

### 4.4.3 Read device time

Command to read the actual time of the internal clock (ms).

The timer is 32 counter with a resolution of 1 ms.



| Telegram structure: sRN DeviceTime |             |          |        |        |                       |                               |
|------------------------------------|-------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Read        | String   | 3      | All    | sRN                   | 73 52 4E                      |
| Command                            |             | String   | 10     | All    | DeviceTime            | 44 65 76 69 63 65 54 69 6D 65 |

Table 139: Telegram structure: sRN DeviceTime

#### Example: sRN DeviceTime

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}DeviceTime<ETX>   |
|        | Hex    | 02 73 52 4E 20 44 65 76 69 63 65 54 69 6D 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 52 4E 20 44 65 76 69 63 65 54 69 6D 65 42 |

Table 140: Example: sRN DeviceTime



| Telegram structure: sRA DeviceTime |             |          |        |        |                              |                               |
|------------------------------------|-------------|----------|--------|--------|------------------------------|-------------------------------|
| Telegram part                      | Description | Variable | Length | Sensor | Values CoLa A (ASCII)        | Values CoLa B (Binary)        |
| Command type                       | Answer      | String   | 3      | All    | sRA                          | 73 52 41                      |
| Command                            |             | String   | 10     | All    | DeviceTime                   | 44 65 76 69 63 65 54 69 6D 65 |
| Device time                        | Time        | Uint_32  | 4      | All    | 0d ... +9999d (0h ... 270Fh) | 00 00 00 00 ... 00 00 27 0F   |

Table 141: Telegram structure: sRA DeviceTime

**Example: sRA DeviceTime 0**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}DeviceTime{SPC}0<ETX>   |
|        | Hex    | 0273 52 41 20 44 65 76 69 63 65 54 69 6D 65 20 00 03                             |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 52 41 20 44 65 76 69 63 65 54 69 6D 65 00 00 00 00 6D |

Table 142: Example: sRA DeviceTime 0

**4.4.4 Set NTP (Network Time Protocol) parameters****Set time synchronization**

| Telegram structure: sWN TSCRole<br>(Authorized client) |              |          |        |        |                                   |                                      |
|--|--------------|----------|--------|--------|-----------------------------------|--------------------------------------|
| Telegram part  | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)             | Values CoLa B (Binary)               |
| Command type   | Write        | String   | 3      | All    | sWN                               | 73 57 4E                             |
| Command  | Set NTP role | String   | 7      | All    | TSCRole                           | 54 53 43 52 6F 6C 65                 |
| Variable data  | NTP role     | Uint_8   | 1      | All    | None: 0<br>Client: 1<br>Server: 2 | None: 00<br>Client: 01<br>Server: 02 |

Table 143: Telegram structure: sWN TSCRole

**Example: sWN TSCRole**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}TSCRole{SPC}1<ETX>                                   |
|        | Hex    | 02 73 57 4E 20 54 53 43 52 6F 6C 65 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 57 4E 20 54 53 43 52 6F 6C 65 20 01 1B |

Table 144: Example: sWN TSCRole



| Telegram structure: sWA TSCRole |              |          |        |        |                       |                        |
|---------------------------------|--------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                   | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                    | Answer       | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                         | Set NTP role | String   | 7      | All    | TSCRole               | 54 53 43 52 6F 6C 65   |


Table 145: Telegram structure: sWA TSCRole

### Example: sWA TSCRole

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sWA[SPC]TSCRole<ETX>                                      |
|        | Hex    | 02 73 57 41 20 54 53 43 52 6F 6C 65 03                         |
| Cola B | Binary | 02 02 02 02 00 00 00 00 73 57 41 20 54 53 43 52 6F 6C 65 20 15 |

Table 146: Example: sWA TSCRole

### Set time synchronization interface

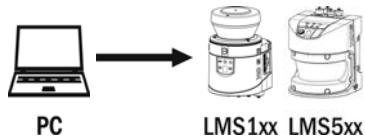


| Telegram structure: sWN TSCTInterface<br>(Authorized client) |                                     |          |        |        |                       |   |
|--|-------------------------------------|----------|--------|--------|-----------------------|---|
| Telegram part  | Description                         | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type   | Write                               | String   | 3      | All    | sWN                   | 73 57 4E                                  |
| Command  | Set time synchronization interface  | String   | 14     | All    | TSCTInterface         | 54 53 43 54 43 49 6E 74 65 72 66 61 63 65 |
| Variable data  | Time synchronization interface data | Uint_8   | 1      | All    | Ethernet: 0<br>CAN: 1 | Ethernet: 00<br>CAN: 01                   |

Table 147: Telegram structure: sWN TSCTInterface

### Example: sWN TSCTInterface

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sWN[SPC]TSCTInterface[SPC]0<ETX>  |
|        | Hex    | 02 73 57 4E 20 54 53 43 54 43 49 6E 74 65 72 66 61 63 65 20 30 03                      |
| Cola B | Binary | 02 02 02 02 00 00 00 14 73 57 4E 20 54 53 43 54 43 49 6E 74 65 72 66 61 63 65 20 00 7C |

Table 148: Example: sWN TSCTInterface

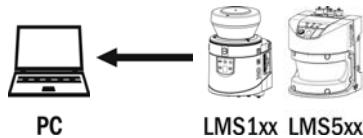

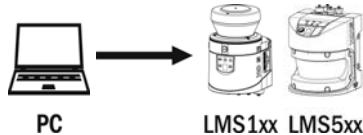
| Telegram structure: sWA TSCTInterface |                          |          |        |        |                       |  |
|---------------------------------------|--------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                         | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                          | Answer                   | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command                               | Set time synchronization | String   | 14     | All    | TSCTInterface         | 54 53 43 54 43 49 6E 74<br>65 72 66 61 63 65 |

Table 149: Telegram structure: sWA TSCTInterface

**Example: sWA TSCTInterface**

|        |        |   |
|--------|--------|---|
| Cola A | ASCII  | <STX>sWA{SPC}TSCTInterface<ETX>   |
|        | Hex    | 02 73 57 41 20 54 53 43 54 43 49 6E 74 65 72 66 61 63 65 03                         |
| Cola B | Binary | 02 02 02 02 00 00 00 13 73 57 41 20 54 53 43 54 43 49 6E 74 65 72 66 61 63 65 20 73 |

Table 150: Example: sWA TSCTInterface

**Set time server IP address**

| Telegram structure: sWN TSCTCSrvAddr<br>(Authorized client) |                            |          |        |        |   |  |
|---|----------------------------|----------|--------|--------|---|--|
| Telegram part   | Description                | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                 |
| Command type  | Write                      | String   | 3      | All    | sWN   | 73 57 4E                               |
| Command   | Set time server IP address | String   | 12     | All    | TSCTCSrvAddr  | 54 53 43 54 43 53 72 76<br>41 64 64 72 |
| IP address data   | Set values in hex          | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF         |

Table 151: Telegram structure: sWN TSCTCSrvAddr

**Example: sWN TSCTCSrvAddr 192.168.0.11**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]TSCTCSrvAddr[SPC]CO[SPC]A8[SPC]00[SPC]OB<ETX>                                |
|        | Hex    | 02 73 57 4E 20 54 53 43 54 43 53 72 76 41 64 64 72 20 CO A8 00 OB 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 57 4E 20 54 53 43 54 43 53 72 76 41 64 64 72 20 CO A8 00 OB 3E |

Table 152: Example: sWN TSCTCSrvAddr 192.168.0.11



**Telegram structure: sWA TSCTCSrvAddr**

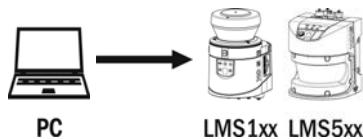
| Telegram part | Description                | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
|---------------|----------------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Command type  | Answer                     | String   | 3      | All    | sWA                   | 73 57 41                            |
| Command       | Set time server IP address | String   | 12     | All    | TSCTCSrvAddr          | 54 53 43 54 43 53 72 76 41 64 64 72 |

Table 153: Telegram structure: sWA TSCTCSrvAddr

**Example: sWA TSCTCSrvAddr**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]TSCTCSrvAddr<ETX>  |
|        | Hex    | 02 73 57 41 20 54 53 43 54 43 53 72 76 41 64 64 72 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 41 20 54 53 43 54 43 53 72 76 41 64 64 72 20 52 |

Table 154: Example: sWA TSCTCSrvAddr

**Set time zone**

| Telegram structure: sWN TSCTCtimezone<br>(Authorized client) |  |          |        |        |   |  |
|--|--|----------|--------|--------|---|--|
| Telegram part  | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)                         | Values CoLa B (Binary)                 |
| Command type   | Write  | String   | 3      | All    | sWN   | 73 57 4E                               |
| Command  | Set time zone  | String   | 13     | All    | TSCTCtimezone                                 | 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 |
| Time zone data   | Set values in number of hours relative to GMT, hex specially coded | Int_8    | 1      | All    | [GMT + ...]<br>-12d ... +12d<br>(00h ... 18h) | [GMT + ...]<br>00 ... 18               |

Table 155: Telegram structure: sWN TSCTCtimezone

**Example: sWN TSCTCtimezone GMT + 1 hour**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]TSCTCtimezone[SPC]+1<ETX>  |
|        | Hex    | 02 73 57 4E 20 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 20 0D 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 4E 20 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 20 0D 3F |

Table 156: Example: sWN TSCTCtimezone GMT + 1 hour



| Telegram structure: sWA TSCTCtimezone |               |          |        |        |                       |  |
|---------------------------------------|---------------|----------|--------|--------|-----------------------|--|
| Telegram part                         | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type                          | Answer        | String   | 3      | All    | sWA                   | 73 57 41                               |
| Command                               | Set time zone | String   | 13     | All    | TSCTCtimezone         | 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 |

Table 157: Telegram structure: sWA TSCTCtimezone

**Example: sWA TSCTCtimezone**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}TSCTCtimezone<ETX>  |
|        | Hex    | 02 73 57 41 20 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 57 41 20 54 53 43 54 43 74 69 6D 65 7A 6F 6E 65 20 3D |

Table 158: Example: sWA TSCTCtimezone

**Set update time**



**Telegram structure: sWN TSCTCupdatetime  
(Authorized client)**


| Telegram part                  | Description                        | Variable | Length | Sensor | Values CoLa A (ASCII)             | Values CoLa B (Binary)                       |
|--------------------------------|------------------------------------|----------|--------|--------|-----------------------------------|--|
| Command type                   | Write                              | String   | 3      | All    | sWN                               | 73 57 4E                                     |
| Command                        | Set update time of synchronization | String   | 15     | All    | TSCTCupdatetime                   | 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 |
| Update time of synchronization | Set values in seconds              | Uint_32  | 4      | All    | +1d ... +3600d<br>(01h ... 0E10h) | 00 00 00 00 ...<br>00 00 0E 10               |

Table 159: Telegram structure: sWN TSCTCupdatetime

**Example: sWN TSCTCupdatetime 600 s**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}TSCTCupdatetime{SPC}+600<ETX>   |
|        | Hex    | 02 73 57 4E 20 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 20 02 58 03                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 18 73 57 4E 20 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 20 00 00 02 58 67 |

Table 160: Example: sWN TSCTCupdatetime 600 s

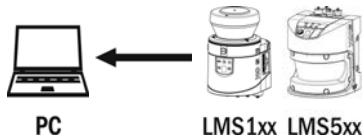

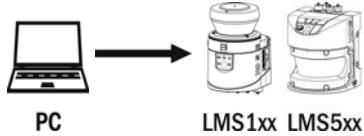
| Telegram structure: sWA TSCTCupdatetime |                                    |          |        |        |                       |  |
|---|------------------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                           | Description                        | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                            | Answer                             | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command                                 | Set update time of synchronization | String   | 15     | All    | TSCTCupdatetime       | 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 |

Table 161: Telegram structure: sWA TSCTCupdatetime

**Example: sWA TSCTCupdatetime**

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sWA{SPC}TSCTCupdatetime<ETX>  |
|        | Hex    | 02 73 57 41 20 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 03                         |
| Cola B | Binary | 02 02 02 02 00 00 00 14 73 57 41 20 54 53 43 54 43 75 70 64 61 74 65 74 69 6D 65 20 32 |

Table 162: Example: sWA TSCTCupdatetime

**Read for maximum offset time**


| Telegram structure: sRN TSCTCmaxoffset<br>(Authorized client) |                          |          |        |        |                       |  |
|---|--------------------------|----------|--------|--------|-----------------------|--|
| Telegram part   | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type  | Read                     | String   | 3      | All    | sRN                   | 73 52 4E                                     |
| Command   | Read maximum offset time | String   | 14     | All    | TSCTCmaxoffset        | 54 53 43 54 43 6D 61 78 6F 66 66 73 65 74 65 |

Table 163: Telegram structure: sRN TSCTCmaxoffset

**Example: sRN TSCTCmaxoffset**

|        |        |  |
|--------|--------|--|
| Cola A | ASCII  | <STX>sRN{SPC}TSCTCmaxoffset<ETX>   |
|        | Hex    | 02 73 52 4E 20 54 53 43 54 43 6D 61 78 6F 66 66 73 65 74 03                      |
| Cola B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 54 53 43 54 43 6D 61 78 6F 66 66 73 65 74 65 |

Table 164: Example: sRN TSCTCmaxoffset

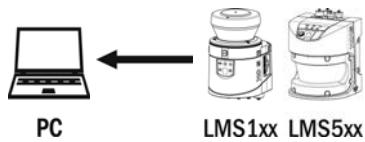

| Telegram structure: sRA TSCTCmaxoffset |   |          |        |        |   |  |
|--|---|----------|--------|--------|---|--|
| Telegram part                          | Description                             | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                       |
| Command type                           | Answer                                  | String   | 3      | All    | sRA   | 73 52 41                                     |
| Command                                | Read maximum offset time                | String   | 14     | All    | TSCTCmaxoffset  | 54 53 43 54 43 6D 61 78<br>6F 66 66 73 65 74 |
| Max. offset time                       | [Seconds as float according to IEEE754] | Real     | 4      | All    | 0h ... FFFFFFFFh<br>Min Value ~ -3.403*10^38 s<br>Max Value ~+3.403*10^38 s | 00 00 00 00 ... FF FF FF FF                  |


Table 165: Telegram structure: sRA TSCTCmaxoffset

### Example: sRA TSCTCmaxoffset (18000 s)

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}TSCTCmaxoffset{SPC}468CA000<ETX>   |
|        | Hex    | 02 73 52 41 20 54 53 43 54 43 6D 61 78 6F 66 66 73 65 74 20 46 8C A0 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 52 41 20 54 53 43 54 43 6D 61 78 6F 66 66 73 65 74 20 46 8C A0 00 20 |

Table 166: Example: sRA TSCTCmaxoffset 18000 s

### Read for delay time

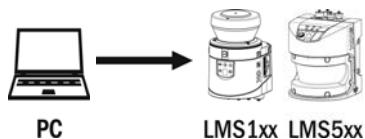

| Telegram structure: sRN TSCTCdely<br>(Authorized client) |                 |          |        |        |                       |                                  |
|--|-----------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part  | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type   | Read            | String   | 3      | All    | sRN                   | 73 52 4E                         |
| Command  | Read delay time | String   | 10     | All    | TSCTCdely             | 54 53 43 54 43 64 65 6C<br>61 79 |

Table 167: Telegram structure: sRN TSCTCdely

**Example: sRN TSCTCdelay**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}TSCTCdelay<ETX>   |
|        | Hex    | 02 73 52 4E 20 54 53 43 54 43 64 65 6C 61 79 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 52 4E 20 54 53 43 54 43 64 65 6C 61 79 69 |

Table 168: Example: sRN TSCTCdelay

**Telegram structure: sRA TSCTCdelay**

| Telegram part    | Description                             | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
|------------------|---|----------|--------|--------|-----------------------|-------------------------------|
| Command type     | Answer                                  | String   | 3      | All    | sRA                   | 73 52 41                      |
| Command          | Read for delay time                     | String   | 10     | All    | TSCTCdelay            | 54 53 43 54 43 64 65 6C 61 79 |
| Max. offset time | [Seconds as float according to IEEE754] | Real     | 4      | All    | 0h ... FFFFFFFFh      | 00 00 00 00 ... FF FF FF FF   |

Table 169: Telegram structure: sRA TSCTCdelay


**Example: sRA TSCTCdelay (0.003 s)**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}TSCTCdelay{SPC}3B435B02<ETX>   |
|        | Hex    | 02 73 52 41 20 54 53 43 54 43 64 65 6C 61 79 20 3B 43 5B 02 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 52 41 20 54 53 43 54 43 64 65 6C 61 79 20 3B 43 5B 02 67 |

Table 170: Example: sRA TSCTCdelay 0.003 s

### Reset maximum offset time

This command resets the maximum offset time, i.e. sets it to zero (0).

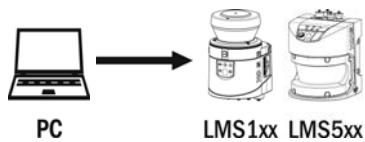


| Telegram structure: sMN mResetMaxOff<br>(Authorized client) |                           |          |        |        |                       |                                     |
|---|---------------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part   | Description               | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type  | Method                    | String   | 3      | All    | sMN                   | 73 4D 4E                            |
| Command   | Reset maximum offset time | String   | 12     | All    | mResetMaxOff          | 6D 52 65 73 65 74 4D 61 78 4F 66 66 |

Table 171: Telegram structure: sMN mResetMaxOff

### Example: sMN mResetMaxOff

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN[SPC]mResetMaxOff<ETX>   |
|        | Hex    | 02 73 4D 4E 20 6D 52 65 73 65 74 4D 61 78 4F 66 66 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 4D 4E 20 6D 52 65 73 65 74 4D 61 78 4F 66 66 73 |

Table 172: Example: sMN mResetMaxOff

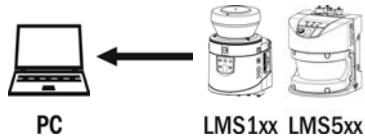

| Telegram structure: sAN mResetMaxOff |                          |          |        |        |                       |                                     |
|--------------------------------------|--------------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                        | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                         | Answer                   | String   | 3      | All    | sAN                   | 73 41 4E                            |
| Command                              | Read maximum offset time | String   | 12     | All    | mResetMaxOff          | 6D 52 65 73 65 74 4D 61 78 4F 66 66 |

Table 173: Telegram structure: sAN mResetMaxOff

### Example: sAN mResetMaxOff

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]mResetMaxOff<ETX>  |
|        | Hex    | 02 73 41 4E 20 6D 52 65 73 65 74 4D 61 78 4F 66 66 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 41 4E 20 6D 52 65 73 65 74 4D 61 78 4F 66 66 20 5F |

Table 174: Example: sAN mResetMaxOff

## 4.5 Filter

### 4.5.1 Set particle filter



| Telegram structure: sWN LFPparticle<br>(Authorized client) |                          |          |        |        |                                 |                                  |
|--|--------------------------|----------|--------|--------|---------------------------------|----------------------------------|
| Telegram part  | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)           | Values CoLa B (Binary)           |
| Command type   | Write                    | String   | 3      | All    | sWN                             | 73 57 4E                         |
| Command  | Set particle filter      | String   | 11     | All    | LFPparticle                     | 4C 46 50 70 61 72 74 69 63 6C 65 |
| Status code  | Code number              | Bool_1   | 1      | All    | Inactive: 0<br>Active: 1        | Inactive: 00<br>Active: 01       |
| Threshold <sup>5)</sup>                                    | Particle threshold in mm | Uint_16  | 2      | All    | +500d (must be taken)<br>(1F4h) | 01 F4 (must be taken)            |

Table 175: Telegram structure: sWN LFPparticle

#### Example: sWN LFPparticle

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}LFPparticle{SPC}1{SPC}+500<ETX>  |
|        | Hex    | 02 73 57 4E 20 4C 46 50 70 61 72 74 69 63 6C 65 20 31 20 2B 35 30 30 03             |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 4E 20 4C 46 50 70 61 72 74 69 63 6C 65 20 01 01 F4 D0 |

Table 176: Example: sWN LFPparticle



| Telegram structure: sWA LFPparticle |                     |          |        |        |                       |                                  |
|-------------------------------------|---------------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description         | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Answer              | String   | 3      | All    | sWA                   | 73 57 41                         |
| Command                             | Set particle filter | String   | 11     | All    | LFPparticle           | 4C 46 50 70 61 72 74 69 63 6C 65 |

Table 177: Telegram structure: sWA LFPparticle

<sup>5)</sup> Never change the threshold here, it is taken by the device to handle the particles.

### Example: sWA LFPparticle

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}LFPparticle<ETX>  |
|        | Hex    | 02 73 57 41 20 4C 46 50 70 61 72 74 69 63 6C 65 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 57 41 20 4C 46 50 70 61 72 74 69 63 6C 65 20 2B |

Table 178: Example: sWA LFPparticle

### 4.5.2 Set mean filter



### Telegram structure: sWN LFPmeanfilter

(Authorized client)


| Telegram part   | Description     | Variable | Length | Sensor | Values CoLa A (ASCII)                | Values CoLa B (Binary)                 |
|-----------------|-----------------|----------|--------|--------|--------------------------------------|--|
| Command type    | Write           | String   | 3      | All    | sWN                                  | 73 57 4E                               |
| Command         | Set mean filter | String   | 13     | All    | LFPmeanfilter                        | 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 |
| Status code     | Code number     | Bool_1   | 1      | All    | Inactive: 0<br>Active: 1             | Inactive: 00<br>Active: 01             |
| Number of scans | Number          | Uint_16  | 2      | All    | +2d ... +100d<br>(00 02h ... 00 64h) | 00 02 ... 00 64                        |
| Final part      | Reserved        | Enum_8   | 1      | All    | 0                                    | 00                                     |

Table 179: Telegram structure: sWN LFPmeanfilter

### Example: sWN LFPmeanfilter

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}LFPmeanfilter{SPC}1{SPC}+10{SPC}0<ETX>  |
|        | Hex    | 02 73 57 4E 20 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 20 31 20 2B 31 30 20 30 03             |
| CoLa B | Binary | 02 02 02 02 00 00 00 16 73 57 4E 20 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 20 01 00 64 00 52 |

Table 180: Example: sWN LFPmeanfilter

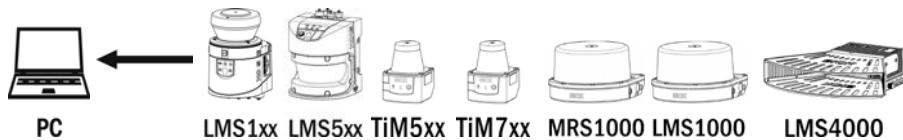

| Telegram structure: sWA LFPmeanfilter |                 |          |        |        |                       |  |
|---------------------------------------|-----------------|----------|--------|--------|-----------------------|--|
| Telegram part                         | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type                          | Answer          | String   | 3      | All    | sWA                   | 73 57 41                               |
| Command                               | Set mean filter | String   | 13     | All    | LFPmeanfilter         | 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 |

Table 181: Telegram structure: sWA LFPmeanfilter

**Example: sWA LFPmeanfilter**

|        |        |   |
|--------|--------|---|
| Cola A | ASCII  | <STX>sWA{SPC}LFPmeanfilter<ETX>   |
|        | Hex    | 02 73 57 41 20 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 03                      |
| Cola B | Binary | 02 02 02 02 00 00 00 12 73 57 41 20 4C 46 50 6D 65 61 6E 66 69 6C 74 65 72 38 |

Table 182: Example: sWA LFPmeanfilter

**4.5.3 Set n-pulse to 1-pulse filter (Echo filter)**

Only LMS1xx, for LMS5xx take the echo filter.




| Telegram structure: sWN LFPnto1filter<br>(Authorized client) |                   |          |        |        |                          |  |
|--|-------------------|----------|--------|--------|--------------------------|--|
| Telegram part  | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)                 |
| Command type   | Write             | String   | 3      | LMS1xx | sWN                      | 73 57 4E                               |
| Command  | Set n-to-1 filter | String   | 13     | LMS1xx | LFPnto1filter            | 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 |
| Status code  | Code number       | Bool_1   | 1      | LMS1xx | Inactive: 0<br>Active: 1 | Inactive: 00<br>Active: 01             |

Table 183: Telegram structure: sWN LFPnto1filter

### Example: sWN LFPnto1filter

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]LFPnto1filter[SPC]1<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 4E 20 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 20 01 75 |

Table 184: Example: sWN LFPnto1filter

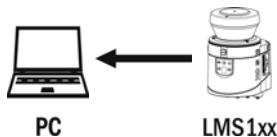

### Telegram structure: sWA LFPnto1filter

| Telegram part | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
|---------------|-------------------|----------|--------|--------|-----------------------|--|
| Command type  | Answer            | String   | 3      | LMS1xx | sWA                   | 73 57 41                               |
| Command       | Set n-to-1 filter | String   | 13     | LMS1xx | LFPnto1filter         | 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 |

Table 185: Telegram structure: sWA LFPnto1filter


### Example: sWA LFPnto1filter

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]LFPnto 1filter<ETX>  |
|        | Hex    | 02 73 57 41 20 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 57 41 20 4C 46 50 6E 74 6F 31 66 69 6C 74 65 72 7B |

Table 186: Example: sWA LFPnto1filter

#### 4.5.4 Set echo filter

Only LMS5xx. For LMS1xx use the n-pulse to 1-pulse filter.

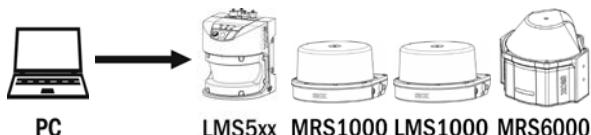

### Telegram structure: sWN FREchoFilter (Authorized client)

| Telegram part | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
|---------------|-----------------|----------|--------|--------|-----------------------|-------------------------------------|
| Command type  | Write           | String   | 3      | All    | sWN                   | 73 57 4E                            |
| Command       | Set echo filter | String   | 12     | All    | FREchoFilter          | 46 52 45 63 68 6F 46 69 6C 74 65 72 |

| Telegram structure: sWN FREchoFilter<br>(Authorized client) |             |          |        |        |   |  |
|---|-------------|----------|--------|--------|---|--|
| Telegram part   | Description | Variable | Length | Sensor | Values CoLa A (ASCII)                         | Values CoLa B (Binary)                           |
| Status code   | Code number | Enum_8   | 1      | All    | First echo: 0<br>All echos: 1<br>Last echo: 2 | First echo: 00<br>All echos: 01<br>Last echo: 02 |

Table 187: Telegram structure: sWN FREchoFilter

**Example: sWN FREchoFilter**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]FREchoFilter[SPC]1<ETX>   |
|        | Hex    | 02 73 57 4E 20 46 52 45 63 68 6F 46 69 6C 74 65 72 20 31 03  |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 57 4E 20 46 52 45 63 68 6F 46 69 6C 74 65 72 20 01 7E<br>Only available with firmware versions > V1.10. |

Table 188: Example: sWN FREchoFilter



| Telegram structure: sWA FREchoFilter |                 |          |        |        |                       |                                     |
|--------------------------------------|-----------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                        | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                         | Answer          | String   | 3      | All    | sWA                   | 73 57 41                            |
| Command                              | Set echo filter | String   | 12     | All    | FREchoFilter          | 46 52 45 63 68 6F 46 69 6C 74 65 72 |

Table 189: Telegram structure: sWA FREchoFilter


**Example: sWa FREchoFilter**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]FREchoFilter<ETX>   |
|        | Hex    | 02 73 57 41 20 46 52 45 63 68 6F 46 69 6C 74 65 72 03  |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 41 20 46 52 45 63 68 6F 46 69 6C 74 65 72 20 70<br>Only available with firmware versions > V1.10 LMS5xx. |

Table 190: Example: sWa FREchoFilter

4.5.5 Set and read fog filter

**Set fog filter (LMS1xx)**

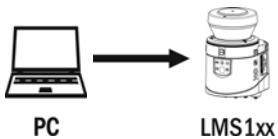


| Telegram structure: sWN MSsupemode<br>(Authorized client) |                |          |        |        |                       |                               |
|---|----------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part   | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type  | Write          | String   | 3      | All    | sWN                   | 73 57 4E                      |
| Command   | Set fog filter | String   | 10     | All    | MSsupemode            | 4D 53 73 75 70 70 6D 6F 64 65 |
| Status code   | Code number    | Bool_1   | 1      | All    | Glitch: 0<br>Fog: 1   | Glitch: 00<br>Fog: 01         |

Table 191: Telegram structure: sWN MSsupemode

**Example: sWN MSsupemode**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]MSsupemode[SPC]1<ETX>   |
|        | Hex    | 02 73 57 4E 20 4D 53 73 75 70 70 6D 6F 64 65 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 57 4E 20 4D 53 73 75 70 70 6D 6F 64 65 20 01 70 |

Table 192: Example: sWN MSsupemode

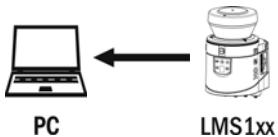

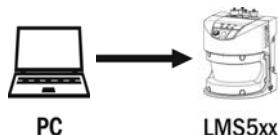
| Telegram structure: sWA MSsupemode |                |          |        |        |                       |                               |
|------------------------------------|----------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Answer         | String   | 3      | All    | sWA                   | 73 57 41                      |
| Command                            | Set fog filter | String   | 10     | All    | MSsupemode            | 4D 53 73 75 70 70 6D 6F 64 65 |

Table 193: Telegram structure: sWA MSsupemode

**Example: sWA MSsuppmode**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}MSsuppmode<ETX>   |
|        | Hex    | 02 73 57 41 20 4D 53 73 75 70 70 6D 6F 64 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 41 20 4D 53 73 75 70 70 6D 6F 64 65 7E |

Table 194: Example: sWA MSsuppmode

**Set fog filter (LMS5xx)****Telegram structure: sWN CLFogFilterEn  
(Authorized client)**


| Telegram part | Description                  | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)                 |
|---------------|------------------------------|----------|--------|--------|-------------------------|--|
| Command type  | Write                        | String   | 3      | All    | sWN                     | 73 57 4E                               |
| Command       | Enable fog filter            | String   | 13     | All    | CLFogFilterEn           | 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E |
| Status code   | Enable or disable fog filter | Bool_1   | 1      | All    | Disable: 0<br>Enable: 1 | Disable: 00<br>Enable: 01              |

Table 195: Telegram structure: sWN CLFogFilterEn

**Example: sWN CLFogFilterEn**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}CLFogFilterEn{SPC}1<ETX>   |
|        | Hex    | 02 73 57 4E 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 4E 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 20 01 21 |

Table 196: Example: sWN CLFogFilterEn

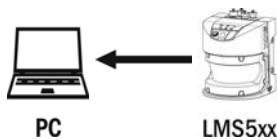

| Telegram structure: sWA CLFogFilterEn |                   |          |        |        |                       |   |
|---------------------------------------|-------------------|----------|--------|--------|-----------------------|---|
| Telegram part                         | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                          | Answer            | String   | 3      | All    | sWA                   | 73 57 41                                  |
| Command                               | Enable fog filter | String   | 13     | All    | CLFogFilterEn         | 43 4C 46 6F 67 46 69 6C<br>74 65 72 45 6E |


Table 197: Telegram structure: sWA CLFogFilterEn

#### Example: sWA CLFogFilterEn

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}CLFogFilterEn<ETX>  |
|        | Hex    | 02 73 57 41 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 57 41 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 20 2F |

Table 198: Example: sWA CLFogFilterEn

#### Read for enabled fog filter (LMS5xx)

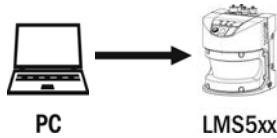


| Telegram structure: sRN CLFogFilterEn |                    |          |        |        |                       |   |
|---------------------------------------|--------------------|----------|--------|--------|-----------------------|---|
| Telegram part                         | Description        | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                          | Read               | String   | 3      | All    | sRN                   | 73 52 4E                                  |
| Command                               | Enabled fog filter | String   | 13     | All    | CLFogFilterEn         | 43 4C 46 6F 67 46 69 6C<br>74 65 72 45 6E |

Table 199: Telegram structure: sRN CLFogFilterEn

#### Example: sRN CLFogFilterEn

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}CLFogFilterEn<ETX>   |
|        | Hex    | 02 73 52 4E 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 4E 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 05 |

Table 200: Example: sRN CLFogFilterEn

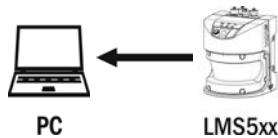

| Telegram structure: sRA CLFogFilterEn |                                |          |        |        |                           |   |
|---------------------------------------|--------------------------------|----------|--------|--------|---------------------------|---|
| Telegram part                         | Description                    | Variable | Length | Sensor | Values CoLa A (ASCII)     | Values CoLa B (Binary)                    |
| Command type                          | Answer                         | String   | 3      | All    | sRA                       | 73 52 41                                  |
| Command                               | Enabled fog filter             | String   | 13     | All    | CLFogFilterEn             | 43 4C 46 6F 67 46 69 6C<br>74 65 72 45 6E |
| Status code                           | Fog filter enabled or disabled | Bool_1   | 1      | All    | Disabled: 0<br>Enabled: 1 | Disabled: 00<br>Enabled: 01               |


Table 201: Telegram structure: sRA CLFogFilterEn

#### Example: sRA CLFogFilterEn

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}CLFogFilterEn{SPC}1<ETX>   |
|        | Hex    | 02 73 52 41 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 20 01 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 52 41 20 43 4C 46 6F 67 46 69 6C 74 65 72 45 6E 20 01 2B |

Table 202: Example: sRA CLFogFilterEn

#### Set sensitivity fog filter (LMS5xx)

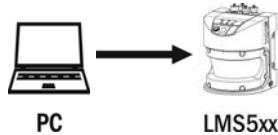


| Telegram structure: sWN MCSenseLevel<br>(Authorized client) |             |          |        |        |                       |  |
|---|-------------|----------|--------|--------|-----------------------|--|
| Telegram part   | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type  | Write       | String   | 3      | All    | sWN                   | 73 57 4E                               |
| Command   | Sense level | String   | 12     | All    | MCSenseLevel          | 4D 43 53 65 6E 73 65 4C<br>65 76 65 6C |
| Sensitivity level   |             | Uint_8   | 1      | All    | 1 ... 6               | 01 ... 06                              |

Table 203: Telegram structure: sWN MCSenseLevel

**Example: sWN MCSenseLevel**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN SPC MCSenseLevel SPC 1<ETX>   |
|        | Hex    | 02 73 57 4E 20 4D 43 53 65 6E 73 65 4C 65 76 65 6C 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 57 4E 20 4D 43 53 65 6E 73 65 4C 65 76 65 6C 20 01 70 |

Table 204: Example: sWN MCSenseLevel

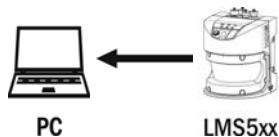

**Telegram structure: sWA MCSenseLevel**

| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
|---------------|-------------|----------|--------|--------|-----------------------|-------------------------------------|
| Command type  | Answer      | String   | 3      | All    | sWA                   | 73 57 41                            |
| Command       | Sense level | String   | 12     | All    | MCSenseLevel          | 4D 43 53 65 6E 73 65 4C 65 76 65 6C |

Table 205: Telegram structure: sWA MCSenseLevel

**Example: sWA MCSenseLevel**


|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA SPC MCSenseLevel <ETX>   |
|        | Hex    | 02 73 57 41 20 4D 43 53 65 6E 73 65 4C 65 76 65 6C 20 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 41 20 4D 43 53 65 6E 73 65 4C 65 76 65 6C 20 7E |

Table 206: Example: sWA MCSenseLevel

#### 4.5.6 Enable/disable digital nearfield filter

Activates or deactivates the nearfield filter of the LD series.

Do not change the setting on LD-LRS XXXX !

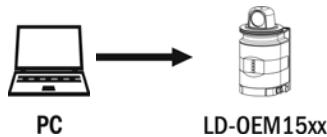


| Telegram structure: sWN CLNFDigFilterEn<br>(Authorized client) |                          |          |        |        |                          |  |
|--|--------------------------|----------|--------|--------|--------------------------|--|
| Telegram part  | Description              | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)                       |
| Command type   | Write                    | String   | 3      | All    | sWN                      | 73 57 4E                                     |
| Command  | Digital nearfield filter | String   | 15     | All    | CLNFDigFilterEn          | 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E |
| Status code  | Code number              | Bool_1   | 1      | All    | Inactive: 0<br>Active: 1 | Inactive: 00<br>Active: 01                   |

Table 207: Telegram structure: sWN CLNFDigFilterEn

#### Example: sWN CLNFDigFilterEn

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}CLNFDigFilterEn{SPC}1<ETX>   |
|        | Hex    | 02 73 57 4E 20 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 16 73 57 4E 20 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E 20 01 51 |

Table 208: Example: sWN CLNFDigFilterEn

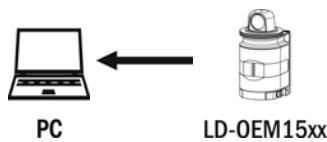

| Telegram structure: sWA CLNFDigFilterEn |                          |          |        |        |                       |  |
|---|--------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                           | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                            | Answer                   | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command                                 | Digital nearfield filter | String   | 15     | All    | CLNFDigFilterEn       | 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E |


Table 209: Telegram structure: sWA CLNFDigFilterEn

**Example: sWA CLNFDigFilterEn**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]CLNFDigFilterEn<ETX>   |
|        | Hex    | 02 73 57 41 20 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 41 20 43 4C 4E 46 44 69 67 46 69 6C 74 65 72 45 6E 03 |

Table 210: Example: sWA CLNFDigFilterEn

### 4.5.7 Set digital nearfield filter sector selection

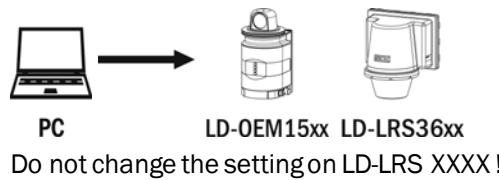

| Telegram structure: sWN CLHWFilterSectEn<br>(Authorized client) |                      |          |        |        |  |  |
|---|----------------------|----------|--------|--------|--|--|
| Telegram part   | Description          | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type  | Write                | String   | 3      | All    | sWN  | 73 57 4E   |
| Command   | Sector function      | String   | 16     | All    | CLHWFilterSectEn   | 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E                                  |
| Status code   | Active sector vector | Bool_1   | 4 × 1  | All    | Active in none of the sectors: 0 0 0 0<br>Active in all sectors: 1 1 1 1 | Active in none of the sectors: 00 00 00 00<br>Active in all sectors: 01 01 01 01 |

Table 211: Telegram structure: sWN CLHWFilterSectEn

**Example: sWN CLHWFilterSectEn**

Enable Nearfield Suppression for sector 1, disable for sectors 2, 3 and 4.

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]CLHWFilterSectEn[SPC]1[SPC]0[SPC]0[SPC]0<ETX>  |
|        | Hex    | 02 73 57 4E 20 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E 20 31 20 30 20 30 20 30 03             |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 57 4E 20 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E 20 31 30 30 30 51 |

Table 212: Example: sWN CLHWFilterSectEn 1 0 0 0



| Telegram structure: sWA CLHWFilterSectEn |                 |          |        |        |                       |   |
|--|-----------------|----------|--------|--------|-----------------------|---|
| Telegram part                            | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                          |
| Command type                             | Answer          | String   | 3      | All    | sWA                   | 73 57 41  |
| Command                                  | Sector function | String   | 16     | All    | CLHWFilterSectEn      | 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E |

Table 213: Telegram structure: sWA CLHWFilterSectEn

#### Example: sWA CLHWFilterSectEn

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}CLHWFilterSectEn<ETX>  |
|        | Hex    | 02 73 57 41 20 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 57 41 20 43 4C 48 57 46 69 6C 74 65 72 53 65 63 74 45 6E 20 5F |

Table 214: Example: sWA CLHWFilterSectEn

#### 4.5.8 Set Median Filter



Activate a 3x1 Median filter (floating evaluation of 3 measurement points within one scan) for distance values

| Telegram structure: sWN LFPmedianfilter<br>(Authorized client) |                                 |          |        |        |                          |  |
|--|---------------------------------|----------|--------|--------|--------------------------|--|
| Telegram part  | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)                       |
| Command type   | Write                           | String   | 3      | All    | sWN                      | 73 57 4E                                     |
| Command  | Sector function                 | String   | 16     | All    | LFPmedianfilter          | 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 |
| Status code  | Enable or disable Median filter | Bool_1   | 1      | All    | Inactive: 0<br>Active: 1 | 00<br>01                                     |
| Reserved   | Always 3                        | Uint_16  | 2      | All    | 3                        | 00 03  |

Table 215: Telegram structure: sWN LFPmedianfilter

### Example: sWN LFPmedianfilter

Enable Median filter

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]LFPmedianfilter[SPC]1[SPC]3<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 20 31 20 33 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 57 4E 20 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 20 01 00 03 38 |

Table 216: Example: sWN LFPmedianfilter 1 3



### Telegram structure: sWA LFPmedianfilter

| Telegram part | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
|---------------|-----------------|----------|--------|--------|-----------------------|--|
| Command type  | Answer          | String   | 3      | All    | sWA                   | 73 57 41                                     |
| Command       | Sector function | String   | 16     | All    | LFPmedianfilter       | 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 |


Table 217: Telegram structure: sWA LFPmedianfilter

### Example: sWA LFPmedianfilter

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]LFPmedianfilter<ETX>  |
|        | Hex    | 02 73 57 41 20 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 57 41 20 4C 46 50 6D 65 64 69 61 6E 66 69 6C 74 65 72 20 35 |

Table 218: Example: sWA LFPmedianfilter

### 4.5.9 Set Edge Filter

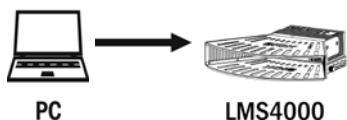

Activate the Edge filter to eliminate wrong measurement points at object edges.

### Telegram structure: sWN LFPedgefilter (Authorized client)

| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|---------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Command type  | Write       | String   | 3      | All    | sWN                   | 73 57 4E               |

| Telegram structure: sWN LFPedgefilter<br>(Authorized client) |                                   |          |        |        |                          |  |
|--|-----------------------------------|----------|--------|--------|--------------------------|--|
| Telegram part  | Description                       | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)                 |
| Command  | Sector function                   | String   | 16     | All    | LFPedgefilter            | 4C 46 50 65 64 67 65 66 69 6C 74 65 72 |
| Status code  | Activate / deactivate edge filter | Bool_1   | 1      | All    | Inactive: 0<br>Active: 1 | 00<br>01                               |


Table 219: Telegram structure: sWN LFPedgefilter

**Example: sWN LFPedgefilter**

Enable Median filter

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC} LFPedgefilter1<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 46 50 65 64 67 65 66 69 6C 74 65 72 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 57 4E 20 4C 46 50 65 64 67 65 66 69 6C 74 65 72 20 01 32 |

Table 220: Example: sWN LFPedgefilter 1

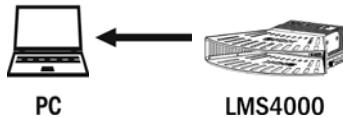

| Telegram structure: sWA LFPedgefilter |                 |          |        |        |                       |  |
|---------------------------------------|-----------------|----------|--------|--------|-----------------------|--|
| Telegram part                         | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type                          | Answer          | String   | 3      | All    | sWA                   | 73 57 41                               |
| Command                               | Sector function | String   | 16     | All    | LFPedgefilter         | 4C 46 50 65 64 67 65 66 69 6C 74 65 72 |

Table 221: Telegram structure: sWA LFPedgefilter


**Example: sWA LFPedgefilter**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}LFPedgefilter <ETX>   |
|        | Hex    | 02 73 57 41 20 4C 46 50 65 64 67 65 66 69 6C 74 65 72 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 57 41 20 4C 46 50 65 64 67 65 66 69 6C 74 65 72 20 3C |

Table 222: Example: sWA LFPedgefilter

## 4.6 Encoder

### 4.6.1 Set increment source

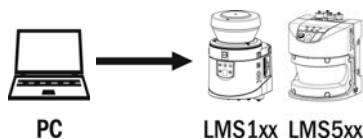

| Telegram structure: sWN LICsrc<br>(Authorized client) |                      |          |        |        |                              |                                |
|---|----------------------|----------|--------|--------|------------------------------|--------------------------------|
| Telegram part   | Description          | Variable | Length | Sensor | Values CoLa A (ASCII)        | Values CoLa B (Binary)         |
| Command type  | Write                | String   | 3      | All    | sWN                          | 73 57 4E                       |
| Command   | Set increment source | String   | 6      | All    | LICsrc                       | 4C 49 43 73 72 63              |
| Increment source                                      |                      | Enum_8   | 1      | All    | Fixed speed: 0<br>Encoder: 1 | Fixed speed: 00<br>Encoder: 01 |

Table 223: Telegram structure: sWN LICsrc

#### Example: sWN LICsrc

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]LICsrc[SPC]0<ETX>                                    |
|        | Hex    | 02 73 57 4E 20 4C 49 43 73 72 63 20 30 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0C 73 57 4E 20 4C 49 43 73 72 63 20 01 4F |

Table 224: Example: sWN LICsrc



| Telegram structure: sWA LICsrc |                      |          |        |        |                       |                        |
|--------------------------------|----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer               | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Set increment source | String   | 6      | All    | LICsrc                | 4C 49 43 73 72 63      |

Table 225: Telegram structure: sWA LICsrc

**Example: sWA LICsrc**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}LICsrc<ETX>                                 |
|        | Hex    | 02 73 57 41 20 4C 49 43 73 72 63 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0B 73 57 41 20 4C 49 43 73 72 63 41 |

Table 226: Example: sWA LICsrc

**4.6.2 Set encoder settings**

| Telegram structure: sWN LICencset<br>(Authorized client) |                  |          |        |        |                                  |  |
|--|------------------|----------|--------|--------|----------------------------------|--|
| Telegram part  | Description      | Variable | Length | Sensor | Values CoLa A (ASCII)            | Values CoLa B (Binary)                   |
| Command type   | Write            | String   | 3      | All    | sWN                              | 73 57 4E                                 |
| Command  | Encoder settings | String   | 9      | All    | LICencset                        | 4C 49 43 65 6E 63 73 65 74               |
| Encoder setting  |                  | Enum_8   | 1      | All    | Off: 0                           | 00                                       |
|  |                  |          |        |        | Single increment/INC1: 1         | 01                                       |
|  |                  |          |        |        | Direction recognition (phase): 2 | 02                                       |
|  |                  |          |        |        | Direction recognition (level): 3 | 03                                       |
|  |                  |          |        |        | LMS 4000 (+ above)               | Fixed increment speed / ticks (1 kHz): 4 |
|  |                  |          |        |        |                                  | 04                                       |

Table 227: Telegram structure: sWN LICencset

**Example: sWN LICencset**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}LICencset{SPC}0<ETX>                                       |
|        | Hex    | 02 73 57 4E 20 4C 49 43 65 6E 63 73 65 74 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 4E 20 4C 49 43 65 6E 63 73 65 74 20 03 25 |

Table 228: Example: sWN LICencset



| Telegram structure: sWA LICencset |                  |          |        |        |                       |                            |
|-----------------------------------|------------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Answer           | String   | 3      | All    | sWA                   | 73 57 41                   |
| Command                           | Encoder settings | String   | 9      | All    | LICencset             | 4C 49 43 65 6E 63 73 65 74 |


Table 229: Telegram structure: sWA LICencset

### Example: sWA LICencset

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}LICencset<ETX>   |
|        | Hex    | 02 73 57 41 20 4C 49 43 65 6E 63 73 65 74 03                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E 73 57 41 20 4C 49 43 65 6E 63 73 65 74 20 29 |

Table 230: Example: sWA LICencset

### 4.6.3 Set encoder resolution

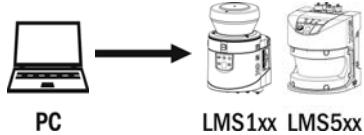

| Telegram structure: sWN LICences<br>(Authorized client) |  |          |        |        |                                      |                             |
|---|--|----------|--------|--------|--------------------------------------|-----------------------------|
| Telegram part   | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)                | Values CoLa B (Binary)      |
| Command type  | Write  | String   | 3      | All    | sWN                                  | 73 57 4E                    |
| Command   | Set encoder resolution                                   | String   | 9      | All    | LICences                             | 4C 49 43 65 6E 63 72 65 73  |
| Encoder resolution                                      | Resolution value in mm/Inc as float according to IEEE754 | Real     | 4      | All    | +0.001d ... +2000d<br>(see IEEE 754) | 3A 83 12 6F ... 44 FA 00 00 |

Table 231: Telegram structure: sWN LICences

**Example: sWN LICences**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]LICences[SPC]+1000<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 49 43 65 6E 63 72 65 73 20 2B 31 30 30 30 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 57 4E 20 4C 49 43 65 6E 63 72 65 73 20 44 7A 00 00 1E |

Table 232: Example: sWN LICences

**Telegram structure: sWA LICences**

| Telegram part | Description            | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
|---------------|------------------------|----------|--------|--------|-----------------------|----------------------------|
| Command type  | Answer                 | String   | 3      | All    | sWA                   | 73 57 41                   |
| Command       | Set encoder resolution | String   | 9      | All    | LICences              | 4C 49 43 65 6E 63 72 65 73 |


Table 233: Telegram structure: sWA LICences

**Example: sWA LICences**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]LICences<ETX>  |
|        | Hex    | 02 73 57 41 20 4C 49 43 65 6E 63 72 65 73 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 57 41 20 4C 49 43 65 6E 63 72 65 73 00 |

Table 234: Example: sWA LICences

#### 4.6.4 Set fixed speed

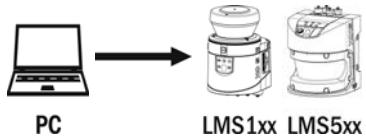

| Telegram structure: sWN LICFixVel<br>(Authorized client) |  |          |        |        |                       |                            |
|--|--|----------|--------|--------|-----------------------|----------------------------|
| Telegram part  | Description                                | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type   | Write                                      | String   | 3      | All    | sWN                   | 73 57 4E                   |
| Command  | Set fixed speed                            | String   | 9      | All    | LICFixVel             | 4C 49 43 46 69 78 56 65 6C |
| Fixed speed  | Speed in m/s as float according to IEEE754 | Real     | 4      | All    | +0.001d ... +10.0d    | 3A 83 12 6F... 41 20 00 00 |

Table 235: Telegram structure: sWN LICFixVel

#### Example: sWN LICFixVel

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]LICFixVel[SPC]+5<ETX>   |
|        | Hex    | 02 73 57 4E 20 4C 49 43 46 69 78 56 65 6C 20 2B 35 03                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 0B 73 57 4E 20 4C 49 43 46 69 78 56 65 6C 20 40 A0 00 00 C4 |

Table 236: Example: sWN LICFixVel



| Telegram structure: sWA LICFixVel |                 |          |        |        |                       |                            |
|-----------------------------------|-----------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Answer          | String   | 3      | All    | sWA                   | 73 57 41                   |
| Command                           | Set fixed speed | String   | 9      | All    | LICFixVel             | 4C 49 43 46 69 78 56 65 6C |

Table 237: Telegram structure: sWA LICFixVel

**Example: sWA LICFixVel**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}LICFixVel<ETX>                                       |
|        | Hex    | 02 73 57 41 20 4C 49 43 46 69 78 56 65 6C 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 57 41 20 4C 49 43 46 69 78 56 65 6C 0B |

Table 238: Example: sWA LICFixVel

**4.6.5 Read speed threshold**

| Telegram structure: sRN LICSpTh |                      |          |        |        |                       |                        |
|---------------------------------|----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                   | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                    | Read                 | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                         | Read speed threshold | String   | 7      | All    | LICSpTh               | 4C 49 43 53 70 54 68   |

Table 239: Telegram structure: sRN LICSpTh

**Example: sRN LICSpTh**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}LICSpTh<ETX>                                   |
|        | Hex    | 02 73 52 4E 20 4C 49 43 53 70 54 68 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 52 4E 20 4C 49 43 53 70 54 68 16 |

Table 240: Example: sRN LICSpTh



| Telegram structure: sRA LICSpTh |                      |          |        |        |                               |                        |
|---------------------------------|----------------------|----------|--------|--------|-------------------------------|------------------------|
| Telegram part                   | Description          | Variable | Length | Sensor | Values CoLa A (ASCII)         | Values CoLa B (Binary) |
| Command type                    | Answer               | String   | 3      | All    | sRA                           | 73 52 41               |
| Command                         | Speed threshold      | String   | 7      | All    | LICSpTh                       | 4C 49 43 53 70 54 68   |
| Speed threshold                 | Speed threshold in % | Uint_8   | 2      | All    | +1d ... +20d<br>(01h ... 14h) | 01 ... 14              |

Table 241: Telegram structure: sRA LICSpTh

**Example: sRA LICSpTh**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}LICSpTh{SPC}5<ETX>                                   |
| CoLa B | Hex    | 02 73 52 41 20 4C 49 43 53 70 54 68 20 35 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 52 41 20 4C 49 43 53 70 54 68 20 05 3C |

Table 242: Example: sRA LICSpTh

### 4.6.6 Read encoderspeed



| Telegram structure: sRN LICencsp |                    |          |        |        |                       |                         |
|----------------------------------|--------------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description        | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Read               | String   | 3      | All    | sRN                   | 73 52 4E                |
| Command                          | Read encoder speed | String   | 8      | All    | LICencsp              | 4C 49 43 65 6E 63 73 70 |

Table 243: Telegram structure: sRN LICencsp

**Example: sRN LICencsp**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LICencsp <ETX>                                    |
| CoLa B | Hex    | 02 73 52 4E 20 4C 49 43 65 6C 63 73 70 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 4E 20 4C 49 43 65 6E 63 73 70 62 |

Table 244: Example: sRN LICencsp



| Telegram structure: sRA LICencsp |  |          |        |        |                       |                             |
|----------------------------------|--|----------|--------|--------|-----------------------|-----------------------------|
| Telegram part                    | Description                                  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)      |
| Command type                     | Answer                                       | String   | 3      | All    | sRA                   | 73 52 41                    |
| Command                          | Read encoder speed                           | String   | 8      | All    | LICencsp              | 4C 49 43 65 6E 63 73 70     |
| Encoder speed                    | [Speed in m/s as float according to IEEE754] | Real     | 4      | All    | 0h ... FFFFFFFFh      | 00 00 00 00 ... FF FF FF FF |

Table 245: Telegram structure: sRA LICencsp

**Example: sRA LICencsp (0 m/s)**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}LICencsp {SPC}0<ETX>   |
|        | Hex    | 02 73 52 41 20 4C 49 43 65 6C 63 73 70 20 30 30 30 30 30 30 30 30 30 03       |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 41 20 4C 49 43 65 6E 63 73 70 20 00 00 00 00 4D |

Table 246: Example: sRA LICencsp

### 4.7 Inputs and Outputs

#### 4.7.1 Port Configuration of all I/Os



| Telegram structure: sRN PortConfiguration |                            |          |        |        |                       |  |
|---|----------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                             | Description                | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                                   |
| Command type                              | Read                       | String   | 3      | All    | sRN                   | 73 52 4E   |
| Command                                   | Ask for port configuration | String   | 12     | All    | PortConfiguration     | 50 6F 72 74 43 6F 6E 66<br>69 67 75 72 61 74 69 6F<br>6E |

Table 247: Telegram structure: sRN PortConfiguration

#### Example: sRN PortConfiguration

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]PortConfiguration<ETX>   |
|        | Hex    | 02 73 52 4E 20 50 6F 72 74 43 6F 6E 66 69 67 75 72 61 74 69 6F 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 52 4E 20 50 6F 72 74 43 6F 6E 66 69 67 75 72 61 74 69 6F 6E 26 |


Table 248: Example: sRN PortConfiguration



| Telegram structure: sRA PortConfiguration   |   |          |        |        |                       |   |
|---|---|----------|--------|--------|-----------------------|---|
| Telegram part   | Description                                     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                                |
| Command type  | Answer  | String   | 3      | All    | sRA                   | 73 52 41  |
| Command   | Configuration of all I/Os                       | String   | 12     | All    | PortConfiguration     | 50 6F 72 74 43 6F 6E 66 69<br>67 75 72 61 74 69 6F 6E |
| Start of loop, number of loops = amount of all current and future Inputs and Outputs of device family |   |          |        |        |                       |   |
| Port Type   | Input or Output                                 | Enum_8   | 1      | All    | Input: 0<br>Output: 1 | 00<br>01  |
| Port Name   | Amount of characters of the following port name | Uint_16  | 2      | All    | 0h ... 20h            | 00 00 ... 00 20                                       |
|   | Port name                                       | String   | 16     | All    | [Port name]           | [Port name]   |

| Telegram structure: sRA PortConfiguration                          |                   |   |         |        |                                |   |  |
|--|-------------------|---|---------|--------|--------------------------------|---|--|
| Telegram part  | Description       | Variable  | Length  | Sensor | Values CoLa A (ASCII)          | Values CoLa B (Binary)                  |  |
| Input Settings   | Logic             | Logic of the input  | Bool_1  | 1      | All                            | Active High: 0<br>Active low: 1         |  |
|  | Debouncing        | Select debouncing time in ms  | Uint_16 | 2      | All                            | 0h ... 27 10<br>(max. 10,000ms)         |  |
|  | Sensitivity       | Status change at Edge or Level  | Enum_8  | 1      | All                            | Edge: 0<br>Level: 1                     |  |
|  | Reserved          | Reserved value 1  | Uint_16 | 2      | All                            | 0h                                      |  |
|  | Reserved          | Reserved value 2  | Uint_16 | 2      | All                            | 0h                                      |  |
| Output Settings  | Logic             | Logic of the output   | Bool_1  | 1      | All                            | Active High: 0<br>Active low: 1         |  |
|  | Output Mode       | PNP, NPN or Push-Pull   | Enum_8  | 1      | All                            | PNP: 0<br>NPN: 1<br>Push-Pull: 2        |  |
|  | Restart type      | Restart behavior of output after event: immediatly or after specific time | Enum_8  | 1      | All                            | Immediatly: 0<br>Time: 1                |  |
|  | Restart time      | [Only with restart type = Time], time in ms                               | Uint_32 | 4      | All                            | 14h ... 927C0<br>(20 ms ... 600,000 ms) |  |
|  | Combination       | Combining multiple Events and/or Inputs                                   | Enum_8  | 1      | All                            | AND: 0<br>OR: 1<br>XOR: 2               |  |
|  |                   |   |         | 1      | LMS 4000                       | Always: 0                               |  |
|  | Reserved          | Reserved value 3  | Uint_16 | 2      | All                            | 0h                                      |  |
|  | Reserved          | Reserved value 4  | Uint_16 | 2      | All                            | 0h                                      |  |
|  | Sources           | Amount (n) of combined sources  | Uint_16 | 2      | All                            | 0h ... FFFFh                            |  |
|  |                   |   |         |        | LMS 4000                       | 0 ... 1                                 |  |
| Start of source loop, number of loops = amount of combined sources |                   |   |         |        |                                |   |  |
| Source name  |                   | String  | 4       | All    | [Source]                       | [Source]                                |  |
| Source Inverted or not   |                   | Bool_1  | 1       | All    | Not inverted: 0<br>Inverted: 1 | 00<br>01                                |  |
| Reserved value 5   |                   | Uint_8  | 1       | All    | 0h                             | 00                                      |  |
| Reserved value 6   |                   | Uint_8  | 1       | All    | 0h                             | 00                                      |  |
| Stop of source loop  |                   |   |         |        |                                |   |  |
| Reserved   | Reserved value 7  | Uint_16   | 2       | All    | 0h                             | 00 00                                   |  |
| Reserved   | Reserved value 8  | Uint_16   | 2       | All    | 0h                             | 00 00                                   |  |
| Reserved   | Reserved value 9  | Uint_16   | 2       | All    | 0h                             | 00 00                                   |  |
| Reserved   | Reserved value 10 | Uint_16   | 2       | All    | 0h                             | 00 00                                   |  |
| Stop of loop   |                   |   |         |        |                                |   |  |

#### 4.7.2 Read state of the outputs

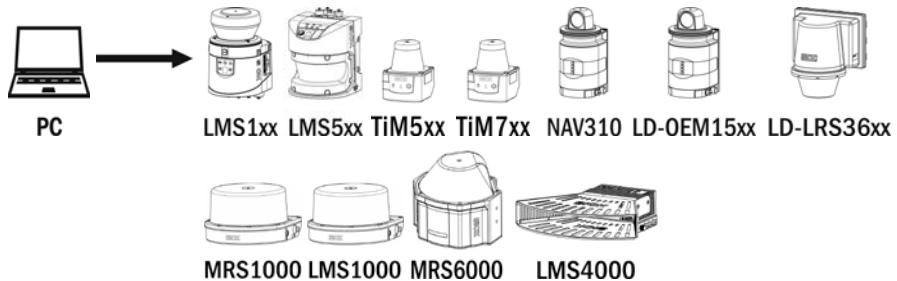

| Telegram structure: sRN LIDoutputstate |              |          |        |        |                       |  |
|--|--------------|----------|--------|--------|-----------------------|--|
| Telegram part                          | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                           | Read         | String   | 3      | All    | sRN                   | 73 52 4E                                     |
| Command                                | Output state | String   | 14     | All    | LIDoutputstate        | 4C 49 44 6F 75 74 70 75<br>74 73 74 61 74 65 |

Table 249: Telegram structure: sRN LIDoutputstate

#### Example: sRN LIDoutputstate

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LIDoutputstate<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 66 |


Table 250: Example: sRN LIDoutputstate

| Telegram structure: sRA LIDoutputstate   |             |          |        |        |                       |                        |
|--|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Find complete telegram structure of the answer in section 4.7.3 „Send outputstate by event“ on page 129. |             |          |        |        |                       |                        |

Table 251: Telegram structure: sRA LIDoutputstate

#### 4.7.3 Send outputstate by event

Output telegram is sent everytime an output state changes.

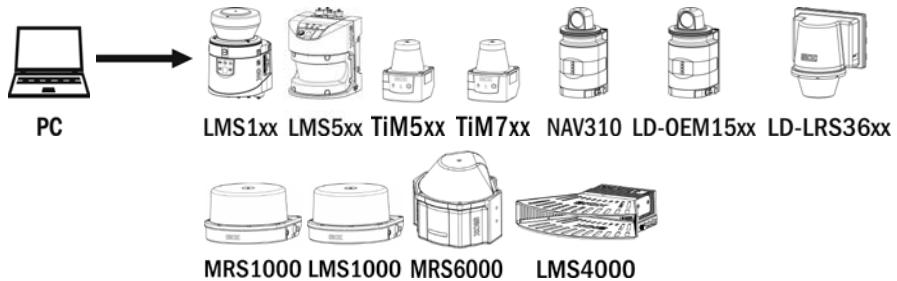


| Telegram structure: sEN LiDoutputstate |              |          |        |        |                       |   |
|--|--------------|----------|--------|--------|-----------------------|---|
| Telegram part                          | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                           | Event        | String   | 3      | All    | sEN                   | 73 45 4E                                  |
| Command                                | Output state | String   | 14     | All    | LiDoutputstate        | 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 |
|  | Start/stop   | Enum_8   | 1      | All    | Start: 1<br>Stop: 0   | Start: 01<br>Stop: 00                     |

Table 252: Telegram structure: sEN LiDoutputstate

#### Example: sEN LiDoutputstate

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sEN{SPC}LiDoutputstate{SPC}1<ETX>   |
|        | Hex    | 02 73 45 4E 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 45 4E 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 20 01 50 |

Table 253: Example: sEN LiDoutputstate

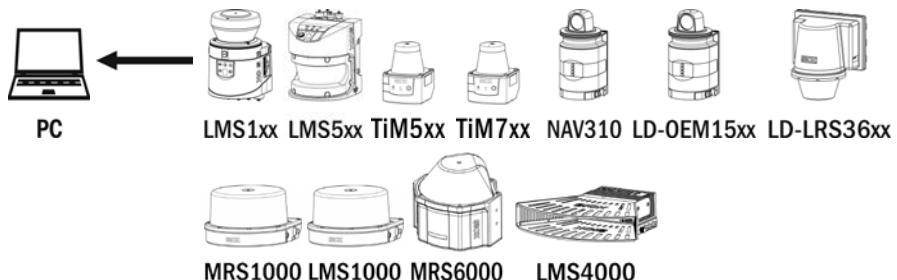

| Telegram structure: sRA/sSN LiDoutputstate |              |          |        |        |                       |   |
|--|--------------|----------|--------|--------|-----------------------|---|
| Telegram part                              | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                               | Answer       | String   | 3      | All    | sRA/sSN               | 73 52 41 / 73 53 4E                       |
| Command                                    | Output state | String   | 14     | All    | LiDoutputstate        | 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 |

| Telegram structure: sRA/sSN LIDoutputstate                             |  |          |        |   |  |  |
|--|--|----------|--------|---|--|--|
| Telegram part  | Description  | Variable | Length | Sensor  | Values CoLa A (ASCII)                            | Values CoLa B (Binary)                           |
| Status code  | Version number   | Uint_16  | 2      | All   | 0 ... FFFFh                                      | 00 00 ... FF FF                                  |
|  | System counter<br>(time in $\mu$ s since power up max. 71min then starting from 0 again) | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
| State of the outputs and count value in hex.<br>(values of an example) | Out1 state   | Enum_8   | 1      | All<br><br>LMS1xx<br>LMS5xx<br>LD-OEM15xx<br>LD-LRS36xx<br>MRS1000<br>MRS6000 | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out1 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out2 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out2 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out3 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out3 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out4 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out4 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out5 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out5 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out6 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out6 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out7 state   | Enum_8   | 1      | MRS1000<br>MRS6000  | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out7 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Out8 state   | Enum_8   | 1      |   | Not active: 0<br>Active: 1<br>Output not used: 2 | Not active: 0<br>Active: 1<br>Output not used: 2 |
|  | Out8 count   | Uint_32  | 4      |   | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF                      |
|  | Ext.Out1 state   | Enum_8   | 1      | LMS1xx  | Not active: 0                                    | Not active: 0                                    |

| Telegram structure: sRA/sSN LIDoutputstate |                |          |        |        |                                 |                                   |
|--|----------------|----------|--------|--------|---------------------------------|-----------------------------------|
| Telegram part                              | Description    | Variable | Length | Sensor | Values CoLa A (ASCII)           | Values CoLa B (Binary)            |
| LMS5xx                                     |                |          |        | LMS5xx | Active: 1                       | Active: 1                         |
|  | Ext.Out1 count | Uint_32  | 4      |        | Output not used: 2              | Output not used: 2                |
|  | Ext.Out2 state | Enum_8   | 1      |        | 0 ... FFFFFFFFh                 | 00 00 00 00 ... FF FF FF FF       |
|  | Ext.Out2 count | Uint_32  | 4      |        | Not active: 0                   | Not active: 0                     |
|  | Ext.Out3 state | Enum_8   | 1      |        | Active: 1                       | Active: 1                         |
|  | Ext.Out3 count | Uint_32  | 4      |        | Output not used: 2              | Output not used: 2                |
|  | Ext.Out4 state | Enum_8   | 1      |        | 0 ... FFFFFFFFh                 | 00 00 00 00 ... FF FF FF FF       |
|  | Ext.Out4 count | Uint_32  | 4      |        | Not active: 0                   | Not active: 0                     |
|  | Ext.Out5 state | Enum_8   | 1      |        | Active: 1                       | Active: 1                         |
|  | Ext.Out5 count | Uint_32  | 4      |        | Output not used: 2              | Output not used: 2                |
|  | Ext.Out6 state | Enum_8   | 1      |        | 0 ... FFFFFFFFh                 | 00 00 00 00 ... FF FF FF FF       |
|  | Ext.Out6 count | Uint_32  | 4      |        | Not active: 0                   | Not active: 0                     |
|  | Ext.Out7 state | Enum_8   | 1      |        | Active: 1                       | Active: 1                         |
|  | Ext.Out7 count | Uint_32  | 4      |        | Output not used: 2              | Output not used: 2                |
|  | Ext.Out8 state | Enum_8   | 1      |        | 0 ... FFFFFFFFh                 | 00 00 00 00 ... FF FF FF FF       |
|  | Ext.Out8 count | Uint_32  | 4      |        | Not active: 0                   | Not active: 0                     |
| Time                                       | States code    | Enum_8   | 1      | All    | No time data: 0<br>Time data: 1 | No time data: 00<br>Time data: 01 |

| Telegram structure: sRA/sSN LIDoutputstate                                      |             |          |        |        |                       |                             |
|---|-------------|----------|--------|--------|-----------------------|-----------------------------|
| Telegram part   | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)      |
| Time Block<br><br>(sensor-time from the last change of min. one of the outputs) | Year        | Array    | 2      | LMS1xx | e.g. 1970             | e.g. 07 B2                  |
|   | Month       |          | 1      |        | 1 ... 12              | 01 ... 0C                   |
|   | Day         |          | 1      |        | 1 ... 31              | 01 ... 1F                   |
|   | Hour        |          | 1      |        | 0 ... 23              | 00 ... 17                   |
|   | Minute      |          | 1      |        | 0 ... 59              | 00 ... 3B                   |
|   | Second      |          | 1      |        | 0 ... 59              | 00 ... 3B                   |
|   | Microsecond |          | 4      |        | 0 ... 999999          | 00 00 00 00 ... 00 0F 42 3F |

Table 254: Telegram structure: sRA/sSN LIDoutputstate

## **Example: sRA LIDoutputstate**

|        |        |   |
|--------|--------|---|
| ColA A | ASCII  | <STX>sRA[SPC]LIDoutputstate[SPC]1[SPC]41F84E C5[SPC]1[SPC]5[SPC]1[SPC]5[SPC]5[SPC]1[SPC]5[SPC]2[SPC]0[SPC]2[SPC]0[SPC]2[SPC]0[SPC]2[SPC]0[SPC]2[SPC]0[SPC]2[SPC]0[SPC]2[SPC]0[SPC]1[SPC]7D9[SPC]2[SPC]12[SPC]C[SPC]29[SPC]E[SPC]975E0<ETX>  |
|        | Hex    | 02 73 52 41 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 20 31 20 41 F8 4E C5 20 31 20 35 20 31 20 35 20 31 20 35 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 32 20 30 20 31 20 07 D9 20 02 20 12 20 0C 20 29 20 0E 20 09 75 E0 03 |
| ColA B | Binary | 02 02 02 02 00 00 00 5D 73 52 41 20 4C 49 44 6F 75 74 70 75 74 73 74 61 74 65 20 00 01 41 F8 4E C5 01 00 00 00 05 01 00 00 00 05 01 00 00 00 05 02 00 00 00 00 02 00 00 00 00 00 02 00 00 00 00 00 01 07 D9 02 12 0C 29 0E 00 09 75 E0 06   |

Table 255: Example: sRA LIDoutputstate

#### 4.7.4 Set output state



## **NOTE**

**Output source needs to be set to “SOPAS command” and the port configured as Output (in case of I/O).**



| Telegram structure: sMN mDOSetOutput |                  |          |        |          |                          |                                     |
|--------------------------------------|------------------|----------|--------|----------|--------------------------|-------------------------------------|
| Telegram part                        | Description      | Variable | Length | Sensor   | Values CoLa A (ASCII)    | Values CoLa B (Binary)              |
| Command type                         | Method           | String   | 3      | All      | sMN                      | 73 4D 4E                            |
| Command                              | Set output state | String   | 12     | All      | mDOSetOutput             | 6D 44 4F 53 65 74 4F 75 74 70 75 74 |
| Output number                        |                  | Uint_8   | 1      | LMS1xx   | 1 ... 3                  | 01 ... 03                           |
|                                      |                  |          |        | LMS12x   | 1 ... 2                  | 01 ... 02                           |
|                                      |                  |          |        | LMS 4000 | 1 ... 4                  | 01 ... 04                           |
|                                      |                  |          |        | LMS5xx   | 1 ... 6                  | 01 ... 06                           |
|                                      |                  |          |        | TiMxxx   | 1                        | 01                                  |
| Output state                         |                  | Enum_8   | 1      | All      | Inactive: 0<br>Active: 1 | Inactive: 00<br>Active: 01          |

Table 256: Telegram structure: sMN mDOSetOutput

**Example: sMN mDOSetOutput**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]mDOSetOutput[SPC]1[SPC]1<ETX>  |
|        | Hex    | 02 73 4D 4E 20 6D 44 4F 53 65 74 4F 75 74 70 75 74 20 31 20 31 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 4D 4E 20 6D 44 4F 53 65 74 4F 75 74 70 75 74 20 01 01 69 |

Table 257: Example: sMN mDOSetOutput



| Telegram structure: sAN mDOSetOutput |                  |          |        |        |                        |                                     |
|--------------------------------------|------------------|----------|--------|--------|------------------------|-------------------------------------|
| Telegram part                        | Description      | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)              |
| Command type                         | Answer           | String   | 3      | All    | sAN                    | 73 41 4E                            |
| Command                              | Set output state | String   | 12     | All    | mDOSetOutput           | 6D 44 4F 53 65 74 4F 75 74 70 75 74 |
| Status Code                          | Status code      | Bool_1   | 1      | All    | Error: 0<br>Success: 1 | Error: 00<br>Success: 01            |


Table 258: Telegram structure: sAN mDOSetOutput

**Example: sAN mDOSetOutput**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN[SPC]mDOSetOutput[SPC]1<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 44 4F 53 65 74 4F 75 74 70 75 74 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 41 4E 20 6D 44 4F 53 65 74 4F 75 74 70 75 74 20 01 67 |

Table 259: Example: sAN mDOSetOutput

### 4.7.5 Change output 6/3 function

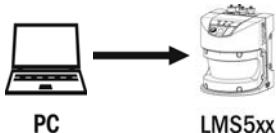


| Telegram structure: sWN D06Fnc/sWN D03Fnc<br>(Authorized client) |                 |          |        |             |   |                        |
|--|-----------------|----------|--------|-------------|---|------------------------|
| Telegram part  | Description     | Variable | Length | Sensor      | Values CoLa A (ASCII)   | Values CoLa B (Binary) |
| Command type   | Write           | String   | 3      | All         | sWN   | 73 57 4E               |
| Command  | Output function | String   | 6      | LMS5xx PRO  | D06Fnc  | 44 4F 36 46 6E 63      |
|  |                 |          |        | LMS5xx Lite | D03Fnc  | 44 4F 33 46 6E 63      |
| Output state   |                 | Enum_8   | 1      | All         | No Function: 0<br>SOPAS command: 1<br>Device Ready: 2<br>Application: 3<br>Appl./Device Ready: 4<br>Dev.ready/Contamination: 5<br>Contamination: 6<br>Master Synchronisation: 7 | Not available          |

Table 260: Telegram structure PRO: sWN D06Fnc/Lite: sWN D03Fnc

**Example: sWN D06Fnc → Set Out6 to Master Synchronisation**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]D06Fnc[SPC]7<ETX>            |
|        | Hex    | 02 73 57 4E 20 44 4F 36 46 6E 63 20 37 03 |
| CoLa B | Binary | Unavailable with current firmware.        |

Table 261: Example: sWN D06Fnc → Out6 to master sync

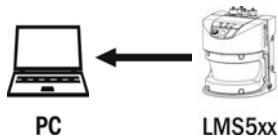

| Telegram structure: sWA DO6Fnc |                 |          |        |             |                       |                        |
|--------------------------------|-----------------|----------|--------|-------------|-----------------------|------------------------|
| Telegram part                  | Description     | Variable | Length | Sensor      | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer          | String   | 3      | All         | sWA                   | 73 57 41               |
| Command                        | Output function | String   | 6      | LMS5xx PRO  | DO6Fnc                | 44 4F 36 46 6E 63      |
|                                |                 |          |        | LMS5xx Lite | DO3Fnc                | 44 4F 33 46 6E 63      |

Table 262: Telegram structure: PRO: sWN DO6Fnc/Lite: sWN DO3Fnc

#### Example: sWA DO6Fnc

|        |        |                                     |
|--------|--------|-------------------------------------|
| CoLa A | ASCII  | <STX>sWA{SPC}DO6Fnc<ETX>            |
|        | Hex    | 02 73 57 41 20 44 4F 36 46 6E 63 03 |
| CoLa B | Binary | Not available with firmware V1.10   |

Table 263: Example: sWA DO6Fnc

#### 4.7.6 Change output 1 function



| Telegram structure: sWN DO1Fnc<br>(Authorized client) |                   |          |        |        |  |  |
|---|-------------------|----------|--------|--------|--|--|
| Telegram part   | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type  | Write             | String   | 3      | All    | sWN  | 73 57 4E   |
| Command   | Output function   | String   | 6      | All    | DO1Fnc   | 44 4F 31 46 6E 63  |
| Output 1 function                                     | Selected function | Enum_8   | 1      | All    | No function: 0<br>Command: 1<br>Device ready: 2<br>Application dev. ready: 3<br>Sync pulse: 4<br>Sync index: 5 | No function: 00<br>Command: 01<br>Device ready: 02<br>Application dev. ready: 03<br>Sync pulse: 04<br>Sync index: 05 |

Table 264: Telegram structure: sWN DO1Fnc

**Example: sWN D01Fnc → Set Out1 to Device Ready**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN[SPC]D01Fnc[SPC]2<ETX>                                 |
|        | Hex    | 02 73 57 4E 20 44 4F 31 46 6E 63 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0C 73 57 4E 20 44 4F 31 46 6E 63 20 02 19 |

Table 265: Example: sWN D01Fnc → Out1 to device ready



**Telegram structure: sWA D01Fnc**

| Telegram part | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|---------------|-----------------|----------|--------|--------|-----------------------|------------------------|
| Command type  | Answer          | String   | 3      | All    | sWA                   | 73 57 41               |
| Command       | Output function | String   | 6      | All    | D01Fnc                | 44 4F 31 46 6E 63      |

Table 266: Telegram structure: sWA D01Fnc

**Example: sWA D01Fnc**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]D01Fnc<ETX>                                 |
|        | Hex    | 02 73 57 41 20 44 4F 31 46 6E 63 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 57 41 20 44 4F 31 46 6E 63 34 |

Table 267: Example: sWA D01Fnc

Functions:

No function: 0

Command: 1

Device ready (for field application): 2

Application dev. ready: 3

Sync pulse (10 ms puls when timer register is read “sRN STlms”): 4

Sync index: 5

The output signal depends on the scanner head position  
(high (+24 V): 0° ... 179° /low (0 V): 180° ... 360°).

#### 4.7.7 Change output 1 logic state



| Telegram structure: sWN DO1Logic<br>(Authorized client) |                     |          |        |        |                                 |                                   |
|---|---------------------|----------|--------|--------|---------------------------------|-----------------------------------|
| Telegram part   | Description         | Variable | Length | Sensor | Values CoLa A (ASCII)           | Values CoLa B (Binary)            |
| Command type  | Write               | String   | 3      | All    | sWN                             | 73 57 4E                          |
| Command   | Output function     | String   | 8      | All    | DO1Logic                        | 44 4F 31 4C 6F 67 69 63           |
| Output 1 logic state                                    | State of the output | Enum_8   | 1      | All    | Active_High: 0<br>Active_Low: 1 | Active_High: 00<br>Active_Low: 01 |

Table 268: Telegram structure: sWN DO1Logic

#### Example: sWN DO1Logic → Active\_High

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN SPC DO1Logic SPC 1<ETX>  |
|        | Hex    | 02 73 57 4E 20 44 4F 31 4C 6F 67 69 63 20 31 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E 73 57 4E 20 44 4F 31 4C 6F 67 69 63 20 01 1F |

Table 269: Example: sWN DO1Logic → Active\_Low



| Telegram structure: sWA DO1Logic |              |          |        |        |                       |                         |
|----------------------------------|--------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Answer       | String   | 3      | All    | sWA                   | 73 57 41                |
| Command                          | Output logic | String   | 8      | All    | DO1Logic              | 44 4F 31 4C 6F 67 69 63 |

Table 270: Telegram structure: sWA DO1Logic

#### Example: sWA DO1Logic

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA SPC DO1Logic<ETX>  |
|        | Hex    | 02 73 57 41 20 44 4F 31 4C 6F 67 69 63 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0C 73 57 41 20 44 4F 31 4C 6F 67 69 63 31 |

Table 271: Example: sWA DO1Logic

**4.7.8 Change output 2 function**



| Telegram structure: sWN DO2Fnc<br>(Authorized client) |                 |          |        |        |  |  |
|---|-----------------|----------|--------|--------|--|--|
| Telegram part   | Description     | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Command type  | Write           | String   | 3      | All    | sWN  | 73 57 4E   |
| Command   | Output function | String   | 6      | All    | DO2Fnc   | 44 4F 32 46 6E 63  |
| Output 2 function                                     | Code number     | Enum_8   | 1      | All    | No function: 0<br>Command: 1<br>Device ready: 2<br>Application dev. ready: 3 | No function: 00<br>Command: 01<br>Device ready: 02<br>Application dev. ready: 03 |

Table 272: Telegram structure: sWN DO2Fnc

**Example: sWN DO2Fnc → Out2 to device ready**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}DO2Fnc{SPC}2<ETX>                                 |
|        | Hex    | 02 73 57 4E 20 44 4F 32 46 6E 63 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0C 73 57 4E 20 44 4F 32 46 6E 63 20 02 1A |

Table 273: Example: sWN DO2Fnc → Out2 to device ready



| Telegram structure: sWA DO2Fnc |                 |          |        |        |                       |                        |
|--------------------------------|-----------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer          | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Output function | String   | 6      | All    | DO2Fnc                | 44 4F 32 46 6E 63      |

Table 274: Telegram structure: sWA DO2Fnc

**Example: sWA DO2Fnc**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}DO2Fnc<ETX>                                 |
|        | Hex    | 02 73 57 41 20 44 4F 32 46 6E 63 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 57 41 20 44 4F 32 46 6E 63 37 |

Table 275: Example: sWA DO2Fnc

#### 4.7.9 Change output 2 logic state



| Telegram structure: sWN DO2Logic<br>(Authorized client) |                     |          |        |        |                                 |                                   |
|---|---------------------|----------|--------|--------|---------------------------------|-----------------------------------|
| Telegram part   | Description         | Variable | Length | Sensor | Values CoLa A (ASCII)           | Values CoLa B (Binary)            |
| Command type  | Write               | String   | 3      | All    | sWN                             | 73 57 4E                          |
| Command   | Output function     | String   | 8      | All    | DO2Logic                        | 44 4F 32 4C 6F 67 69 63           |
| Output 2 logic state                                    | State of the output | Enum_8   | 1      | All    | Active_High: 0<br>Active_Low: 1 | Active_High: 00<br>Active_Low: 01 |

Table 276: Telegram structure: sWN DO2Logic

**Example: sWN DO2Logic → Active\_High**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]DO2Logic[SPC]0<ETX>  |
|        | Hex    | 02 73 57 4E 20 44 4F 32 4C 6F 67 69 63 20 30 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E 73 57 4E 20 44 4F 32 4C 6F 67 69 63 20 00 1C |

Table 277: Example: sWN DO2Logic → Active\_High



| Telegram structure: sWA DO2Logic |              |          |        |        |                       |                         |
|----------------------------------|--------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Answer       | String   | 3      | All    | sWA                   | 73 57 41                |
| Command                          | Output logic | String   | 8      | All    | DO2Logic              | 44 4F 32 4C 6F 67 69 63 |


Table 278: Telegram structure: sWA DO2Logic

**Example: sWA DO2Logic**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]DO2Logic<ETX>  |
|        | Hex    | 02 73 57 41 20 44 4F 32 4C 6F 67 69 63 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0C 73 57 41 20 44 4F 32 4C 6F 67 69 63 32 |

Table 279: Example: sWA DO2Logic

### 4.7.10 Set synchronization mode

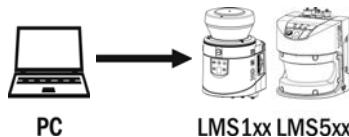

| Telegram structure: sWN SYMode<br>(Authorized client) |                           |          |        |        |  |                        |
|---|---------------------------|----------|--------|--------|--|------------------------|
| Telegram part   | Description               | Variable | Length | Sensor | Values CoLa A (ASCII)                              | Values CoLa B (Binary) |
| Command type  | Write                     | String   | 3      | All    | sWN  | 73 57 4E               |
| Command   | Set sync mode             | String   | 6      | All    | SYMode   | 53 59 4D 6F 64 65      |
| Sync mode data  | Synchronization mode data | Bool_1   | 1      | All    | No sync = 0<br>Sync by wire = 1<br>Sync by CAN = 2 | Not possible           |

Table 280: Telegram structure: sWN SYMode

#### Example: sWN SYMode

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]SYMode[SPC]1<ETX>            |
|        | Hex    | 02 73 57 4E 20 53 59 4D 6F 64 65 20 31 03 |
| CoLa B | Binary | Not possible                              |

Table 281: Example: sWN SYMode



| Telegram structure: sWA SYMode |               |          |        |        |                       |                        |
|--------------------------------|---------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer        | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Set sync mode | String   | 6      | All    | SYMode                | 53 59 4D 6F 64 65      |


Table 282: Telegram structure: sWA SYMode

#### Example: sWA SYMode

|        |        |                                     |
|--------|--------|-------------------------------------|
| CoLa A | ASCII  | <STX>sWA[SPC]SYMode<ETX>            |
|        | Hex    | 02 73 57 41 20 53 59 4D 6F 64 65 03 |
| CoLa B | Binary | Not possible                        |

Table 283: Example: sWA SYMode

#### 4.7.11 Set synchronization phase

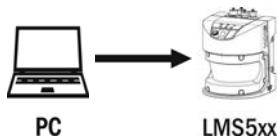


| Telegram structure: sWN SYPhase<br>(Authorized client) |                            |          |        |        |                                      |                        |
|--|----------------------------|----------|--------|--------|--------------------------------------|------------------------|
| Telegram part  | Description                | Variable | Length | Sensor | Values CoLa A (ASCII)                | Values CoLa B (Binary) |
| Command type   | Write                      | String   | 3      | All    | sWN                                  | Not possible           |
| Command  | Set sync phase             | String   | 7      | All    | SYPhase                              | Not possible           |
| Sync phase data  | Synchronization phase data | Int_16   | 2      | All    | -180d ... +180d<br>(FF4Ch ... 00B4h) | Not possible           |

Table 284: Telegram structure: sWN SYPhase

#### Example: sWN SYPhase +90

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}SYPhase{SPC}+90<ETX>                  |
|        | Hex    | 02 73 57 4E 20 53 59 50 68 61 73 65 20 2B 39 30 03 |
| CoLa B | Binary | Not possible                                       |

Table 285: Example: sWN SYPhase +90

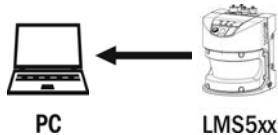

| Telegram structure: sWA SYPhase |                |          |        |        |                       |                        |
|---------------------------------|----------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                   | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                    | Answer         | String   | 3      | All    | sWA                   | Not possible           |
| Command                         | Set sync phase | String   | 7      | All    | SYPhase               | Not possible           |


Table 286: Telegram structure: sWA SYPhase

#### Example: sWA SYPhase

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}SYPhase<ETX>              |
|        | Hex    | 02 73 57 41 20 53 59 50 68 61 73 65 03 |
| CoLa B | Binary | Not possible                           |

Table 287: Example: sWA SYPhase

### 4.7.12 Change input 4 function

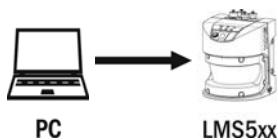


| Telegram structure: sWN DO3And4Fnc<br>(Authorized client) |                |          |        |        |   |                               |
|---|----------------|----------|--------|--------|---|-------------------------------|
| Telegram part   | Description    | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)        |
| Command type  | Write          | String   | 3      | All    | sWN   | 73 57 4E                      |
| Command   | Input function | String   | 10     | All    | DO3And4Fnc  | 44 4F 33 41 6E 64 34 46 6E 63 |
| Input state   | Code number    | Enum_8   | 1      | All    | No function: 0<br>Encoder: 1<br>Slave sync: 2<br>Digital input: 3 |                               |

Table 288: Telegram structure: sWN DO3And4Fnc

**Example: sWN In4 → In3+4 to slave sync**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}DO3And4Fnc{SPC}2<ETX>                    |
|        | Hex    | 02 73 57 4E 20 44 4F 33 41 6E 64 34 46 6E 63 20 02 03 |
| CoLa B | Binary | Not available with firmware V1.10                     |

Table 289: Example: sWN In4 → In3+4 to slave sync

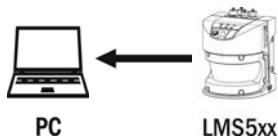

| Telegram structure: sWA DO3And4Fnc |                |          |        |        |                       |                               |
|------------------------------------|----------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Answer         | String   | 3      | All    | sWA                   | 73 57 41                      |
| Command                            | Input function | String   | 10     | All    | DO3And4Fnc            | 44 4F 33 41 6E 64 34 46 6E 63 |

Table 290: Telegram structure: sWA DO3And4Fnc

**Example: sWA DO3And4Fnc**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}D03And4Fnc<ETX>                    |
|        | Hex    | 02 73 57 41 20 44 4F 33 41 6E 64 34 46 6E 63 03 |
| CoLa B | Binary | Not available with firmware V1.10               |

Table 291: Example: sWA DO3And4Fnc

**4.7.13 Set debouncing time for input x**

The telegram applies for the inputs 1 to 4 (DIxDebTim, x = 1 ... 4). The following tables show the data for input 3.



| Telegram structure: sWN DI3DebTim<br>(Authorized client) |                                 |          |        |        |                                   |                            |
|--|---------------------------------|----------|--------|--------|-----------------------------------|----------------------------|
| Telegram part  | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII)             | Values CoLa B (Binary)     |
| Command type   | Write                           | String   | 3      | All    | sWN                               | 73 57 4E                   |
| Command  | Set debouncing time for input 3 | String   | 9      | All    | DI3DebTim                         | 44 49 33 44 65 62 54 69 6D |
| Debouncing time data                                     | [ms]                            | Uint_16  | 2      | All    | 0d ... +10000d<br>(00h ... 2710h) | 00 00 ... 27 10            |

Table 292: Telegram structure: sWN DI3DebTim

**Example: sWN DI3DebTim**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWN{SPC}DI3DebTim{SPC}+10<ETX>  |
|        | Hex    | 02 73 57 4E 20 44 49 33 44 65 62 54 69 6D 20 2B 31 30 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 57 4E 20 44 49 33 44 65 62 54 69 6D 20 00 0A 77 |

Table 293: Example: sWN DI3DebTim



| Telegram structure: sWA DI3DebTim |                                 |          |        |        |                       |                            |
|-----------------------------------|---------------------------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Answer                          | String   | 3      | All    | sWA                   | 73 57 41                   |
| Command                           | Set debouncing time for input 3 | String   | 9      | All    | DI3DebTim             | 44 49 33 44 65 62 54 69 6D |


Table 294: Telegram structure: sWA DI3DebTim

#### Example: sWA DI3DebTim

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]DI3DebTim<ETX>  |
|        | Hex    | 02 73 57 4E 20 44 49 33 44 65 62 54 69 6D 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 57 41 20 44 49 33 44 65 62 54 69 6D 20 48 |

Table 295: Example: sWA DI3DebTim

#### 4.7.14 Read status of external sync signal

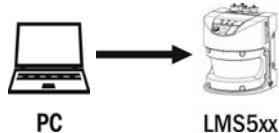


| Telegram structure: sRN SYextmon |                                |          |        |        |                       |                         |
|----------------------------------|--------------------------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description                    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Read                           | String   | 3      | All    | sRN                   | 73 52 4E                |
| Command                          | Status of external sync signal | String   | 8      | All    | SYextmon              | 53 59 65 78 74 6D 6F 6E |

Table 296: Telegram structure: sRN SYextmon

#### Example: sRN SYextmon

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]SYextmon<ETX>                                     |
|        | Hex    | 02 73 52 4E 20 53 59 65 78 74 6D 6F 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0C 73 52 4E 20 53 59 65 78 74 6D 6F 6E 40 |

Table 297: Example: sRN SYextmon

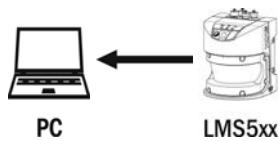

| Telegram structure: sRA SYextmon |   |          |        |        |  |  |
|----------------------------------|---|----------|--------|--------|--|--|
| Telegram part                    | Description                                     | Variable | Length | Sensor | Values CoLa A (ASCII)                            | Values CoLa B (Binary)                               |
| Command type                     | Answer  | String   | 3      | All    | sRA  | 73 52 41   |
| Command                          | Status of external sync signal                  | String   | 8      | All    | SYextmon   | 53 59 65 78 74 6D 6F 6E                              |
| Sync status data                 | Synchronization status data                     | Uint_8   | 1      | All    | None: 1<br>Too slow: 2<br>Good: 4<br>Too fast: 8 | None: 01<br>Too slow: 02<br>Good: 04<br>Too fast: 08 |
| Signal frequency                 | [Frequency in Hz as float according to IEEE754] | Real     | 4      | All    | 0h ... FFFFFFFFh                                 | 00 00 00 00 ... FF FF FF FF                          |

Table 298: Telegram structure: sRA SYextmon


**Example: sRA SYextmon (49.9 Hz)**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}SYextmon{SPC}4{SPC}4247BD87<ETX>                                    |
|        | Hex    | 02 73 52 41 20 53 59 65 78 74 6D 6F 6E 20 04 42 47 BD 87 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 41 20 53 59 65 78 74 6D 6F 6E 20 04 42 47 BD 87 54 |

Table 299: Example: sRA SYextmon

## 4.8 Status

### 4.8.1 Read contamination status of the LMS

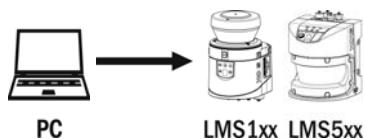


| Telegram structure: sRN LCMstate |               |          |        |        |                       |                         |
|----------------------------------|---------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Read          | String   | 3      | All    | sRN                   | 73 52 4E                |
| Command                          | Status of LMS | String   | 8      | All    | LCMstate              | 4C 43 4D 73 74 61 74 65 |

Table 300: Telegram structure: sRN LCMstate

#### Example: sRN LCMstate

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LCM state <ETX>                                   |
|        | Hex    | 02 73 52 4E 20 4C 43 4D 73 74 61 74 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 52 4E 20 4C 43 4D 73 74 61 74 65 7A |

Table 301: Example: sRN LCMstate

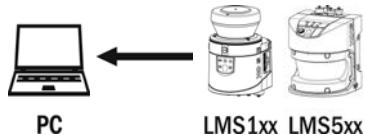

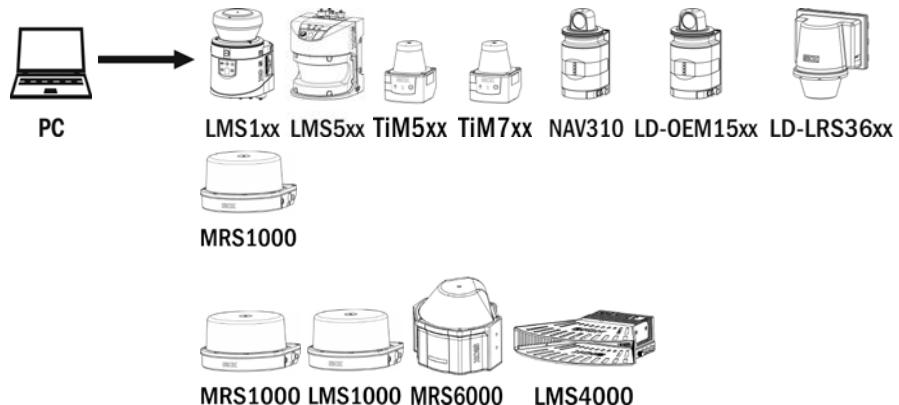
| Telegram structure: sRA LCMstate |               |          |        |        |   |   |
|----------------------------------|---------------|----------|--------|--------|---|---|
| Telegram part                    | Description   | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type                     | Answer        | String   | 3      | All    | sRA   | 73 52 41  |
| Command                          | Status of LMS | String   | 8      | All    | LCMstate  | 4C 43 4D 73 74 61 74 65   |
| Status code                      |               | Enum_8   | 1      | All    | No contamination: 0<br>Contamination warning: 1<br>Contamination error: 2<br>Contamination measurement functionality defective: 3 | No contamination: 00<br>Contamination warning: 01<br>Contamination error: 02<br>Contamination measurement functionality defective: 03 |

Table 302: Telegram structure: sRA LCMstate

**Example for LMS100: sRA LCMstate**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LCMstate{SPC}0<ETX>                                     |
|        | Hex    | 02 73 52 41 20 4C 43 4D 73 74 61 74 65 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 52 41 20 4C 43 4D 73 74 61 74 65 20 00 55 |

Table 303: Example for LMS100: sRA LCMstate

**4.8.2 Read firmware version****Telegram structure: sRN Deviceldent**


| Telegram part | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
|---------------|-----------------------|----------|--------|--------|-----------------------|----------------------------------|
| Command type  | Read                  | String   | 3      | All    | sRN                   | 73 52 4E                         |
| Command       | Read firmware version | String   | 11     | All    | Deviceldent           | 44 65 76 69 63 65 49 64 65 6E 74 |

Table 304: Telegram structure: sRN Deviceldent

**Example: sRN Deviceldent**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}Deviceldent<ETX>   |
|        | Hex    | 02 73 52 4E 20 44 65 76 69 63 65 49 64 65 6E 74 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 4E 20 44 65 76 69 63 65 49 64 65 6E 74 25 |

Table 305: Example: sRN Deviceldent

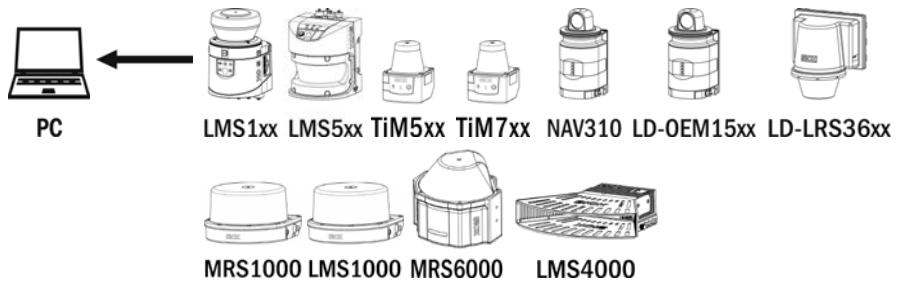

| Telegram structure: sRA Deviceldent |                                      |          |        |        |                       |                                     |
|-------------------------------------|--------------------------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                       | Description                          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                        | Answer                               | String   | 3      | All    | sRA                   | 73 52 41                            |
| Command                             |                                      | String   | 11     | All    | Deviceldent           | 44 65 76 69 63 65 49 64<br>65 6E 74 |
| Value                               | Length of name of firmware version   | Enum_16  | 1      | All    | 0 ... 22h             | 0 ... 22h                           |
| Value                               | Name of firmware version             | String   |        | All    | (See example)         | (See example)                       |
| Value                               | Length of number of firmware version | Enum_16  | 1      | All    | 0 ... 22h             | 0 ... 22h                           |
| Value                               | Number of firmware version           | String   |        | All    | (See example)         | (See example)                       |

Table 306: Telegram structure: sRA Deviceldent

#### Example: sRA Deviceldent


|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}Deviceldent{SPC}10{SPC}LMS10x_FieldEval{SPC}10{SPC}V1.36-21.10.2010<ETX>   |
|        | Hex    | Always ASCII answer   |
| CoLa B | Binary | 02 02 02 02 00 00 00 34 73 52 41 20 44 65 76 69 63 65 49 64 65 6E 74 20 00 10 4C 4D 53 31 30 78<br>5F 46 69 65 6C 64 45 76 61 6C 00 10 56 31 2E 33 36 2D 32 31 2E 31 30 2E 32 30 31 30 62 |

Table 307: Example: sRA Deviceldent

#### 4.8.3 Read the device state

This telegram reads the general device state.

**Remark:** The status of the measurement function of LMS1 and LMS5 can be read separately with the telegram STlms

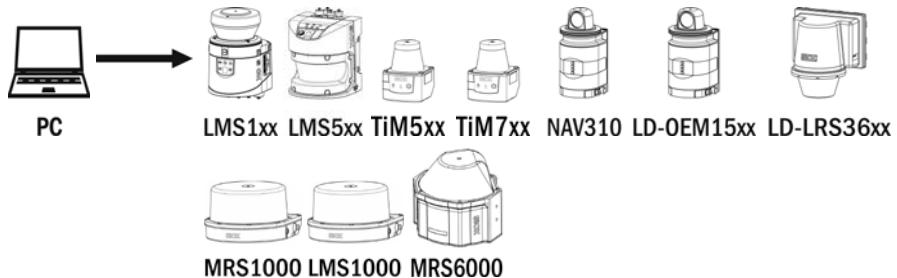


| Telegram structure: sRN SCdevicestate |             |          |        |        |                       |   |
|---------------------------------------|-------------|----------|--------|--------|-----------------------|---|
| Telegram part                         | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                          | Read        | String   | 3      | All    | sRN                   | 73 52 4E                                  |
| Command                               |             | String   | 13     | All    | SCdevicestate         | 53 43 64 65 76 69 63 65<br>73 74 61 74 65 |

Table 308: Telegram structure: sRN SCdevicestate

#### Example: sRN SCdevicestate

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]SCdevicestate<ETX>   |
|        | Hex    | 02 73 52 4E 20 53 43 64 65 76 69 63 65 73 74 61 74 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 4E 20 53 43 64 65 76 69 63 65 73 74 61 74 65 30 |

Table 309: Example: sRN SCdevicestate

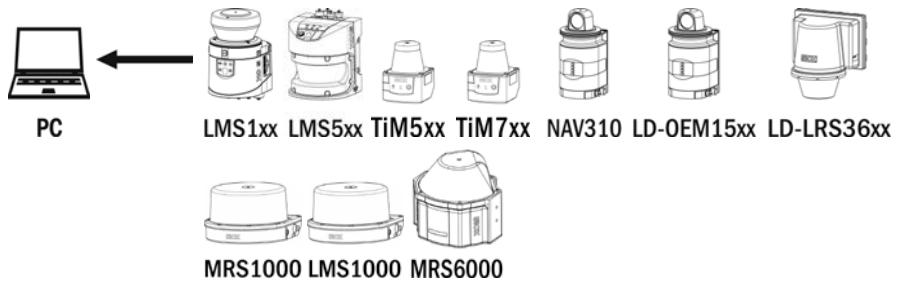

| Telegram structure: sRA SCdevicestate |             |          |        |   |   |   |
|---------------------------------------|-------------|----------|--------|---|---|---|
| Telegram part                         | Description | Variable | Length | Sensor  | Values CoLa A (ASCII)                         | Values CoLa B (Binary)                            |
| Command type                          | Answer      | String   | 3      | All   | sRA   | 73 52 41  |
| Command                               |             | String   | 13     | All   | SCdevicestate                                 | 53 43 64 65 76 69 63 65<br>73 74 61 74 65         |
| Status code                           | Code number | Enum_8   | 1      | LMS1xx<br>NAV310<br>LD-OEM<br>15xx<br>LD-LRS<br>36xx<br>MRS6000 | Busy: 0<br>Ready: 1<br>Error: 2               | Busy: 00<br>Ready: 01<br>Error: 02                |
|                                       |             |          |        | LMS5xx<br>TiMxxx<br>MRS1000<br>LMS1000                          | Busy: 0<br>Ready: 1<br>Error: 2<br>Standby: 3 | Busy: 00<br>Ready: 01<br>Error: 02<br>Standby: 03 |

Table 310: Telegram structure: sRA SCdevicestate

**Example: sRA SCdevicestate**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}SCdevicestate{SPC}0<ETX>   |
|        | Hex    | 02 73 52 41 20 53 43 64 65 76 69 63 65 73 74 61 74 65 20 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 52 41 20 53 43 64 65 76 69 63 65 73 74 61 74 65 20 00 1F |

Table 311: Example: sRA SCdevicestate

#### 4.8.4 Status commands for LD-XXX and NAV310

The following status commands will be explained in the subsequent sections:

- [LMCmeasstate](#): Status of the internal Statemachine
- [SCdevicestate](#): Status of the Sensors ( actual measurement status )
- [EMCustomerInfo](#): Additional error information
- [LDMSenStat](#): Status of the state machine of the measurement core, Motor status

##### How status commands for LD-XXX and NAV310 work together:

- If [LMCmeasstate](#) changes to "Idle" or an other status, although the measurement status "Measure2D" is expected, there is an error during the measurement (or during start up of the measurement).
- [SCdevicestate](#) is always "Ready", if the measurement is active.  
If "Busy" will be indicated the unit is not measuring ( e.g. IDLE ). If there is any failure "Error" will be indicated. (However [LMCmeasstate](#) could indicate "Measure2D", if the failure occurs during the measurement, because it is only an indication of the status of the State machine ).
- In case of a failure [EMCustomerInfo](#) can provide an information about the error.  
In case of an motor failure there are following condition visible:
  - Motor blocked during operation → DEVICE\_FAILURE
  - Motor blocked during spin up → CHECK\_PARAMETER
- It is also possible to read [LDMSenStat](#) (and to register as an event). This value equals the Sensorstatus of the NAV310/LD-XXX. A status "B1" of the measurement core means "Motor error and Idle".
- During the measurement it is possible to monitor a deviation of the target rotation frequency. (If the device detects rotation values that are too slow, it will terminate the measurement.)

In case of an failure this value will not always be updated, therefore it is necessary to monitor [LMCmeasstate](#) and [SCdevicestate](#) in parallel.



##### NOTE

- In case of an failure ( Scanner does not change to MEASURE2D or switches back to IDLE ), it is necessary to send the command [LMCstopmeas](#) ( even if the Status is indicated as IDLE )
- If at [EMCustomerInfo](#) the message CHECK\_PARAMETER is indicated, a reset is only possible by a power cycle of the scanner.

**Ask for Device Measurement State**



| Telegram structure: sRN LMCmeasstate |                           |          |        |        |                       |                                     |
|--------------------------------------|---------------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                        | Description               | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                         | Read                      | String   | 3      | All    | sRN                   | 73 52 4E                            |
| Command                              | Ask for measurement state | String   | 12     | All    | LMCmeasstate          | 4C 4D 43 6D 65 61 73 73 74 61 74 65 |

Table 312: Telegram structure: sRN LMCmeasstate

**Example: sRN LMCmeasstate**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]LMCmeasstate<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 4D 43 6D 65 61 73 73 74 61 74 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 4E 20 4C 4D 43 6D 65 61 73 73 74 61 74 65 30 |

Table 313: Example: sRN LMCmeasstate



| Telegram structure: sRA LMCmeasstate |                           |          |        |        |  |  |
|--------------------------------------|---------------------------|----------|--------|--------|--|--|
| Telegram part                        | Description               | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)                           |
| Command type                         | Answer                    | String   | 3      | All    | sRA  | 73 52 41   |
| Command                              | Report measurement state  | String   | 12     | All    | LMCmeasstate   | 4C 4D 43 6D 65 61 73 73 74 61 74 65              |
| Status code                          | Current measurement state | Enum_16  | 2      | All    | Idle: 3<br>Ready 2D: 6<br>Measure 2D: 7<br><br>Other state codes may show up during booting, firmware update or transition between states. | Idle: 0003<br>Ready 2D: 0006<br>Measure 2D: 0007 |

Table 314: Telegram structure: sRA LMCmeasstate

**Example: sRA LMCmeasstate is Measure 2D**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}LMCmeasstate{SPC}7<ETX>  |
|        | Hex    | 02 73 52 41 20 4C 4D 43 6D 65 61 73 73 74 61 74 65 20 00 07 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 52 41 20 4C 4D 43 6D 65 61 73 73 74 61 74 65 20 00 07 1F |

Table 315: Example: sRA LMCmeasstate is Measure 2D

**Ask for customer info of sensor**

This telegram will provide additional error information.



| Telegram structure: sRN EMCustomerInfo |                       |          |        |        |                       |   |
|--|-----------------------|----------|--------|--------|-----------------------|---|
| Telegram part                          | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type                           | Read                  | String   | 3      | All    | sRN                   | 73 52 4E                                  |
| Command                                | Ask for customer info | String   | 14     | All    | EMCustomerInfo        | 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F |

Table 316: Telegram structure: sRN EMCustomerInfo

**Example: sRN EMCustomerInfo**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}EMCustomerInfo<ETX>   |
|        | Hex    | 02 73 52 4E 20 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F 4D |

Table 317: Example: sRN EMCustomerInfo



| Telegram structure: sRA EMCustomerInfo |                      |          |        |        |   |   |
|--|----------------------|----------|--------|--------|---|---|
| Telegram part                          | Description          | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type                           | Answer               | String   | 3      | All    | sRA   | 73 52 41  |
| Command                                | Report customer info | String   | 14     | All    | EMCustomerInfo  | 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F   |
| Status code                            | Customer info        | Enum_16  | 2      | All    | 0: DEVICE_OK<br>1: DEFECTIVE_DEVICE<br>2: DEVICE_TEMP_FAILURE<br>3: DEVICE_FAILURE<br>4: DEVICE_NOT_READY<br>5: CHECK_PARAMETER   | 0000: DEVICE_OK<br>0001: DEFECTIVE_DEVICE<br>0002: DEVICE_TEMP_FAILURE<br>0003: DEVICE_FAILURE<br>0004: DEVICE_NOT_READY<br>0005: CHECK_PARAMETER |
|  |                      |          |        |        | DEFECTIVE_DEVICE: Please return device to SICK<br>DEVICE_TEMP_FAILURE D: Device failure. Please check temperature.<br>DEVICE_FAILURE : Please switch off for 20 seconds and power up again.<br>DEVICE_NOT_READY: Please wait.<br>CHECK_PARAMETER: Warning – please check parametrization. |   |

Table 318: Telegram structure: sRA EMCustomerInfo

**Example: sRA EMCustomerInfo = Device OK**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}EMCustomerInfo{SPC}0<ETX>   |
|        | Hex    | 02 73 52 41 20 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F 20 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 52 4E 20 45 4D 43 75 73 74 6F 6D 65 72 49 6E 66 6F 20 00 6D |

Table 319: Example: sRA EMCustomerInfo = Device OK

### Ask for Sensorstatus

This telegram provides status information of the State Machine of measurement core and the Motor Status



| Telegram structure: sRN LDMSenStat |               |          |        |        |                       |                               |
|------------------------------------|---------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Read          | String   | 3      | All    | sRN                   | 73 52 4E                      |
| Command                            | Ask for state | String   | 10     | All    | LDMSenStat            | 4C 44 4D 53 65 6E 53 74 61 74 |

Table 320: Telegram structure: sRN LDMSenStat

### Example: sRN LDMSenStat

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]LDMSenStat<ETX>  |
|        | Hex    | 02 73 52 4E 20 4C 44 4D 53 65 6E 53 74 61 74 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E 73 52 4E 20 4C 44 4D 53 65 6E 53 74 61 74 60 |

Table 321: Example: sRN LDMSenStat



| Telegram structure: sRA LDMSenStat |              |          |        |        |                       |                               |
|------------------------------------|--------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Answer       | String   | 3      | All    | sRA                   | 73 52 41                      |
| Command                            | Report state | String   | 10     | All    | LDMSenStat            | 4C 44 4D 53 65 6E 53 74 61 74 |

| Telegram structure: sRA LDMSenStat |                             |          |        |        |  |  |
|------------------------------------|-----------------------------|----------|--------|--------|--|--|
| Telegram part                      | Description                 | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)   |
| Status code                        | Current state regarding ... | Uint_32  | 4      | All    | Idle: 3<br>Ready 2D: 6<br>Measure 2D: 7<br>Other state codes may show up during booting, firmware update or transition between states. | Idle: 0003<br>Ready 2D: 0006<br>Measure 2D: 0007   |
|                                    | Working mode                |          |        |        | Idle: 1<br>Rotate: 2<br>Measure: 3<br>Error: 4<br>(Other bits: reserved)   | Idle: 1<br>Rotate: 2<br>Measure: 3<br>Error: 4<br>(Other bits: reserved)   |
|                                    | Motor mode                  |          |        |        | Motor ok: 0<br>Motor spin to low: 4<br>Motor spin to high: 9<br>Motor stops or coder error: B<br>(Other bits: reserved)                | Motor ok: 0<br>Motor spin to low: 4<br>Motor spin to high: 9<br>Motor stop or coder error: B<br>(Other bits: reserved) |
|                                    | (Reserved)                  |          |        |        | (Reserved)   | (Reserved)   |

Table 322: Telegram structure: sRA LDMSenStat

**Example: sRA LDMSenStat Device in Idle mode**


|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}LDMSenStat{SPC} 1<ETX>   |
|        | Hex    | 02 73 52 41 20 4C 44 4D 53 65 6E 53 74 61 74 20 31 03                               |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 52 41 20 4C 44 4D 53 65 6E 53 74 61 74 20 00 00 00 01 4E |

Table 323: Example: sRA LDMSenStat Device is in Idle mode

#### 4.8.5 Read device order number

##### Device order number

This telegram reads the device order number.

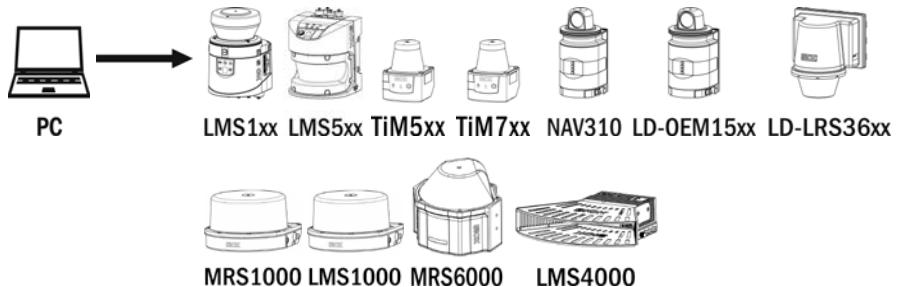

| Telegram structure: sRN Dlornr |             |          |        |        |                       |                        |
|--------------------------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Read        | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                        | Read state  | String   | 6      | All    | Dlornr                | 44 49 6F 72 6E 72      |

Table 324: Telegram structure: sRN Dlornr

##### Example: sRN Dlornr

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}Dlornr<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 44 49 6F 72 6E 72 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 44 49 6F 72 6E 72 43 |

Table 325: Example: sRN Dlornr



| Telegram structure: sRA Dlornr |                          |          |        |        |                       |   |
|--------------------------------|--------------------------|----------|--------|--------|-----------------------|---|
| Telegram part                  | Description              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                        |
| Command type                   | Answer                   | String   | 3      | All    | sRA                   | 73 52 41                                      |
| Command                        |                          | String   | 6      | All    | Dlornr                | 44 49 6F 72 6E 72                             |
| Order number                   | Order number in 7 digits | String   | 7      | All    | 0000000 ... 9999999   | 00 00 00 00 00 00 00 ... FF FF FF FF FF FF FF |

Table 326: Telegram structure: sRA Dlornr

**Example: sRA Dlornr 1047782 (Order Number for LMS511-20100)**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}Dlornr{SPC}1047782<ETX>   |
|        | Hex    | 02 73 52 41 20 44 49 6F 72 6E 72 20 31 30 34 37 37 38 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 41 20 44 49 6F 72 6E 72 20 31 30 34 37 37 38 32 53 |

Table 327: Example for LMS511-20100: sRA Dlornr


**Example: sRA Dlornr 10671419 (Order Number for TiM561-2050101)**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}Dlornr{SPC}10671419<ETX>  |
|        | Hex    | 02 73 52 41 20 44 49 6F 72 6E 72 20 31 30 37 31 34 31 39 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 41 20 44 49 6F 72 6E 72 20 31 30 37 31 34 31 39 57 |

Table 328: Example for TiM561-2050101: sRA Dlornr

### 4.8.6 Read device type

This telegram asks for the device type.

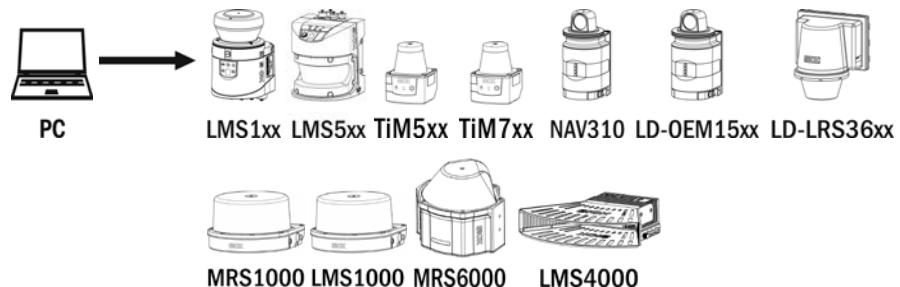

**Telegram structure: sRN Dtype**


| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|---------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Command type  | Read        | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command       | Ask state   | String   | 6      | All    | Dltype                | 44 49 74 79 70 65      |

Table 329: Telegram structure: sRN Dtype

**Example: sRN Dtype**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}Dltype<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 44 49 74 79 70 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 44 49 74 79 70 65 5A |

Table 330: Example: sRN Dtype

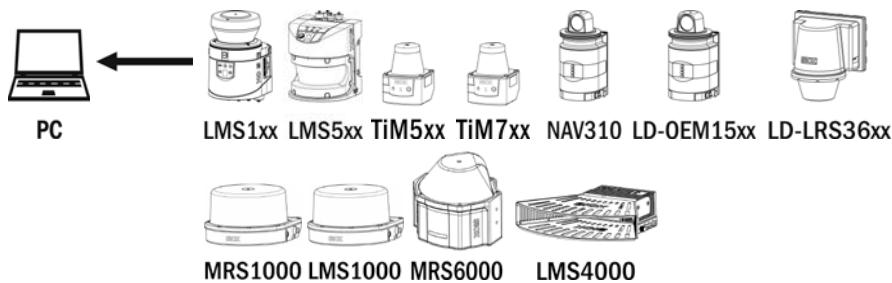

| Telegram structure: sRA Dltype |  |          |        |        |                         |                        |
|--------------------------------|--|----------|--------|--------|-------------------------|------------------------|
| Telegram part                  | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary) |
| Command type                   | Answer   | String   | 3      | All    | sRA                     | 73 52 41               |
| Command                        | Ask state  | String   | 6      | All    | Dltype                  | 44 49 74 79 70 65      |
| Length of type key             | Number of digits of the following type code length | Uint_8   | 1      | All    | 0d ... 255d (0h ... FF) | 00 ... FF              |
| Device type                    | Type code of the device                            | String   | (var.) | All    | (Device type)           | (Device type)          |

Table 331: Telegram structure: sRA Dltype

**Example for LMS511-20100**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}Dltype{SPC}C{SPC}LMS511-20100<ETX>  |
|        | Hex    | 02 73 52 41 20 44 49 74 79 70 65 20 43 20 4C 4D 53 35 31 31 2D 32 30 31 30 30 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 18 73 52 41 20 44 49 74 79 70 65 20 0C 4C 4D 53 35 31 31 2D 32 30 31 30 30 00 |


Table 332: Example for LMS511-20100: sRA Dltype

**Example for TiM561-2050101**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}Dltype{SPC}E{SPC}TIM561-2050101<ETX>  |
|        | Hex    | 02 73 52 41 20 44 49 74 79 70 65 20 45 20 54 49 4D 35 36 31 2D 32 30 35 30 31 30 31 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 1A 73 52 41 20 44 49 74 79 70 65 20 0E 54 49 4D 35 36 31 2D 32 30 35 30 31 30 31 03 |

Table 333: Example for TiM561-2050101: sRA Dltype

### 4.8.7 Read operating hours

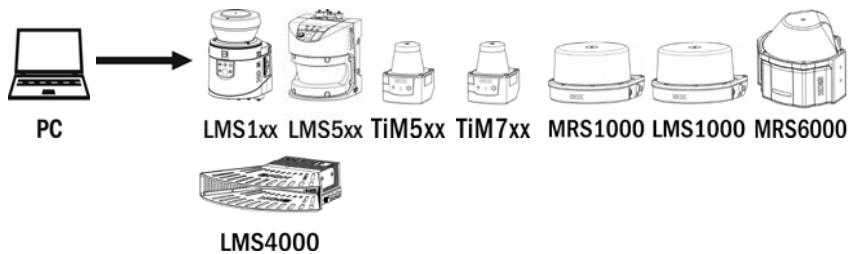


| Telegram structure: sRN ODoprh |                      |          |        |        |                       |                        |
|--------------------------------|----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Read                 | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                        | Read operating hours | String   | 6      | All    | ODoprh                | 4F 44 6F 70 72 68      |

Table 334: Telegram structure: sRN ODoprh

#### Example: sRN ODoprh

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]ODoprh<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 4F 44 6F 70 72 68 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 4F 44 6F 70 72 68 41 |

Table 335: Example: sRN ODoprh

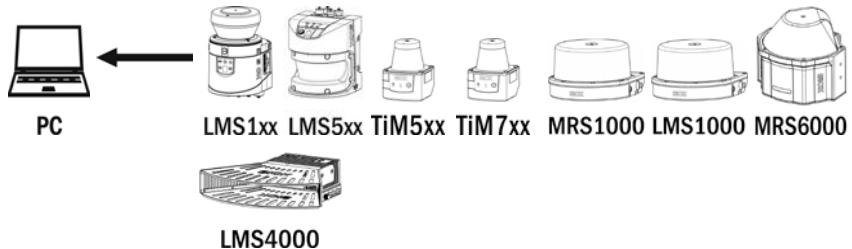

| Telegram structure: sRA ODoprh |                           |          |        |        |                       |                             |
|--------------------------------|---------------------------|----------|--------|--------|-----------------------|-----------------------------|
| Telegram part                  | Description               | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)      |
| Command type                   | Answer                    | String   | 3      | All    | sRA                   | 73 52 41                    |
| Command                        | Read operating hours      | String   | 6      | All    | ODoprh                | 4F 44 6F 70 72 68           |
| Value                          | Operating hours in 1/10 h | Uint_32  | 4      | All    | 0h ... FFFFFFFFh      | 00 00 00 00 ... FF FF FF FF |

Table 336: Telegram structure: sRA ODoprh

**Example: sRA ODoprh**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA[SPC]ODoprh[SPC]2DC8B<ETX>                                      |
|        | Hex    | 02 73 52 41 20 4F 44 6F 70 72 68 20 32 44 43 38 42 03                   |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 41 20 4F 44 6F 70 72 68 20 00 02 DC 8B 36 |

Table 337: Example: sRA ODoprh

Calculation of the value: 2DC8B (hex) → 187531 (dez) × 1/10 h = 18753.1h

**4.8.8 Read power on counter****Telegram structure: sRN ODpwrc**


| Telegram part | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|---------------|-----------------------|----------|--------|--------|-----------------------|------------------------|
| Command type  | Read                  | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command       | Read power on counter | String   | 6      | All    | ODpwrc                | 4F 44 70 77 72 63      |

Table 338: Telegram structure: sRN ODpwrc

**Example: sRN ODpwrc**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]ODpwrc<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 4F 44 70 77 72 63 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 4F 44 70 77 72 63 52 |

Table 339: Example: sRN ODpwrc

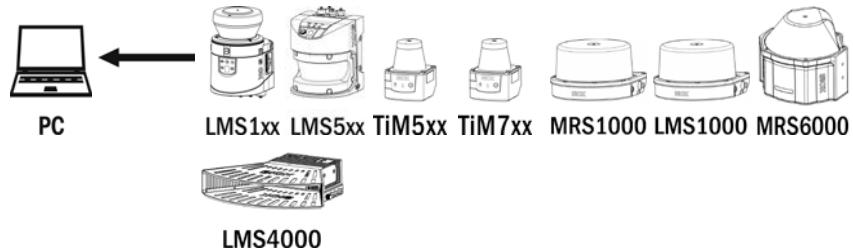

| Telegram structure: sRA ODpwrc |                       |          |        |        |                       |                             |
|--------------------------------|-----------------------|----------|--------|--------|-----------------------|-----------------------------|
| Telegram part                  | Description           | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)      |
| Command type                   | Answer                | String   | 3      | All    | sRA                   | 73 52 41                    |
| Command                        | Read power on counter | String   | 6      | All    | ODpwrc                | 4F 44 70 77 72 63           |
| Value                          | Power on counter      | Uint_32  | 4      | All    | 0h ... FFFFFFFFh      | 00 00 00 00 ... FF FF FF FF |

Table 340: Telegram structure: sRA ODpwrc

### Example: sRA ODpwrc

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}ODpwrc{SPC}752D<ETX>                                       |
|        | Hex    | 02 73 52 41 20 4F 44 70 77 72 63 20 752D 03                             |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 41 20 4F 44 70 77 72 63 20 00 00 75 2D 36 |

Table 341: Example: sRA ODpwrc

### 4.8.9 Read temperature

With this command the internal temperature of the device can be identified. Please note that it does not give an indication of the current ambient temperature.



| Telegram structure: sRN OPcurtmpdev |                                |          |        |        |                       |                                  |
|-------------------------------------|--------------------------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description                    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Read                           | String   | 3      | All    | sRN                   | 73 52 4E                         |
| Command                             | Read temperature of the device | String   | 11     | All    | OPcurtmpdev           | 4F 50 63 75 72 74 6D 70 64 65 76 |

Table 342: Telegram structure: sRN OPcurtmpdev

**Example: sRN OPcurtmpdev**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN[SPC]OPcurtmpdev<ETX>   |
|        | Hex    | 02 73 52 4E 20 4F 50 63 75 72 74 6D 70 64 65 76 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 4E 20 4F 50 63 75 72 74 6D 70 64 65 76 2A |

Table 343: Example: sRN OPcurtmpdev

**Telegram structure: sRA OPcurtmpdev**

| Telegram part    | Description                        | Variable | Length | Sensor | Values CoLa A (ASCII)                         | Values CoLa B (Binary)           |
|------------------|------------------------------------|----------|--------|--------|---|----------------------------------|
| Command type     | Answer                             | String   | 3      | All    | sRA   | 73 52 41                         |
| Command          | Read temperature of the device     | String   | 11     | All    | OPcurtmpdev                                   | 4F 50 63 75 72 74 6D 70 64 65 76 |
| Temperature data | [°C as float according to IEEE754] | Real     | 4      | All    | C2480000h ... 42C80000h<br>(-50°C ... +100°C) | C2 48 00 00 ...<br>42 C8 00 00   |


Table 344: Telegram structure: sRA OPcurtmpdev

**Example: sRA OPcurtmpdev (-50 °C)**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA[SPC]OPcurtmpdev[SPC]420C0000<ETX>   |
|        | Hex    | 02 73 52 41 20 4F 50 63 75 72 74 6D 70 64 65 76 20 42 0C 00 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 52 41 20 4F 50 63 75 72 74 6D 70 64 65 76 20 42 0C 00 00 4B |

Table 345: Example: sRA OPcurtmpdev

4.8.10 Set device name

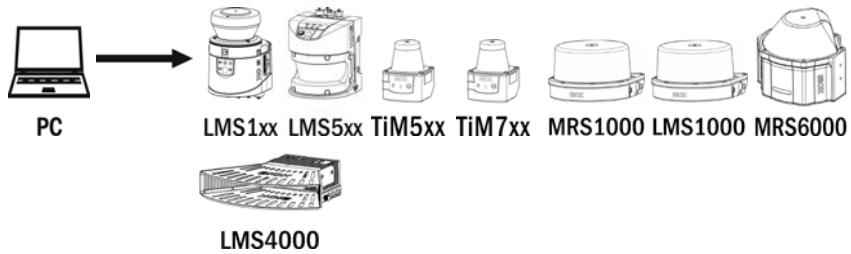


| Telegram structure: sWN LocationName<br>(Maintenance) |  |          |        |        |                          |  |
|---|--|----------|--------|--------|--------------------------|--|
| Telegram part   | Description                                      | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)                 |
| Command type  | Write  | String   | 3      | All    | sWN                      | 73 57 4E                               |
| Command   | Set device name                                  | String   | 12     | All    | LocationName             | 4C 6F 63 61 74 69 6F 6E<br>4E 61 6D 65 |
| Value   | Array of characters of the following device name | Uint_16  | 2      | All    | 0d ... +16d (0h ... 10h) | 00 00 ... 00 10                        |
| Value   | Device name                                      | String   | 16     | All    | [Device name]            | [Device name]                          |

Table 346: Telegram structure: sWN LocationName

**Example: sWN LocationName +13 OutdoorDevice**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]LocationName[SPC]+13[SPC]OutdoorDevice<ETX>  |
|        | Hex    | 02 73 57 4E 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 20 2B 31 33 20 4F 75 74 64 6F 6F 72 44 65 76 69<br>63 65 03                |
| CoLa B | Binary | 02 02 02 02 00 00 00 20 73 57 4E 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 20 00 0D 4F 75 74 64 6F 6F<br>72 44 65 76 69 63 65 1D |

Table 347: Example: sWN LocationName +13 OutdoorDevice

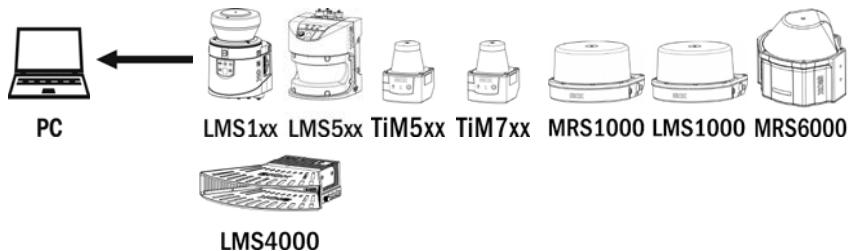

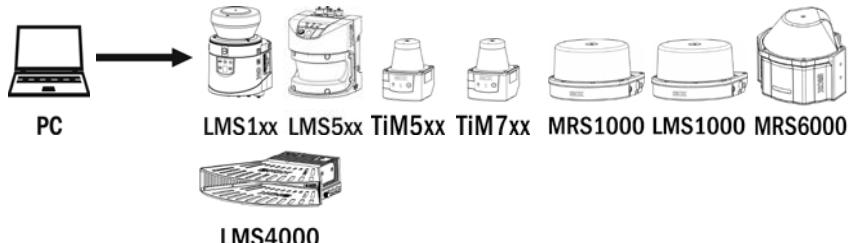
| Telegram structure: sWA LocationName |                 |          |        |        |                       |                                     |
|--------------------------------------|-----------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                        | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                         | Answer          | String   | 3      | All    | sWA                   | 73 57 41                            |
| Command                              | Set device name | String   | 12     | All    | LocationName          | 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 |

Table 348: Telegram structure: sWA LocationName

**Example: sWA LocationName**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]LocationName<ETX>   |
|        | Hex    | 02 73 57 41 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 20 73 57 41 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 74 |

Table 349: Example: sWA LocationName

**4.8.11 Read device name**


| Telegram structure: sRN LocationName |                  |          |        |        |                       |                                     |
|--------------------------------------|------------------|----------|--------|--------|-----------------------|-------------------------------------|
| Telegram part                        | Description      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)              |
| Command type                         | Read             | String   | 3      | All    | sRN                   | 73 52 4E                            |
| Command                              | Read device name | String   | 12     | All    | LocationName          | 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 |

Table 350: Telegram structure: sRN LocationName

### Example: sRN LocationName

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}LocationName<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 52 4E 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 55 |

Table 351: Example: sRN LocationName

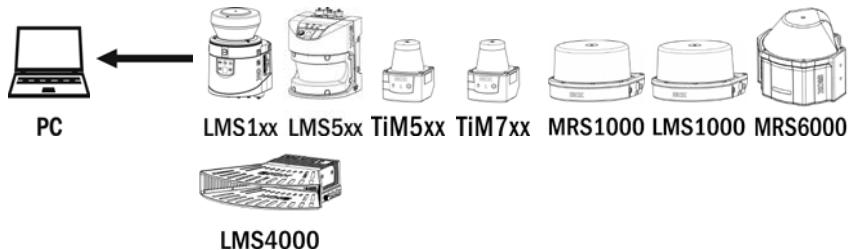

### Telegram structure: sRA LocationName

| Telegram part | Description                                      | Variable | Length | Sensor | Values CoLa A (ASCII)    | Values CoLa B (Binary)              |
|---------------|--|----------|--------|--------|--------------------------|-------------------------------------|
| Command type  | Answer   | String   | 3      | All    | sRA                      | 73 52 41                            |
| Command       | Read device name                                 | String   | 12     | All    | LocationName             | 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 |
| Value         | Array of characters of the following device name | Uint_16  | 2      | All    | 0d ... +16d (0h ... 10h) | 00 00 ... 00 10                     |
| Value         | Device name                                      | String   | 16     | All    | [Device name]            | [Device name]                       |

Table 352: Telegram structure: sRA LocationName

### Example: sRA LocationName

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LocationName{SPC}D{SPC}OutdoorDevice<ETX>   |
|        | Hex    | 02 73 52 41 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 20 44 20 4F 75 74 64 6F 6F 72 44 65 76 69 63 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 52 41 20 4C 6F 63 61 74 69 6F 6E 4E 61 6D 65 20 00 0D 4F 75 74 64 6F 6F 72 44 65 76 69 63 65 20 |

Table 353: Example: sRA LocationName

#### 4.8.12 Read angle compensation sine



| Telegram structure: sRN MCAngleCompSin |                              |          |        |        |                       |  |
|--|------------------------------|----------|--------|--------|-----------------------|--|
| Telegram part                          | Description                  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type                           | Read                         | String   | 3      | All    | sRN                   | 73 52 4E                                     |
| Command                                | Read angle compensation sine | String   | 14     | All    | MCAngleCompSin        | 4D 43 41 6E 67 6C 65 43<br>6F 6D 70 53 69 6E |

Table 354: Telegram structure: sRN MCAngleCompSin

#### Example: sRN MCAngleCompSin

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}MCAngleCompSin<ETX>   |
|        | Hex    | 02 73 52 4E 20 4D 43 41 6E 67 6C 65 43 6F 6D 70 53 69 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 4D 43 41 6E 67 6C 65 43 6F 6D 70 53 69 6E 65 |

Table 355: Example: sRN MCAngleCompSin



| Telegram structure: sRA MCAngleCompSin |                         |          |        |        |  |  |
|--|-------------------------|----------|--------|--------|--|--|
| Telegram part                          | Description             | Variable | Length | Sensor | Values CoLa A (ASCII)                              | Values CoLa B (Binary)                       |
| Command type                           | Answer                  | String   | 3      | All    | sRA  | 73 52 41                                     |
| Command                                | Angle compensation sine | String   | 14     | All    | MCAngleCompSin                                     | 4D 43 41 6E 67 6C 65 43<br>6F 6D 70 53 69 6E |
| Amplitude                              | [1/10000°]              | Int_16   | 2      | All    | -10000d ... +10000d<br>(D8F0h ... 2710h)           | D8 F0 ... 27 10                              |
| Phase                                  | [1/10000°]              | Int_32   | 4      | All    | -3600000d ... +3600000d<br>(FFC91180h ... 36EE80h) | FF C9 11 80 ...<br>00 36 EE 80               |
| Offset                                 | [1/10000°]              | Int_16   | 2      | All    | -10000d ... +10000d<br>(D8F0h ... 2710h)           | D8 F0 ... 27 10                              |

Table 356: Telegram structure: sRA MCAngleCompSin

### Example: sRA MCAngleCompSin

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}MCAngleCompSin{SPC}0{SPC}0{SPC}0<ETX>   |
|        | Hex    | 02 73 52 41 20 4D 43 41 6E 67 6C 65 43 6F 6D 70 53 69 6E 20 30 20 30 20 30 03                                  |
| CoLa B | Binary | 02 02 02 02 00 00 00 18 73 52 41 20 4D 43 41 6E 67 6C 65 43 6F 6D 70 53 69 6E 20 00 00 00 00 00<br>00 00 00 4A |

Table 357: Example: sRA MCAngleCompSin

The values of the angular compensation could be retrieved from the memory of the NAV310 to improve the angular measurement accuracy.

The applied formula is:

$$\text{AngleComp} = \text{AngleRaw} + (\text{AngleCompAmp} * \sin(\text{AngleRaw} - \text{AngleCompPhase})) + \text{AngleCompOffset}$$

### Example (C coded):

```
angleRaw: Raw angle as float in degrees (0.000... 359999)
angleComp: Compensated angle as float in degrees (0.000... 359999)
AngleCompAmp
AngleCompPhase
AngleCompOffset: Compensation parameters as int in 1/1000 degrees
float compensateAngle(float angleRaw)
{
    float angleComp;
    angleRaw += ((float)AngleCompOffset)/1000.0;
    angleRaw += (((float)AngleCompAmp)/1000.0) *
        sin((DEGTORAD * (angle - ((float)AngleCompPhase)/1000.0)));
    return angleComp;
}
```

#### 4.8.13 Reset output counter



| Telegram structure: sMN LIDrstoutpcnt<br>(Authorized client) |                      |          |        |        |                       |   |
|--|----------------------|----------|--------|--------|-----------------------|---|
| Telegram part  | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                    |
| Command type   | Method               | String   | 3      | All    | sMN                   | 73 4D 4E                                  |
| Command  | Reset output counter | String   | 13     | All    | LIDrstoutpcnt         | 4C 49 44 72 73 74 6F 75<br>74 70 63 6E 74 |

Table 358: Telegram structure: sMN LIDrstoutpcnt

**Example: sMN LIDrstoutpcnt**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]LIDrstoutpcnt<ETX>   |
|        | Hex    | 02 73 4D 4E 20 4C 49 44 72 73 74 6F 75 74 70 63 6E 74 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 4D 4E 20 4C 49 44 72 73 74 6F 75 74 70 63 6E 74 03 |

Table 359: Example: sMN LIDrstoutpcnt

**Telegram structure: sAN LIDrstoutpcnt**

| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)                 |
|---------------|-------------|----------|--------|--------|------------------------|--|
| Command type  | Answer      | String   | 3      | All    | sAN                    | 73 41 4E                               |
| Command       | Reset state | String   | 13     | All    | LIDrstoutpcnt          | 4C 49 44 72 73 74 6F 75 74 70 63 6E 74 |
| Status code   | Code number | Bool_1   | 1      | All    | Success: 0<br>Error: 1 | Success: 00<br>Error: 01               |

Table 360: Telegram structure: sAN LIDrstoutpcnt

**Example: sAN LIDrstoutpcnt**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]LIDrstoutpcnt[SPC]0<ETX>   |
|        | Hex    | 02 73 41 4E 20 4C 49 44 72 73 74 6F 75 74 70 63 6E 74 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 13 73 41 4E 20 4C 49 44 72 73 74 6F 75 74 70 63 6E 74 20 00 2F |

Table 361: Example: sAN LIDrstoutpcnt

### 4.8.14 Read heating state

**Note**



It is not allowed to request this telegram in a faster cycle than 10 ms!




| Telegram structure: sRN OPheatstateext<br>(no required user level) |             |          |        |        |                       |  |
|--|-------------|----------|--------|--------|-----------------------|--|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type   | Read        | String   | 3      | All    | sRN                   | 73 52 4E                                     |
| Command  |             | String   | 14     | All    | OPheatstateext        | 4F 50 68 65 61 74 73 74<br>61 74 65 65 78 74 |

Table 362: Telegram structure: sRN OPheatstateext

**Example: sRN OPheatstateext**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]OPheatstateext<ETX>   |
|        | Hex    | 02 73 52 4E 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 52 4E 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 56 |

Table 363: Example: sRN OPheatstateext

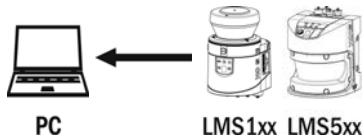

| Telegram structure: sRA OPheatstateext<br>(no required user level) |             |          |        |        |                       |  |
|--|-------------|----------|--------|--------|-----------------------|--|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                       |
| Command type   | Answer      | String   | 3      | All    | sRA                   | 73 52 41                                     |
| Command  |             | String   | 14     | All    | OPheatstateext        | 4F 50 68 65 61 74 73 74<br>61 74 65 65 78 74 |

| Telegram structure: sRA OPheatstateext<br>(no required user level) |               |          |        |        |  |                        |
|--|---------------|----------|--------|--------|--|------------------------|
| Telegram part  | Description   | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary) |
| Heating state  | Heating state | Enum_8   | 1      | All    | 0d = Heating active<br>1d = Current for heating too low<br>2d = Heating inactive<br>3d = Heating not connected | 00<br>01<br>02<br>03   |

Table 364: Telegram structure: sRA OPheatstateext

**Example: sRA OPheatstateext 2**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}OPheatstateext{SPC}2<ETX>   |
|        | Hex    | 02 73 52 41 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 14 73 52 41 20 4F 50 68 65 61 74 73 74 61 74 65 65 78 74 20 02 7B |

Table 365: Example: sRA OPheatstateext 2


## 4.9 Interfaces

### 4.9.1 Set IP address



#### IMPORTANT

- ▶ Save permanently to set values. Changes will be active after rebooting the device.
- ▶ Settings must correspond with network in which scanner is used. Else device cannot be found any more.

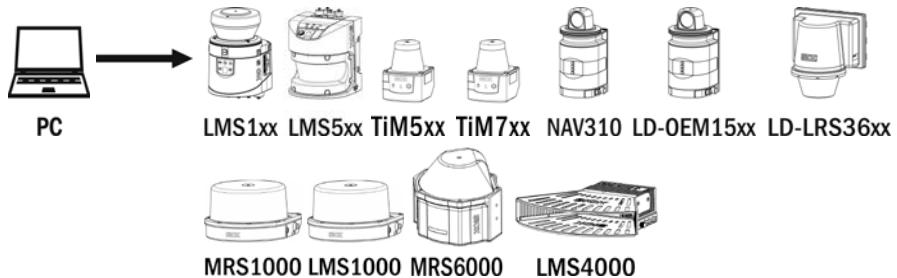


| Telegram structure: sWN EllpAddr<br>(Authorized client) |                   |          |        |        |   |                                |
|---|-------------------|----------|--------|--------|---|--------------------------------|
| Telegram part   | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type  | Write             | String   | 3      | All    | sWN   | 73 57 4E                       |
| Command   | Set IP address    | String   | 8      | All    | EllpAddr  | 45 49 49 50 41 64 64 72        |
| IP address  | Set values in hex | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 366: Telegram structure: sWN EllpAddr

#### Example: sWN EllpAddr 192.168.0.2

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}EllpAddr{SPC}CO{SPC}A8{SPC}0{SPC}2<ETX>                          |
|        | Hex    | 02 73 57 4E 20 45 49 49 70 41 64 64 72 20 43 30 20 41 38 20 30 20 32 03       |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 4E 20 45 49 49 70 41 64 64 72 20 CO A8 00 02 05 |

Table 367: Example: sWN EllpAddr 192.168.0.2

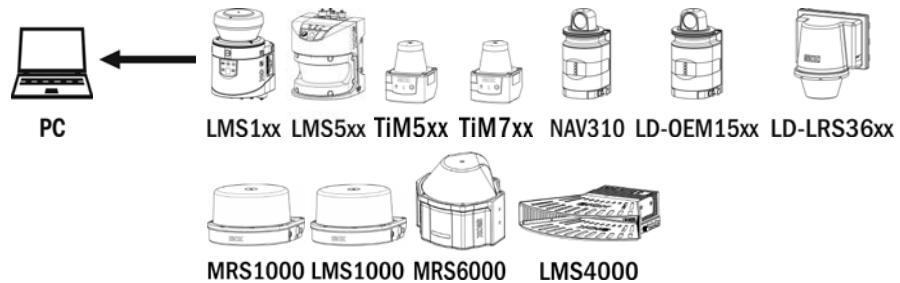

| Telegram structure: sWA EllpAddr |                |          |        |        |                       |                         |
|----------------------------------|----------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description    | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Answer         | String   | 3      | All    | sWA                   | 73 57 41                |
| Command                          | Set IP address | String   | 8      | All    | EllpAddr              | 45 49 49 50 41 64 64 72 |


Table 368: Telegram structure: sWA EllpAddr

**Example: sWA EllpAddr**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA SPC EllpAddr<ETX>  |
|        | Hex    | 02 73 57 41 20 45 49 49 70 41 64 64 72 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0D 73 57 41 20 45 49 49 70 41 64 64 72 63 |

Table 369: Example: sWA EllpAddr

### 4.9.2 Read IP address

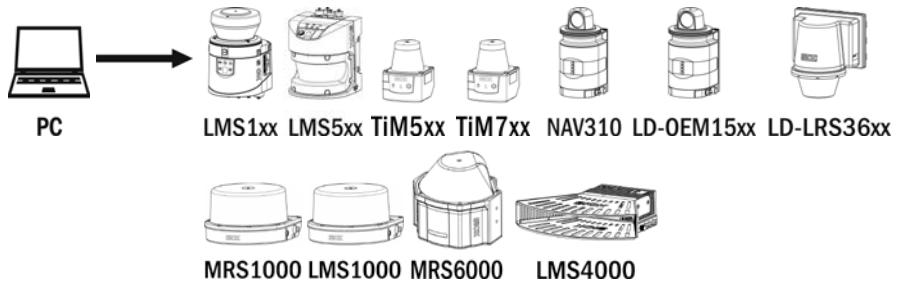

| Telegram structure: sRN EllpAddr |                 |          |        |        |                       |                         |
|----------------------------------|-----------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Read            | String   | 3      | All    | sRN                   | 73 52 4E                |
| Command                          | Read IP address | String   | 8      | All    | EllpAddr              | 45 49 49 50 41 64 64 72 |

Table 370: Telegram structure: sRN EllpAddr

#### Example: srN EllpAddr

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}EllpAddr<ETX>                                     |
|        | Hex    | 02 73 57 4E 20 45 49 49 70 41 64 64 72 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0C 73 52 4E 20 45 49 49 70 41 64 64 72 49 |

Table 371: Example: srN EllpAddr



| Telegram structure: sRA EllpAddr |                   |          |        |        |   |                                |
|----------------------------------|-------------------|----------|--------|--------|---|--------------------------------|
| Telegram part                    | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type                     | Answer            | String   | 3      | All    | sRA   | 73 52 41                       |
| Command                          | Set IP address    | String   | 8      | All    | EllpAddr  | 45 49 49 50 41 64 64 72        |
| IP address                       | Set values in hex | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 372: Telegram structure: sRA EllpAddr

**Example: sRA EllpAddr 192.168.0.2**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}EllpAddr{SPC}CO{SPC}A8{SPC}00{SPC}02<ETX>                        |
|        | Hex    | 02 73 57 41 20 45 49 49 70 41 64 64 72 03                                     |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 52 41 20 45 49 49 70 41 64 64 72 20 CO A8 00 02 0C |


Table 373: Example: sRA EllpAddr 192.168.0.2

**4.9.3 Set Ethernet gateway**

Change Ethernet gateway IP address (TCP/IP)

**IMPORTANT**

- Save permanently to set values. Changes will be active after rebooting the device.
- Settings must correspond with network in which scanner is used. Else device cannot be found any more.

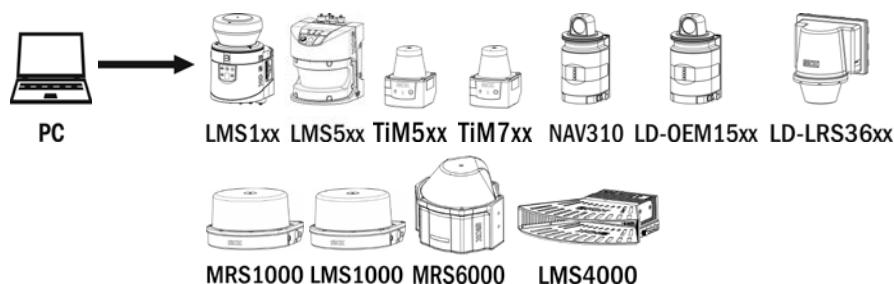


| Telegram structure: sWN Elgate |                     |          |        |        |   |                                |
|--------------------------------|---------------------|----------|--------|--------|---|--------------------------------|
| Telegram part                  | Description         | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type                   | Write               | String   | 3      | All    | sWN   | 73 57 4E                       |
| Command                        | Set gateway address | String   | 6      | All    | Elgate  | 45 49 67 61 74 65              |
| Gateway address                | Set values in hex   | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 374: Telegram structure: sWN Elgate

**Example: sWN Elgate 192.168.0.1**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}Elgate{SPC}CO{SPC}A8{SPC}00{SPC}01<ETX>                    |
|        | Hex    | 02 73 57 4E 20 45 49 67 61 74 65 20 43 30 20 41 38 20 30 30 20 30 31 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 4E 20 45 49 67 61 74 65 20 CO A8 00 01 5A |

Table 375: Example: sWN Elgate 192.168.0.1

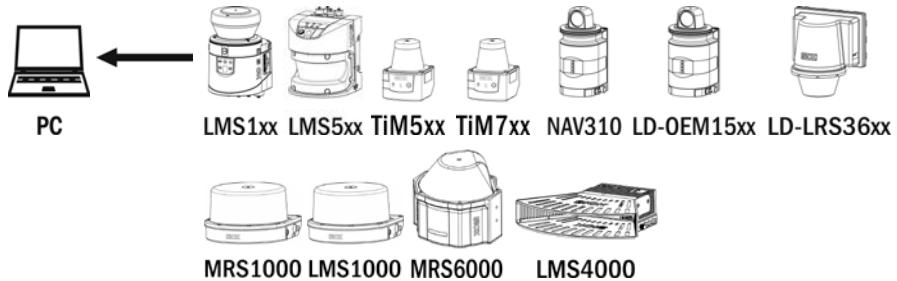

| Telegram structure: sWA Elgate |                     |          |        |        |                       |                        |
|--------------------------------|---------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description         | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer              | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Set gateway address | String   | 6      | All    | Elgate                | 45 49 67 61 74 65      |

Table 376: Telegram structure: sWA Elgate


**Example: sWA Elgate**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA SPC Elgate<ETX>                                    |
|        | Hex    | 02 73 57 41 20 45 49 67 61 74 65 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 OA 73 57 41 20 45 49 67 61 74 65 5E |

Table 377: Example: sWA Elgate

#### 4.9.4 Read Ethernet gateway

Read for the Ethernet gateway (TCP/IP)

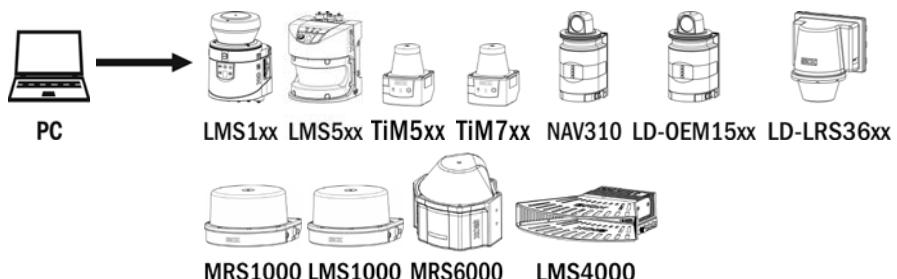


| Telegram structure: sRN Elgate |                      |          |        |        |                       |                        |
|--------------------------------|----------------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Read                 | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                        | Read gateway address | String   | 6      | All    | Elgate                | 45 49 67 61 74 65      |

Table 378: Telegram structure: sRN Elgate

**Example: sRN Elgate**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN{SPC}Elgate<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 45 49 67 61 74 65 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 45 49 67 61 74 65 54 |

Table 379: Example: sRN Elgate

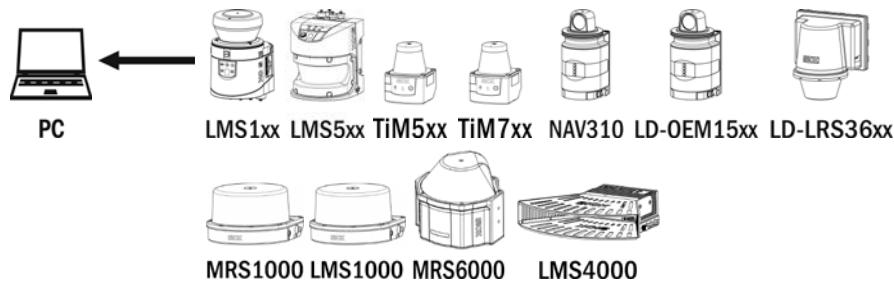

| Telegram structure: sRA Elgate |                      |          |        |        |   |                                |
|--------------------------------|----------------------|----------|--------|--------|---|--------------------------------|
| Telegram part                  | Description          | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type                   | Answer               | String   | 3      | All    | sRA   | 73 52 41                       |
| Command                        | Read gateway address | String   | 6      | All    | Elgate  | 45 49 67 61 74 65              |
| Gateway address                | Values in hex        | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 380: Telegram structure: sRA Elgate


**Example: sRA Elgate 192.168.0.1**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}Elgate{SPC}CO{SPC}A8{SPC}OO{SPC}01<ETX>                    |
|        | Hex    | 02 73 52 41 20 45 49 67 61 74 65 20 CO A8 00 01 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 52 41 20 45 49 67 61 74 65 20 CO A8 00 01 12 |

Table 381: Example: sRA Elgate 192.168.0.1

**4.9.5 Set IP mask****IMPORTANT**

- ▶ Save permanently to set values. Changes will be active after rebooting the device.
- ▶ Settings must correspond with network in which scanner is used. Else device cannot be found any more.

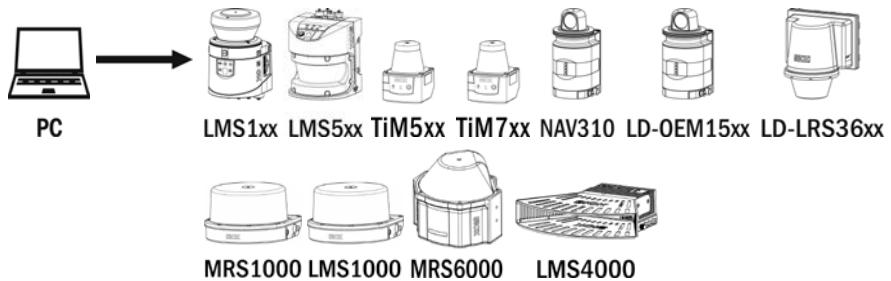


| Telegram structure: sWN Elmask |                   |          |        |        |   |                                |
|--------------------------------|-------------------|----------|--------|--------|---|--------------------------------|
| Telegram part                  | Description       | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type                   | Write             | String   | 3      | All    | sWN   | 73 57 4E                       |
| Command                        | Set IP mask       | String   | 6      | All    | Elmask  | 45 49 6D 61 73 6B              |
| IP mask                        | Set values in hex | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 382: Telegram structure: sWN Elmask

### Example: sWN Elmask 255.255.254.0

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}Elmask{SPC}FF{SPC}FF{SPC}FE{SPC}00<ETX>                    |
|        | Hex    | 02 73 57 4E 20 45 49 6D 61 73 6B 20 46 46 20 46 46 20 46 45 20 30 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 OF 73 57 4E 20 45 49 6D 61 73 6B 20 FF FF FE 00 8C |

Table 383: Example: sWN Elmask 255.255.254.0

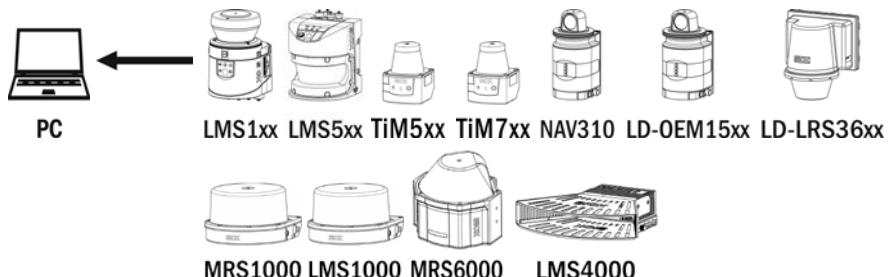

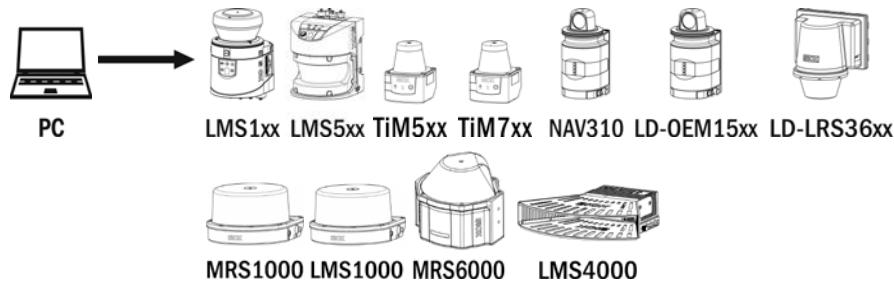
| Telegram structure: sWA Elmask |             |          |        |        |                       |                        |
|--------------------------------|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part                  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                   | Answer      | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                        | Set IP mask | String   | 6      | All    | Elmask                | 45 49 6D 61 73 6B      |

Table 384: Telegram structure: sWA Elmask

**Example: sWA Elmask**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA[SPC]Elmask<ETX>                                 |
|        | Hex    | 02 73 57 41 20 45 49 6D 61 73 6B 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 57 41 20 45 49 6D 61 73 6B 63 |

Table 385: Example: sWA Elmask

**4.9.6 Read IP mask****Telegram structure: sRN Elmask**


| Telegram part | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|---------------|--------------|----------|--------|--------|-----------------------|------------------------|
| Command type  | Read         | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command       | Read IP mask | String   | 6      | All    | Elmask                | 45 49 6D 61 73 6B      |

Table 386: Telegram structure: sRN Elmask

**Example: sRN Elmask**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRN[SPC]Elmask<ETX>                                 |
|        | Hex    | 02 73 52 4E 20 45 49 6D 61 73 6B 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0A 73 52 4E 20 45 49 6D 61 73 6B 57 |

Table 387: Example: sRN Elmask

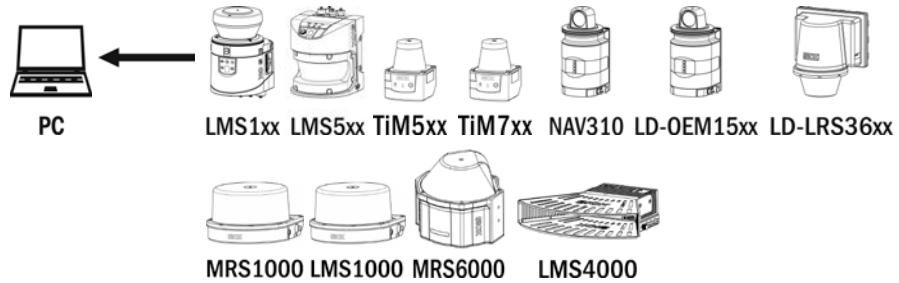

| Telegram structure: sRA Elmask |               |          |        |        |   |                                |
|--------------------------------|---------------|----------|--------|--------|---|--------------------------------|
| Telegram part                  | Description   | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)         |
| Command type                   | Answer        | String   | 3      | All    | sRA   | 73 52 41                       |
| Command                        | Read IP mask  | String   | 6      | All    | Elmask  | 45 49 6D 61 73 6B              |
| IP mask                        | Values in hex | Uint_32  | 4      | All    | 00 00 00 00h ...<br>FF FF FF FFh<br>(decimal values unwieldy) | 00 00 00 00 ...<br>FF FF FF FF |

Table 388: Telegram structure: sRA Elmask

**Example: sRA Elmask 255.255.254.0**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}Elmask{SPC}FF{SPC}FF{SPC}FE{SPC}00<ETX><br><STX>sRN{SPC}Elmask<ETX> |
|        | Hex    | 02 73 52 41 20 45 49 6D 61 73 6B 20 45 49 6D 61 73 6B 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 OF 73 52 41 20 45 49 6D 61 73 6B 20 FF FF FE 00 86          |

Table 389: Example: sRA Elmask 255.255.254.0

#### 4.9.7 Set baud rate for host interface




| Telegram structure: sWN SIHstBaud<br>(Authorized client) |                                   |          |        |                   |  |   |
|--|-----------------------------------|----------|--------|-------------------|--|---|
| Telegram part  | Description                       | Variable | Length | Sensor            | Values CoLa A (ASCII)  | Values CoLa B (Binary)  |
| Command type   | Write                             | String   | 3      | All               | sWN  | 73 57 4E  |
| Command  | Set baud rate for host interface  | String   | 9      | All               | SIHstBaud  | 53 49 48 73 74 42 61 75 64                                    |
| Baud rate data   | Baud rate data for host interface | Enum_8   | 1      | All               | 9600: +5d (05h)<br>19200: +6d (06h)<br>38400: +7d (07h)<br>57600: +8d (08h)<br>115200: +9d (09h) | 9600: 05<br>19200: 06<br>38400: 07<br>57600: 08<br>115200: 09 |
|  |                                   |          |        | LMS1xx,<br>LMS5xx | 250000: +10d (0Ah)<br>500000: +11d (0Bh)   | 250000: 0A<br>500000: 0B                                      |

Table 390: Telegram structure: sWN SIHstBaud

#### Example: sWN SIHstBaud

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]SIHstBaud[SPC]+8<ETX>                                      |
|        | Hex    | 02 73 57 4E 20 53 49 48 73 74 42 61 75 64 20 08 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 4E 20 53 49 48 73 74 42 61 75 64 20 08 05 |

Table 391: Example: sWN SIHstBaud

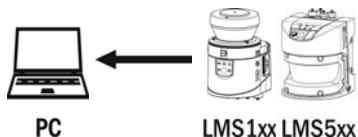

| Telegram structure: sWA SIHstBaud |                                  |          |        |        |                       |                            |
|-----------------------------------|----------------------------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description                      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Answer                           | String   | 3      | All    | sWA                   | 73 57 41                   |
| Command                           | Set baud rate for host interface | String   | 9      | All    | SIHstBaud             | 53 49 48 73 74 42 61 75 64 |

Table 392: Telegram structure: sWA SIHstBaud

**Example: sWA SIHstBaud**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX> <b>sWA</b> [SPC] <b>SIHstBaud</b> <ETX>                                  |
|        | Hex    | 02 73 57 41 20 <b>53 49 48 73 74 42 61 75 64 03</b>                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0E <b>73 57 41 20 53 49 48 73 74 42 61 75 64</b> 20 02 |

Table 393: Example: sWA SIHstBaud

**4.9.8 Read baud rate of host interface**



| Telegram structure: sRN SIHstBaud |                                  |          |        |        |                       |                            |
|-----------------------------------|----------------------------------|----------|--------|--------|-----------------------|----------------------------|
| Telegram part                     | Description                      | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)     |
| Command type                      | Read                             | String   | 3      | All    | sRN                   | 73 52 4E                   |
| Command                           | Read baud rate of host interface | String   | 9      | All    | SIHstBaud             | 53 49 48 73 74 42 61 75 64 |

Table 394: Telegram structure: sRN SIHstBaud

**Example: sRN SIHstBaud**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX> <b>sRN</b> [SPC] <b>SIHstBaud</b> <ETX>                               |
|        | Hex    | 02 73 52 4E 20 <b>53 49 48 73 74 42 61 75 64 03</b>                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 0D <b>73 52 4E 20 53 49 48 73 74 42 61 75 64</b> 28 |

Table 395: Example: sRN SIHstBaud



| Telegram structure: sRA SIHstBaud |                                  |          |        |                   |   |   |
|-----------------------------------|----------------------------------|----------|--------|-------------------|---|---|
| Telegram part                     | Description                      | Variable | Length | Sensor            | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type                      | Answer                           | String   | 3      | All               | sRA   | 73 52 41  |
| Command                           | Read baud rate of host interface | String   | 9      | All               | SIHstBaud   | 53 49 48 73 74 42 61 75 64                                    |
| Baud rate data                    | Baud rate data of host interface | Enum_8   | 1      | All               | 9600: 5d (05h)<br>19200: 6d (06h)<br>38400: 7d (07h)<br>57600: 8d (08h)<br>115200: 9d (09h) | 9600: 05<br>19200: 06<br>38400: 07<br>57600: 08<br>115200: 09 |
|                                   |                                  |          |        | LMS1xx,<br>LMS5xx | 250000: 10d (0Ah)<br>500000: 11d (0Bh)  | 250000: 0A<br>500000: 0B                                      |

Table 396: Telegram structure: sRA SIHstBaud

**Example: sRA SIHstBaud**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}SIHstBaud{SPC}8<ETX>                                       |
|        | Hex    | 02 73 52 41 20 53 49 48 73 74 42 61 75 64 20 08 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 OF 73 52 41 20 53 49 48 73 74 42 61 75 64 20 08 0F |

Table 397: Example: sRA SIHstBaud

### 4.9.9 Set interface type



| Telegram structure: sWN SIHstHw<br>(Authorized client) |   |          |        |        |   |  |
|--|---|----------|--------|--------|---|--|
| Telegram part  | Description                               | Variable | Length | Sensor | Values CoLa A (ASCII)                                     | Values CoLa B (Binary)                                       |
| Command type   | Write                                     | String   | 3      | All    | sWN   | 73 57 4E   |
| Command  | Set hardware settings for host interface  | String   | 7      | All    | SIHstHw   | 53 49 48 73 74 48 77   |
| Interface type data                                    | Hardware settings data for host interface | Enum_8   | 1      | All    | TX_RS232: 0<br>TX_RS485_2WIRE: 1<br>TX_RS422_485_4WIRE: 2 | TX_RS232: 00<br>TX_RS485_2WIRE: 01<br>TX_RS422_485_4WIRE: 02 |

Table 398: Telegram structure: sWN SIHstHw

#### Example: sWN SIHstHw

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}SIHstHw{SPC}0<ETX>                                   |
| CoLa A | Hex    | 02 73 57 4E 20 53 49 48 73 74 48 77 20 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 57 4E 20 53 49 48 73 74 48 77 20 00 00 |

Table 399: Example: sWN SIHstHw



| Telegram structure: sWA SIHstHw |  |          |        |        |                       |                        |
|---------------------------------|--|----------|--------|--------|-----------------------|------------------------|
| Telegram part                   | Description                              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                    | Answer                                   | String   | 3      | All    | sWA                   | 73 57 41               |
| Command                         | Set hardware settings for host interface | String   | 7      | All    | SIHstHw               | 53 49 48 73 74 48 77   |

Table 400: Telegram structure: sWA SIHstHw

**Example: sWA SIHstHw**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA{SPC}SIHstHw<ETX>   |
|        | Hex    | 02 73 57 41 20 53 49 48 73 74 48 77 03                            |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 OC 73 57 41 20 53 49 48 73 74 48 77 20 0F |

Table 401: Example: sWA SIHstHw

**4.9.10 Read interface type**

| Telegram structure: sRN SIHstHw |  |          |        |        |                       |                        |
|---------------------------------|--|----------|--------|--------|-----------------------|------------------------|
| Telegram part                   | Description                              | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command type                    | Read                                     | String   | 3      | All    | sRN                   | 73 52 4E               |
| Command                         | Read hardware settings of host interface | String   | 7      | All    | SIHstHw               | 53 49 48 73 74 48 77   |

Table 402: Telegram structure: sRN SIHstHw

**Example: sRN SIHstHw**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}SIHstHw<ETX>                                   |
|        | Hex    | 02 73 52 4E 20 53 49 48 73 74 48 77 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0B 73 52 4E 20 53 49 48 73 74 48 77 25 |

Table 403: Example: sRN SIHstHw



| Telegram structure: sRA SIHstHw |  |          |        |        |   |  |
|---------------------------------|--|----------|--------|--------|---|--|
| Telegram part                   | Description                              | Variable | Length | Sensor | Values CoLa A (ASCII)                                     | Values CoLa B (Binary)                                       |
| Command type                    | Answer                                   | String   | 3      | All    | sRA   | 73 52 41   |
| Command                         | Read hardware settings of host interface | String   | 7      | All    | SIHstHw   | 53 49 48 73 74 48 77   |
| Interface type data             | Hardware settings data of host interface | Enum_8   | 1      | All    | TX_RS232: 0<br>TX_RS485_2WIRE: 1<br>TX_RS422_485_4WIRE: 2 | TX_RS232: 00<br>TX_RS485_2WIRE: 01<br>TX_RS422_485_4WIRE: 02 |


Table 404: Telegram structure: sRA SIHstHw

**Example: sRA SIHstHw**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX> <b>sRA</b> {SPC} <b>SIHstHw</b> {SPC} <b>0</b> <ETX>                             |
|        | Hex    | 02 73 57 41 20 <b>53 49 48 73 74 48 77</b> 20 <b>00 03</b>                             |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D <b>73 52 41</b> 20 <b>53 49 48 73 74 48 77</b> 20 <b>00 0A</b> |

Table 405: Example: sRA SIHstHw

#### 4.9.11 Set function front panel

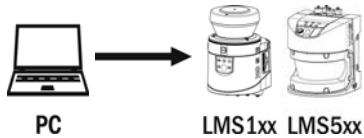


| Telegram structure: sWN LMLfpFcn<br>(Authorized client) |                                 |          |        |        |  |   |
|---|---------------------------------|----------|--------|--------|--|---|
| Telegram part   | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII)                          | Values CoLa B (Binary)                            |
| Command type  | Write                           | String   | 3      | All    | sWN  | 73 57 4E  |
| Command   | Set function of the front panel | String   | 8      | All    | LMLfpFcn                                       | 4C 4D 4C 66 70 46 63 6E                           |
| Reserved  | Reserved                        | Bool_1   | 1      | All    | 1  | 01  |
| LED function Q1/Q2                                      | Code number                     | Enum_8   | 1      | All    | No function: 0<br>Application: 1<br>Command: 2 | No function: 00<br>Application: 01<br>Command: 02 |
| LED function OK/Stop                                    | Code number                     | Enum_8   | 1      | All    | Application: 0<br>Command: 1                   | Application: 00<br>Command: 01                    |
| Display function  | Code number                     | Enum_8   | 1      | All    | No function: 0<br>Application: 1<br>Command: 2 | No function: 00<br>Application: 01<br>Command: 02 |

Table 406: Telegram structure: sWN LMLfpFcn

#### Example: sWN LMLfpFcn

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]LMLfpFcn[SPC]1[SPC]1[SPC]0[SPC]1<ETX>                            |
|        | Hex    | 02 73 57 4E 20 4C 4D 4C 66 70 46 63 6E 20 31 20 31 20 30 20 31 03             |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 4E 20 4C 4D 4C 66 70 46 63 6E 20 01 01 00 01 7B |

Table 407: Example: sWN LMLfpFcn

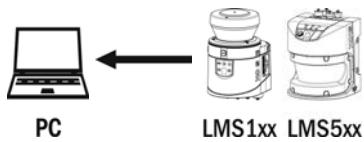

| Telegram structure: sWA LMLfpFcn |                      |          |        |        |                       |                         |
|----------------------------------|----------------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part                    | Description          | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type                     | Answer               | String   | 3      | All    | sWA                   | 73 57 41                |
| Command                          | Front panel function | String   | 8      | All    | LMLfpFcn              | 4C 4D 4C 66 70 46 63 6E |

Table 408: Telegram structure: sWA LMLfpFcn

### Example: sWA LMLfpFcn

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}LMLfpFcn<ETX>                                     |
|        | Hex    | 02 73 57 41 20 4C 4D 4C 66 70 46 63 6E 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0D 73 57 41 20 4C 4D 4C 66 70 46 63 6E 75 |

Table 409: Example: sWA LMLfpFcn

### 4.9.12 Set front LEDs

To use this command, it is necessary to set the function of the LED to “Command” (use sWN LMLfpFcn), otherwise this command will have no influence to the LEDs.

OK and Stop LED can only alternate, if one is switched on, the other will turn automatically off.



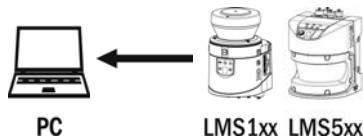
| Telegram structure: sMN mMLSetLed |                    |          |        |        |                                    |  |
|-----------------------------------|--------------------|----------|--------|--------|------------------------------------|--|
| Telegram part                     | Description        | Variable | Length | Sensor | Values CoLa A (ASCII)              | Values CoLa B (Binary)                 |
| Command type                      | Method             | String   | 3      | All    | sMN                                | 73 4D 4E                               |
| Command                           | Set front LED      | String   | 10     | All    | mMLSetLed                          | 6D 4C 4D 4C 53 65 74 4C 65 64          |
| LED                               | LED to turn on/off | Int_8    | 1      | All    | Stop: 1<br>OK: 2<br>Q1: 3<br>Q2: 4 | Stop: 01<br>OK: 02<br>Q1: 03<br>Q2: 04 |
| Status                            | On or Off          | Int_8    | 1      | All    | On: 1<br>Off: 0                    | On: 01<br>Off: 00                      |

Table 410: Telegram structure: sMN mMLSetLed

**Example: sMN mLMLSetLed 1 1 (Stop LED)**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN{SPC}mLMLSetLed{SPC}1{SPC}1<ETX>   |
|        | Hex    | 02 73 4D 4E 20 6D 4C 4D 4C 53 65 74 4C 65 64 20 31 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 4D 4E 20 6D 4C 4D 4C 53 65 74 4C 65 64 20 01 20 01 7F |

Table 411: Example: sMN mLMLSetLed 1 1 (Stop LED)

**Telegram structure: sAN mLMLSetLed**

| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)        |
|---------------|-------------|----------|--------|--------|------------------------|-------------------------------|
| Command type  | Answer      | String   | 3      | All    | sAN                    | 73 41 4E                      |
| Command       | Front LED   | String   | 10     | All    | mLMLSetLed             | 6D 4C 4D 4C 53 65 74 4C 65 64 |
| Status code   | Code number | Bool_1   | 1      | All    | Error: 0<br>Success: 1 | Error: 00<br>Success: 01      |

Table 412: Telegram structure: sAN mLMLSetLed


**Example: sAN mLMLSetLed**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN{SPC}mLMLSetLed{SPC}0<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 4C 4D 4C 53 65 74 4C 65 64 20 00 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 41 4E 20 6D 4C 4D 4C 53 65 74 4C 65 64 20 00 53 |

Table 413: Example: sAN mLMLSetLed

### 4.9.13 Set function of LED1

With this command the operation of LED1 can be defined. Either it has no function (00), it flashes when output Q1 or application is active (01) or it can be turned on and off (02) by another telegram command (sMN mHMISetLed).

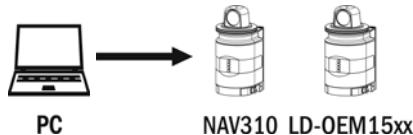

| Telegram structure: sWN HMIfpFcn_Y1<br>(Authorized client) |                                      |          |        |        |  |   |
|--|--------------------------------------|----------|--------|--------|--|---|
| Telegram part  | Description                          | Variable | Length | Sensor | Values CoLa A (ASCII)                          | Values CoLa B (Binary)                            |
| Command type   | Write                                | String   | 3      | All    | sWN  | 73 57 4E  |
| Command  | Set function of the front panel LED1 | String   | 11     | All    | HMIfpFcn_Y1                                    | 48 4D 49 66 70 46 63 6E 5F 59 31                  |
| LED1 function Q1   | Code number                          | Enum_8   | 1      | All    | No function: 0<br>Application: 1<br>Command: 2 | No function: 00<br>Application: 01<br>Command: 02 |

Table 414: Telegram structure: sWN HMIfpFcn\_Y1

#### Example: sWN HMIfpFcn\_Y1 = Command

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}HMIfpFcn_Y1{SPC}2<ETX>   |
|        | Hex    | 02 73 57 4E 20 48 4D 49 66 70 46 63 6E 5F 59 31 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 4E 20 48 4D 49 66 70 46 63 6E 5F 59 31 20 02 4E |

Table 415: Example: sWN HMIfpFcn\_Y1 = Command



| Telegram structure: sWA HMIfpFcn_Y1 |               |          |        |        |                       |                                  |
|-------------------------------------|---------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Answer        | String   | 3      | All    | sWA                   | 73 57 41                         |
| Command                             | LED1 function | String   | 11     | All    | HMIfpFcn_Y1           | 48 4D 49 66 70 46 63 6E 5F 59 31 |

Table 416: Telegram structure: sWA HMIfpFcn\_Y1


**Example: sWA HMIfpFcn\_Y1**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]HMIfpFcn_Y1<ETX>   |
|        | Hex    | 02 73 57 41 20 48 4D 49 66 70 46 63 6E 5F 59 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 41 20 48 4D 49 66 70 46 63 6E 5F 59 31 63 |

Table 417: Example: sWA HMIfpFcn\_Y1

**4.9.14 Set function of LED2**

With this command the operation of LED2 can be defined. Either it has no function (00), it flashes when output Q2 or application is active (01) or it can be turned on and off (02) by another telegram command (sMN mHMISetLed).

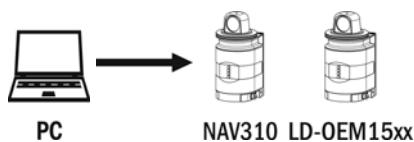
**Telegram structure: sWN HMIfpFcn\_Y2  
(Authorized client)**


| Telegram part    | Description                          | Variable | Length | Sensor | Values CoLa A (ASCII)                          | Values CoLa B (Binary)                            |
|------------------|--------------------------------------|----------|--------|--------|--|---|
| Command type     | Write                                | String   | 3      | All    | sWN  | 73 57 4E  |
| Command          | Set function of the front panel LED2 | String   | 11     | All    | HMIfpFcn_Y2                                    | 48 4D 49 66 70 46 63 6E 5F 59 32                  |
| LED2 function Q2 | Code number                          | Enum_8   | 1      | All    | No function: 0<br>Application: 1<br>Command: 2 | No function: 00<br>Application: 01<br>Command: 02 |

Table 418: Telegram structure: sWN HMIfpFcn\_Y2

**Example: sWN HMIfpFcn\_Y2 = Command**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN[SPC]HMIfpFcn_Y2[SPC]2<ETX>   |
|        | Hex    | 02 73 57 4E 20 48 4D 49 66 70 46 63 6E 5F 59 32 20 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 57 4E 20 48 4D 49 66 70 46 63 6E 5F 59 32 20 02 7D |

Table 419: Example: sWN HMIfpFcn\_Y2 = Command

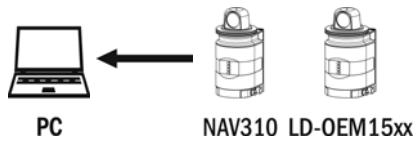

| Telegram structure: sWA HMIfpFcn_Y2 |               |          |        |        |                       |                                  |
|-------------------------------------|---------------|----------|--------|--------|-----------------------|----------------------------------|
| Telegram part                       | Description   | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)           |
| Command type                        | Answer        | String   | 3      | All    | sWA                   | 73 57 41                         |
| Command                             | LED2 function | String   | 11     | All    | HMIfpFcn_Y2           | 48 4D 49 66 70 46 63 6E 5F 59 32 |

Table 420: Telegram structure: sWA HMIfpFcn\_Y2


### Example: sWA HMIfpFcn\_Y2

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWA[SPC]HMIfpFcn_Y2<ETX>   |
|        | Hex    | 02 73 57 41 20 48 4D 49 66 70 46 63 6E 5F 59 32 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 0F 73 57 41 20 48 4D 49 66 70 46 63 6E 5F 59 32 60 |

Table 421: Example: sWA HMIfpFcn\_Y2

### 4.9.15 Switch on/off LED1 or LED2

With this command the LEDs can be switched on and off (e.g. to locate the sensor or test the connection). As a prerequisite, the operation of LED1 and LED2 must have been set to the right function (sWN HMIfpFcn\_).

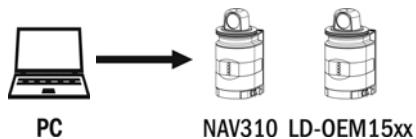

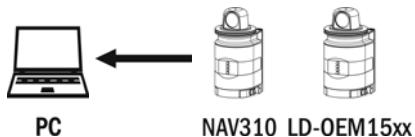
| Telegram structure: sMN mHMISetLed |                                 |          |        |        |                       |                               |
|------------------------------------|---------------------------------|----------|--------|--------|-----------------------|-------------------------------|
| Telegram part                      | Description                     | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)        |
| Command type                       | Method                          | String   | 3      | All    | sMN                   | 73 4D 4E                      |
| Command                            | Set function of the front panel | String   | 10     | All    | mHMISetLed            | 6D 48 4D 49 53 65 74 4C 65 64 |
| LED number 1/2                     | LED number                      | Uint_8   | 1      | All    | LED 1: 3<br>LED 2: 4  | LED 1: 03<br>LED 2: 04        |
| LED function off/on                | Code number                     | Uint_8   | 1      | All    | Off: 0<br>On: 1       | Off: 00<br>On: 01             |

Table 422: Telegram structure: sMN mHMISetLed

**Example: sMN mHMISetLed 1 = On**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sMN{SPC}mHMISetLed{SPC}3{SPC}1<ETX>   |
|        | Hex    | 02 73 4D 4E 20 6D 48 4D 49 53 65 74 4C 65 64 20 33 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 4D 4E 20 6D 48 4D 49 53 65 74 4C 65 64 20 03 20 01 7C |

Table 423: Example: sMN mHMISetLed 1 = On

**Telegram structure: sAN mHMISetLed**

| Telegram part | Description | Variable | Length | Sensor | Values CoLa A (ASCII)       | Values CoLa B (Binary)        |
|---------------|-------------|----------|--------|--------|-----------------------------|-------------------------------|
| Command type  | Answer      | String   | 3      | All    | sAN                         | 73 41 4E                      |
| Command       | LED status  | String   | 10     | All    | mHMISetLed                  | 6D 48 4D 49 53 65 74 4C 65 64 |
| Result        | Code number | Bool_1   | 1      | All    | No success: 0<br>Success: 1 | No success: 00<br>Success: 01 |

Table 424: Telegram structure: sAN mHMISetLed

**Example: sAN mHMISetLed 01**


|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sAN{SPC}mHMISetLed{SPC}1<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 48 4D 49 53 65 74 4C 65 64 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 10 73 41 4E 20 6D 48 4D 49 53 65 74 4C 65 64 20 01 53 |

Table 425: Example: sAN mHMISetLed 01


## 4.9.16 Set 7-segment display to specific symbol or number

**Precondition**

It is mandatory to define that the 7-segment display should react to SOPAS commands. This option needs to be activated using the engineering tool “SOPAS”. Choose “SOPAS command” in the drop-down list for the 7-segment display (as shown in the figure below). Afterwards the segments of the display can be set via telegram.

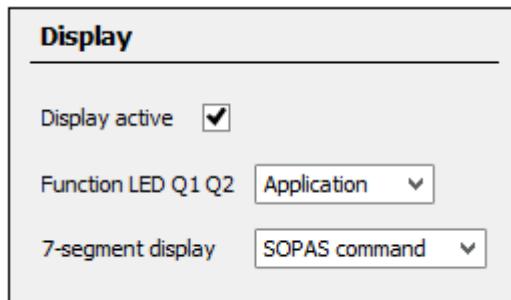

The display is consisting of the segments A-P:

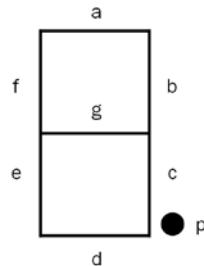

The segments A-G are operated using the bits 0 to 6, the segment P using bit 7:


| Segment     | p | g | f | e | d | c | b | a |
|-------------|---|---|---|---|---|---|---|---|
| Related bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

Example: Showing the number “7” on the display:

| Segment                                | p   | g   | f   | e   | d   | c  | b  | a  |
|--|-----|-----|-----|-----|-----|----|----|----|
| On/Off for showing the required symbol | off | off | off | off | off | on | on | on |
| Binary                                 | 0   | 0   | 0   | 0   | 0   | 1  | 1  | 1  |

Transfer binary into ASCII:

00000111 bin  $\triangleq$  07 ASCII (30 37hex)

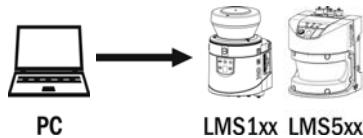


| Telegram structure: sMN mLMLSetDisp<br>(no required user level) |  |          |        |        |   |   |
|---|--|----------|--------|--------|---|---|
| Telegram part   | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type  | Request (SOPAS method by name)   | String   | 3      | All    | sMN   | 73 4D 4E  |
| Command   | Set 7-segment display  | String   | 11     | All    | mLMLSetDisp   | 6D 4C 4D 4C 53 65 74 44 69 73 70  |
| Display   | 7-segment display in the display of the LMS. The segments A-G are operated using the bits 0 to 6, the point P using bit 7. | Uint_8   | 1      | All    | 00h display off<br>...<br>07h display 7<br>...<br>FFh display completely on | LMS1xx:<br>00<br>...<br>07<br>...<br>FF<br><br>LMS5xx:<br>30 30<br>...<br>30 37<br>...<br>46 46 |

Table 426: Telegram structure: sMN mLMLSetDisp

**Example: sMN mLMLSetDisp 07 (Showing the number “7” on the display)**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN[SPC]mLMLSetDisp[SPC]07<ETX>  |
|        | Hex    | 02 73 4D 4E 20 6D 4C 4D 4C 53 65 74 44 69 73 70 20 30 37 03   |
| CoLa B | Binary | LMS1xx:<br>02 02 02 02 00 00 00 11 73 4D 4E 20 6D 4C 4D 4C 53 65 74 44 69 73 70 20 07 3B<br><br>LMS5xx:<br>02 02 02 02 00 00 00 12 73 4D 4E 20 6D 4C 4D 4C 53 65 74 44 69 73 70 20 30 37 3B |

Table 427: Example: sMN mLMLSetDisp 07 (Showing the number “7” on the display)

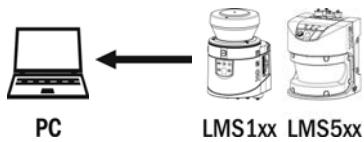

| Telegram structure: sAN mLMLSetDisp<br>(no required user level) |  |          |        |        |                       |  |
|---|--|----------|--------|--------|-----------------------|--|
| Telegram part   | Description  | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type  | Answer (SOPAS answer)  | String   | 3      | All    | sAN                   | 73 41 4E   |
| Command   | Set 7-segment display  | String   | 11     | All    | mLMLSetDisp           | 6D 4C 4D 4C 53 65 74 44 69 73 70   |
| ErrorCode   | The command has been accepted if the error code 1 is returned. | Enum8    | 1      | All    | 0 error<br>1 no error | LMS1xx:<br>00 error<br>01 no error<br><br>LMS5xx:<br>30 error<br>31 no error |

Table 428: Telegram structure: sAN mLMLSetDisp

**Example: sAN mLMLSetDisp 1**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN{SPC}mLMLSetDisp{SPC}1<ETX>   |
|        | Hex    | 02 73 41 4E 20 6D 4C 4D 4C 53 65 74 44 69 73 70 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 11 73 41 4E 20 6D 4C 4D 4C 53 65 74 44 69 73 70 20 01 31 |

Table 429: Example: sAN mLMLSetDisp 1

#### 4.9.17 Switching CoLa dialect on ethernet host port


##### Note



It is not allowed to use this telegram in a faster cycle than 10 ms!

After switching the CoLa dialect by this telegram, you have to store the changes permanently and reboot the sensor to activate the chosen CoLA dialect.

Binary CRC32 is available since the firmware version V1.80.0

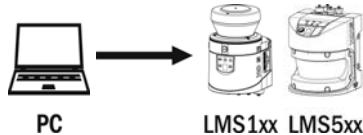


| Telegram structure: sWN EIHstCola<br>(user level 'authorized client' required) |              |          |        |        |  |                            |
|--|--------------|----------|--------|--------|--|----------------------------|
| Telegram part  | Description  | Variable | Length | Sensor | Values CoLa A (ASCII)                                    | Values CoLa B (Binary)     |
| Command type   | Read         | String   | 3      | All    | sWN  | 73 57 4E                   |
| Command  |              | String   | 9      | All    | EIHstCola  | 45 49 48 73 74 43 6F 6C 61 |
| CoLa dialect   | CoLa dialect | Enum_8   | 1      | All    | 0d = CoLa ASCII<br>1d = CoLa Binary<br>2d = Binary CRC32 | 00<br>01<br>02             |

Table 430: Telegram structure: sMN EIHstCola

##### Example: sWN EIHstCola 0

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sWN{SPC}EIHstCola{SPC}0<ETX>                                       |
|        | Hex    | 02 73 57 4E 20 45 49 48 73 74 43 6F 6C 61 20 30 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 00 73 57 4E 20 45 49 48 73 74 43 6F 6C 61 20 00 08 |

Table 431: Example: sWN EIHstCola 0

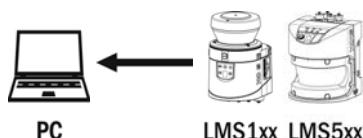

| Telegram structure: sWA EIHstCola<br>(user level 'authorized client' required) |             |          |        |        |                       |                         |
|--|-------------|----------|--------|--------|-----------------------|-------------------------|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)  |
| Command type   | Answer      | String   | 3      | All    | sWA                   | 73 57 41                |
| Command  |             | String   | 9      | All    | EIHstCola             | 45 49 48 73 74 43 6F 6C |

| Telegram structure: sWA EIHstCola<br>(user level 'authorized client' required) |             |          |        |        |                       |                        |
|--|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|  |             |          |        |        |                       | 61                     |

Table 432: Telegram structure: sWA EIHstCola

**Example: sWA EIHstCola**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sWA{SPC}EIHstCola<ETX>  |
|        | Hex    | 02 73 57 41 20 45 49 48 73 74 43 6F 6C 61 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 0E 73 57 41 20 45 49 48 73 74 43 6F 6C 61 20 07 |

Table 433: Example: sWA EIHstCola

## 4.10 Application

### 4.10.1 Request status change of monitoring fields on event

#### Precondition



Necessary sensor setup:

1. Setup detection fields
2. Setup evaluation cases and assign outputs to the evaluation cases


Advantage of this telegram:

Status of the evaluation case (1=field free, 2=detecting or 3=infringement) is transmitted if there is a status change of the monitoring field within the application.

For example if the object size in the field exceeds the set object size parameter but the duration of the object inside the field is below the set time parameter. Then the status change from “field free” to “detecting” will be given out via telegram.

Necessary procedure after each power up of the sensor:

1. Establish Ethernet connection to LMS
2. Activate Ethernet output

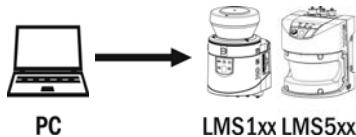


| Telegram structure: sEN ECRChangeArr<br>(no required user level) |               |          |        |                  |                       |  |
|--|---------------|----------|--------|------------------|-----------------------|--|
| Telegram part  | Description   | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type   | Read          | String   | 3      | All              | sEN                   | 73 45 4E   |
| Command  | Data telegram | String   | 12     | All              | ECRChangeArr          | 45 43 52 43 68 61 6E 67 65 41 72 72                                  |
| Reporting  | Start/stop    | Enum_8   | 1      | LMS1xx<br>LMS5XX | Stop: 0<br>Start: 1   | LMS1xx:<br>Stop: 00<br>Start: 01<br>LMS5xx:<br>Stop: 30<br>Start: 31 |

Table 434: Telegram structure: sEN ECRChangeArr

#### Example: sEN ECRChangeArr 1

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sEN[SPC]ECR ChangeArr[SPC]1<ETX>  |
|        | Hex    | 02 73 45 4E 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 45 4E 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 01 7A |

Table 435: Example: sEN ECRChangeArr 1

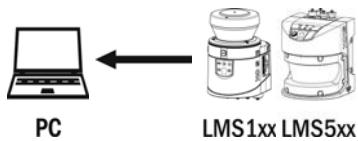

| Telegram structure: sEA ECRChangeArr<br>(no required user level) |               |          |        |                 |                       |  |
|--|---------------|----------|--------|-----------------|-----------------------|--|
| Telegram part  | Description   | Variable | Length | Sensor          | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type   | Read          | String   | 3      | All             | sEA                   | 73 45 41   |
| Command  | Data telegram | String   | 12     | All             | ECRChangeArr          | 45 43 52 43 68 61 6E 67<br>65 41 72 72                               |
| Reporting  | Start/stop    | Enum_8   | 1      | LM1xx<br>LMS5XX | Stop: 0<br>Start: 1   | LMS1xx:<br>Stop: 00<br>Start: 01<br>LMS5xx:<br>Stop: 30<br>Start: 31 |

Table 436: Telegram structure: sEA ECRChangeArr

**Example: sEA ECRChangeArr 1**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sEA{SPC}ECRChangeArr{SPC}1<ETX>   |
|        | Hex    | 02 73 45 41 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 31 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 12 73 45 41 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 01 75 |

Table 437: Example: sEA ECRChangeArr 1



**NOTE**

The answer to the telegram will be followed by data that is sent on event.

The sensor only sends the following answer if there is a status change of the evaluation case within the application.



| Telegram structure: sSN ECRChangeArr<br>(no required user level) |             |          |        |        |                       |                        |
|--|-------------|----------|--------|--------|-----------------------|------------------------|
| Telegram part  | Description | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary) |
| Command  | Read        | String   | 3      | All    | sSN                   | 73 53 4E               |

| Telegram structure: sSN ECRChangeArr<br>(no required user level) |   |          |        |                 |  |  |
|--|---|----------|--------|-----------------|--|--|
| Telegram part  | Description   | Variable | Length | Sensor          | Values CoLa A (ASCII)                            | Values CoLa B (Binary)   |
| type   |   |          |        |                 |  |  |
| Command  | Data telegram   | String   | 12     | All             | ECRChangeArr                                     | 45 43 52 43 68 61 6E 67<br>65 41 72 72   |
| System counter   | Time in $\mu$ s since power up max.<br>71min then starting from 0 again | Uint_32  | 4      | LM1xx<br>LMS5XX | 0 ... FFFFFFFFh                                  | 00 00 00 00 ... FF FF FF FF  |
| Array  | 1-10  | UInt_8   | 1      | LM1xx<br>LMS5XX | 0h ... Ah<br>(0d ... 10d)                        | 01 ... OA  |
| EVC number   | 1-10  | UInt_8   | 1      | LM1xx<br>LMS5XX | 0h ... Ah<br>(0d ... 10d)                        | 01 ... OA  |
| Object detection   |   | Enum_8   | 1      | LM1xx<br>LMS5XX | 1= field free<br>2= detecting<br>3= infringement | LMS1xx:<br><b>01</b> = field free<br><b>02</b> = detecting<br><b>03</b> = infringement<br><br>LMS5xx:<br>31= field free<br>32= detecting<br>33= infringement |
| Year   |   | Uint_16  | 2      | LM1xx<br>LMS5XX | 0000h ... 270Fh<br>(0d...9999d)                  | 00 00 ... 27 0F  |
| Month  | 1 to 12   | UInt_8   | 1      | LM1xx<br>LMS5XX | 00h ... 0Ch<br>(0d ... 12d)                      | 00 ... 0C  |
| Day  | Day of month 1 to 31  | Uint_8   | 1      | LM1xx<br>LMS5XX | 00h ... 1Fh<br>(0d ... 31d)                      | 00 ... 1F  |
| Hour   | 0 to 23   | UInt_8   | 1      | LM1xx<br>LMS5XX | 00h ... 17h<br>(0d ... 23d)                      | 00 ... 17  |
| Minute   | 0 to 59   | Uint_8   | 1      | LM1xx<br>LMS5XX | 00h ... 3Bh<br>0d ... 59d                        | 00 ... 3B  |
| Second   | 0 to 59   | UInt_8   | 1      | LM1xx<br>LMS5XX | 00h ... 3Bh<br>(0d ... 59d)                      | 00 ... 3B  |
| $\mu$ Second   | 0 to 9999999  | Uint_32  | 4      | LM1xx<br>LMS5XX | 00000000h ... 000F423Fh<br>(0d ... 999999d)      | 00 00 00 00 ... 00 OF 42 3F  |

Table 438: Telegram structure: sSN ECRChangeArr

**Example: sSN ECRChangeArr 1**

|       |        |  |
|-------|--------|--|
| Col A | ASCII  | <STX>sSN{SPC}ECR Change Arr{SPC}97F8C2E3{SPC}1{SPC}1{SPC}1{SPC}7B2{SPC}1{SPC}1{SPC}0{SPC}2A{SPC}1D{SPC}63DA8<ETX>  |
|       | Hex    | 02 73 53 4E 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 39 37 46 38 43 32 45 33 20 31 20 31 20 31 20 37 42 32 20 31 20 31 20 30 20 32 41 20 31 44 20 36 33 44 41 38 03 |
| Col B | Binary | 02 02 02 02 00 00 00 24 73 53 4E 20 45 43 52 43 68 61 6E 67 65 41 72 72 20 CF 09 10 99 00 01 01 02 07 B2 01 01 02 09 1C 00 03 47 D8 2E                               |


Table 439: Example: sSN ECRChangeArr 1

#### 4.10.2 Request SOPAS field data structure

##### Note

**i** The SOPAS telegram “mLFEgetField” requests a field number as parameter and returns the corresponding SOPAS field data structure. If the field number is not configured, the answer telegram will be filled with 0.

Example – Request the field data structure of an evaluation field (field number: 1) that has been parameterized in the engineering tool SOPAS.

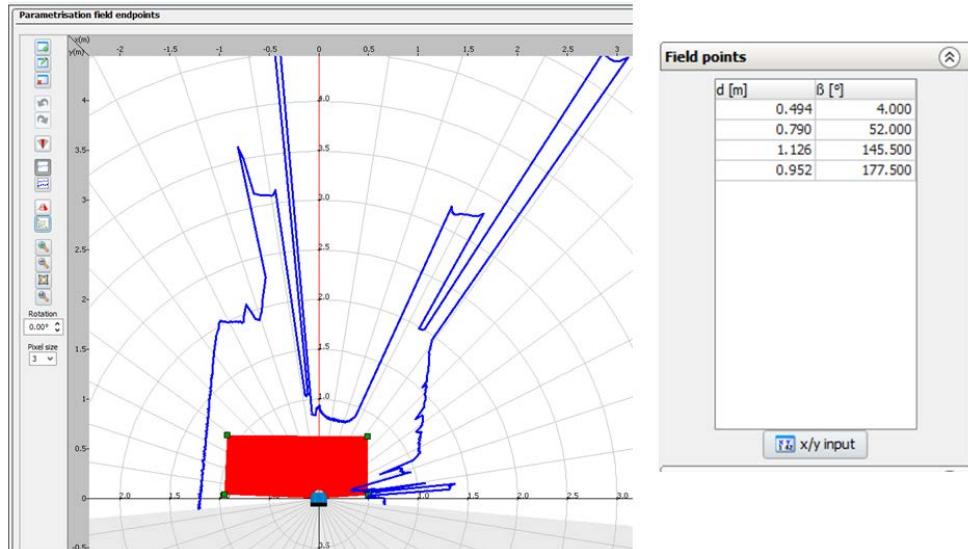

The answer telegram will include information regarding the field data structure of the requested evaluation field (type: segmented, number of field points etc.)

Please note: The sensor will switch to the state “Stop measurement” during read out. After the read out you have to switch the sensor back to “Run measurement”.




| Telegram structure: sMN mLFEgetField<br>(required user level: Authorized Client) |                   |          |        |                  |                       |  |
|--|-------------------|----------|--------|------------------|-----------------------|--|
| Telegram part  | Description       | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)                 |
| Command type   | Request           | String   | 3      | LMS1xx<br>LMS5XX | sMN                   | 73 4D 4E                               |
| Command  | Only one telegram | String   | 14     | LMS1xx<br>LMS5XX | mLFEgetField          | 6D 4C 46 45 67 65 74 46<br>69 65 6C 64 |
| Command  |                   | UInt_32  | 4      | LMS1xx<br>LMS5XX | 1...10                | 00 00 00 01...00 00 01 01              |

Table 440: Telegram structure: sMN mLFEgetField

### Example: sMN mLFEgetField 1

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sMN{SPC}mLFEgetField{SPC}1<ETX>  |
|        | Hex    | 02 73 4D 4E 20 6D 4C 46 45 67 65 74 46 69 65 6C 64 20 31 03                               |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 4D 4E 20 6D 4C 46 45 67 65 74 46 69 65 6C 64 20 00 00 00 01 67 |

Table 441: Example: sMN mLFEgetField 1

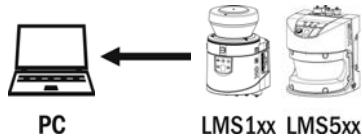

| Telegram structure: sAN mLFEgetField |                       |  |                                    |                  |                       |   |
|--------------------------------------|-----------------------|--|------------------------------------|------------------|-----------------------|---|
| Telegram part                        | Description           | Variable   | Length                             | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)                                      |
| Read                                 |                       | String   | 3                                  | All              | sAN                   | 73 41 4E  |
| Data telegram                        |                       | String   | 12                                 | LMS1xx<br>LMS5xx | mLFEgetField          | 6D 4C 46 45 67<br>65 74 46 69 65<br>6C 64                   |
| Field header                         | Distance Scale Factor | Scale factor or factor of the measurement values (for the LMS5xx this depends on the angular resolution) | Real as float according to IEEE754 | 4                | LMS1xx<br>LMS5xx      | Factor × 1:<br>3F800000h<br>Factor × 2:<br>40000000h        |
|                                      | Distance Scale Offset | Sets starting point of measurement   | Real as float according to IEEE754 | 4                | LMS1xx<br>LMS5xx      | 00000000  |
|                                      | Angle Scale Factor    | Angle resolution   | UInt_32                            | 4                | LMS1xx<br>LMS5xx      | +50000d (1388h)   |
|                                      | Angle Scale Offset    | Starting angle   | Int_32                             | 4                | LMS1xx<br>LMS5xx      | -50000d (FFFF3CB0h)   |
|                                      | Field type            |  | Enum_8                             | 1                | LMS1xx<br>LMS5xx      | 0 = Radial<br>1 = Rectangle<br>2 = Segmented<br>3 = Dynamic |
|                                      | Field number          |  | UInt_8                             | 1                | LMS1xx<br>LMS5xx      | 0 .. 10   |
|                                      |                       |  |                                    |                  |                       | 00...0A   |

|   |                              |  |         |     |                  |   |  |
|---|------------------------------|--|---------|-----|------------------|---|--|
| Segmented field<br><br>Only shown if field type is configured   | Segmented field configured   |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 = no data for segmented field available, i.e. field type is not segmented field<br><br>1 = data for segmented field available, i.e. field type is segmented field         | 00 00...00 01                          |
|   | Number of field points       |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 .. 571  | 00 00...02 3B                          |
|   | Angle index                  |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | LMS1xx:<br>0 .. 1081<br><br>LMS5xx:<br>0 .. 1140  | 00 00 ... 04 39<br><br>00 00 ... 04 74 |
|   | Start distance               |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 .. 65535 (FFFFh)<br>FFFFh = not set   | 00 00...FF FF                          |
|   | End distance                 |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 .. 65535 (FFFFh)<br>FFFFh = not set   | 00 00...FF FF                          |
|   | ...                          |  | ...     | ... | ...              | ...   | ...                                    |
|   | Angle index                  |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | LMS1xx:<br>0 .. 1081<br><br>LMS5xx:<br>0 .. 1140  | 00 00 ... 04 39<br><br>00 00 ... 04 74 |
|   | Start distance               |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 .. 65535 (FFFFh)<br>FFFFh = not set   | 00 00...FF FF                          |
|   | End distance                 |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 .. 65535 (FFFFh)<br>FFFFh = not set   | 00 00...FF FF                          |
|   | Rectangular field configured |  | UInt_16 | 2   | LMS1xx<br>LMS5xx | 0 = no data for rectangular field available, i.e. field type is not rectangular field<br><br>1 = data for rectangular field available, i.e. field type is rectangular field | 00 00...00 01                          |
| Rectangular field<br><br>Only shown if field type is configured | Angle of reference point     |  | Int_32  | 4   | LMS1xx<br>LMS5xx | LMS1xx:<br>FFF92230h ... 225510h<br>(-450000d ... 225,0000d)<br><br>LMS5xx:<br>-50000 .. 1850000  | FF F9 22 30 ... 00<br>22 55 10         |

|   |                             |                             |         |   |                  |   |  |
|---|-----------------------------|-----------------------------|---------|---|------------------|---|--|
|   | Distance of reference point |                             | UInt_16 | 2 | LMS1xx<br>LMS5xx | LMS1xx:<br>LMS100, LMS111:<br>0 h ...4E20h<br>(0d..20000d)<br>LMS151:<br>0h...C350h<br>(0d...50000d)<br>LMS5xx<br>0 .. 65535                                | 00 00 00 00 ... 00<br>00 4E 20<br><br>00 00 00 00 ... 00<br>00 C3 50 |
|   |                             | Rotation angle              | Int_32  | 4 | LMS1xx<br>LMS5xx | -1800000 ..<br>1800000  | FF E4 88 C0...00<br>1B 77 40   |
|   |                             | Width                       | UInt_32 | 4 | LMS1xx<br>LMS5xx | 0 .. 4294967295   | 00 00 00 00 ... 7F<br>FF FF FF                                       |
|   |                             | Length                      | UInt_32 | 4 | LMS1xx<br>LMS5xx | 0 .. 4294967295   | 00 00 00 00 ... 7F<br>FF FF FF                                       |
| Radial field  |                             | Radial field configured     | UInt_16 | 2 | LMS1xx<br>LMS5xx | 0 (radial fields are not available)   | 00 00  |
| Dynamic field<br><br>Only shown if field type is configured | Dynamic field configured    |                             | UInt_16 | 2 | LMS1xx<br>LMS5xx | 0 = no data for dynamic field available, i.e. field type is not dynamic field<br><br>1 = data for dynamic field available, i.e. field type is dynamic field | 00 00...00 01  |
|   | Angle of reference point    |                             | Int_32  | 4 | LMS1xx<br>LMS5xx | LMS1xx:<br>-450000 ...<br>2250000<br><br>LMS5xx:<br>-50000 .. 1850000   | FF F9 22 30 ... 00<br>22 55 10                                       |
|   |                             | Distance of reference point | UInt_16 | 2 | LMS1xx<br>LMS5xx | LMS100, LMS111:<br>0 h ...4E20h<br>(0d..20000d)<br><br>LMS151:<br>0h...C350h<br>(0d...50000d)<br><br>LMS5xx:<br>0 .. 65535                                  | 00 00 00 00 ... 00<br>00 4E 20<br><br>00 00 00 00 ... 00<br>00 C3 50 |
|   | Rotation angle              |                             | Int_32  | 4 | LMS1xx<br>LMS5xx | -1800000 ..<br>1800000  | FF E4 88 C0...00<br>1B 77 40   |
|   | Width                       |                             | UInt_32 | 4 | LMS1xx<br>LMS5xx | 0 .. 4294967295   | 00 00 00 00 ... 7F<br>FF FF FF                                       |

|                      |                |  |         |         |                  |                 |                                |
|----------------------|----------------|--|---------|---------|------------------|-----------------|--------------------------------|
|                      | Length         |  | UInt_32 | 4       | LMS1xx<br>LMS5xx | 0 .. 4294967295 | 00 00 00 00 ... 7F<br>FF FF FF |
|                      | Maximum speed  |  | Int_16  | 2       | LMS1xx<br>LMS5xx | 0 .. 30000      | 00 00 ... 7530                 |
|                      | Maximum length |  | UInt_32 | 4       | LMS1xx<br>LMS5xx | 0 .. 4294967295 | 00 00 00 00 ... 7F<br>FF FF FF |
| Version number       |                |  | UInt_16 | 2       | LMS1xx<br>LMS5xx | 0 .. 65535      | 00 00 ... FF FF                |
| Length of field name |                |  | UInt_16 | 2       | LMS1xx<br>LMS5xx | 0 .. 32         | 00 00..00 20                   |
| Field name           |                |  | String  | 0...32  | LMS1xx<br>LMS5xx | FIELD1          | 46 49 45 4c 44<br>31           |
| Length of comment    |                | If no comment, also no length with a string type ... | UInt_16 | 2       | LMS1xx<br>LMS5xx | 0 .. 128        | 00 00..00 80                   |
| Comment              |                |  | String  | 0...128 | LMS1xx<br>LMS5xx |                 |                                |

Table 442: Example: sAN mLFEgetField

**Example: sAN mLFEgetField**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sAN[SPC]mLFEgetField[SPC]40000000[SPC]00000000[SPC]1388[SPC]FFFF3CB0[SPC]2[SPC]1[SPC]1<br>[SPC]4[SPC]12[SPC]FFFF[SPC]F7[SPC]72[SPC]FFFF[SPC]18B[SPC]12D[SPC]FFFF[SPC]233[SPC]16D[SPC]FFF<br>F[SPC]1DC[SPC]0[SPC]0[SPC]0[SPC]1[SPC]6[SPC]FIELD1[SPC]0<ETX>  |
|        | Hex    | 02 73 41 4E 20 6D 4C 46 45 67 65 74 46 69 65 6C 64 20 34 30 30 30 30 30 30 30 20 30 30 30 30 30<br>30 30 30 20 31 33 38 38 20 46 46 46 46 33 43 42 30 20 32 20 31 20 31 20 34 20 31 32 20 46 46<br>46 20 46 37 20 37 32 20 46 46 46 46 20 31 38 42 20 31 32 44 20 46 46 46 46 20 32 33 33 20 31 36<br>44 20 46 46 46 46 20 31 44 43 20 30 20 30 20 30 20 31 20 36 20 46 49 45 4C 44 31 20 30 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 51 73 41 4E 20 6D 4C 46 45 67 65 74 46 69 65 6C 64 20 40 00 00 00 00 00 00<br>00 00 00 13 88 FF FF 3C B0 02 01 00 01 00 04 00 12 FF FF 00 F7 00 72 FF F0 01 8B 01 2D FF FF 02 33<br>01 6D FF FF 01 DC 00 00 00 00 00 00 01 00 06 46 49 45 4C 44 31 00 00 FE  |

Table 443: Example: sAN mLFEgetField


### 4.10.3 Request perpendicular distance once


#### Precondition



The evaluation strategy “Perpendicular distance” has to be activated in the engineering tool SOPAS. After you get the perpendicular distance displayed in SOPAS as shown below, you are able to read out the telegram.

Set the EVC to evaluation strategy “Perpendicular distance” and choose the field which you like to read out. Also keep in mind, that the field evaluation will only be activated by choosing an output.

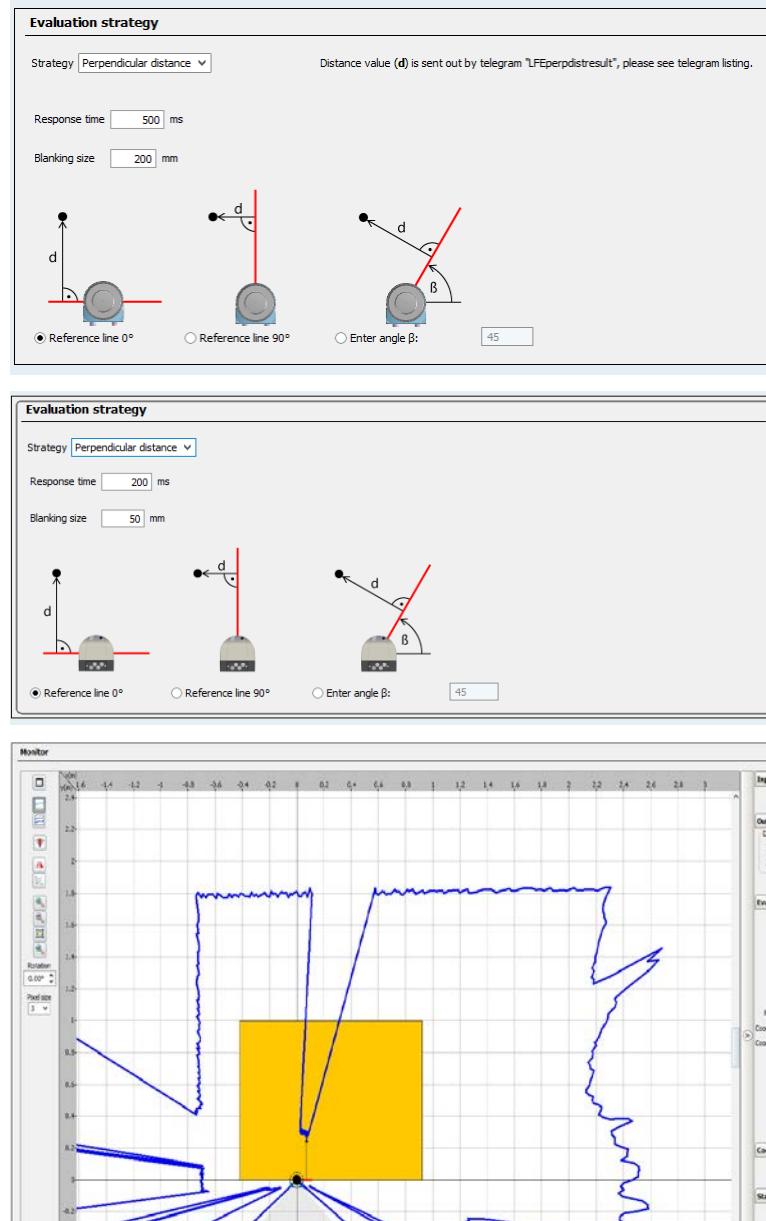

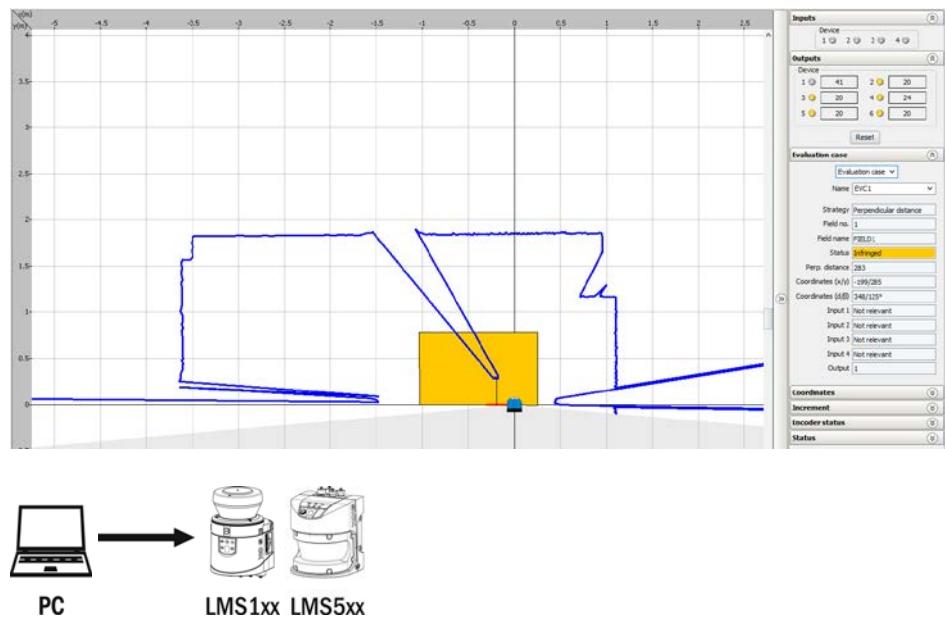


| Telegram structure: sRN LFEperpdistresult<br>(no required user level) |                   |          |        |        |                       |  |
|---|-------------------|----------|--------|--------|-----------------------|--|
| Telegram part   | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                             |
| Command type  | Read              | String   | 3      | All    | sRN                   | 73 52 4E   |
| Command   | Only one telegram | String   | 14     | All    | LFEperpdistresult     | 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 |

Table 444: Telegram structure: sRN LFEperpdistresult

**Example: sRN LFEperpdistresult**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}LFEperpdistresult<ETX>   |
|        | Hex    | 02 73 52 4E 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 15 73 52 4E 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 14 |

Table 445: Example: sRN LFEperpdistresult

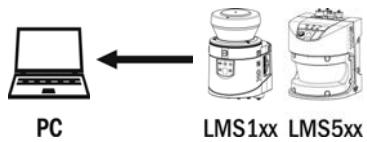

| Telegram structure: sRA LFEperpdistresult<br>(no required user level) |  |          |        |                  |   |   |
|---|--|----------|--------|------------------|---|---|
| Telegram part   | Description  | Variable | Length | Sensor           | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type  | Read   | String   | 3      | All              | sRA   | 73 52 41  |
| Command   | Data telegram  | String   | 14     | LMS1xx<br>LMS5XX | LFEperpdistresult   | 4C 46 45 70 65 72 70 64<br>69 73 74 72 65 73 75 6C<br>74  |
| Array   | 1-10   | UInt_8   | 1      | LMS1xx<br>LMS5XX | 0h ... Ah<br>(0d ...10d)  | 01 ... OA   |
| EVC number  | 1-10   | UInt_8   | 1      | LMS1xx<br>LMS5XX | 0h ... Ah<br>(0d ...10d)  | 01 ... OA   |
| Perpendicular distance  | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | UInt_32  | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>0h ...4E20h (0..20000d)<br>LMS151:<br>0h...C350h (0...50000d)<br><br>LMS5xx:<br>0h ... 13880h<br>(0d ... 80000d)   | LMS100, LMS111:<br>00 00 00 00 ...00 00 4E 20<br>LMS151:<br>00 00 00 00...00 00 C3 50<br><br>LMS5xx:<br>00 00 00 00 ... 00 01 38 80 |
| Reserved  | default 0  | UInt_32  | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00   |
| Reserved  | default 0  | UInt_32  | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00   |
| X-Pos [mm]  | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>FFFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br>LMS151:<br>FFFFF3CB0h...C350h (-<br>50000d...50000d)<br>LMS5xx:<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80                                   |
| Y-Pos [mm]  | LMS100,LMS111  | Int_32   | 4      | LMS1xx           | LMS100, LMS111:   | FF FF B1 E0 ... 00 00 4E 20   |

| Telegram structure: sRA LFEperpdistresult<br>(no required user level) |   |          |        |        |   |  |
|---|---|----------|--------|--------|---|--|
| Telegram part   | Description   | Variable | Length | Sensor | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
|   | 0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m |          |        | LMS5XX | FFFF B1E0 h ... 4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF 3CB0h...C350h (-<br>50000d...50000d)<br><br>LMS5xx:<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80 |

| Telegram structure: sRA_LFEperpdistresult<br>(no required user level) |  |          |        |                  |  |   |
|---|--|----------|--------|------------------|--|---|
| Telegram part   | Description  | Variable | Length | Sensor           | Values CoLa A (ASCII)  | Values CoLa B (Binary)  |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Radial distance   | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | UInt_32  | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>0h ... 4E20h (0..20000d)<br>LMS151:<br>0h...C350h (0...50000d)<br><br>LMS5xx:<br>0h ... 13880h<br>(0d ... 80000d) | LMS100, LMS111:<br>00 00 00 00 ...00 00 4E 20<br>LMS151:<br>00 00 00 00...00 00 C3 50<br><br>LMS5xx:<br>00 00 00 00 ... 00 01 38 80 |
| Radial distance angle   | LMS1xx:<br>-45,0000°...<br>225,0000°<br><br>LMS5xx:<br>-5,0000°...<br>185,0000°        | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS1xx:<br>FFF92230h ... 225510h<br>(-450000d ... 225,0000d)<br><br>LMS5xx:<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d        | LMS1xx:<br>FF F9 22 30 ... 00 22 55 10<br><br>LMS5xx:<br>FF FF 3C B0 ... 00 1C 3A 90  |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reference line angle  | LMS1xx:<br>-45,0000°...<br>225,0000°<br><br>LMS5xx:<br>-5,0000°...<br>185,0000°        | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS1xx:<br>FFF92230h ... 225510h<br>(-450000d ... 225,0000d)<br><br>LMS5xx:<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d        | LMS1xx:<br>FF F9 22 30 ... 00 22 55 10<br><br>LMS5xx:<br>FF FF 3C B0 ... 00 1C 3A 90  |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30   | 00 00 00 00   |

| Telegram structure: sRA LFEperpdistresult<br>(no required user level) |             |          |        |                  |                       |                        |
|---|-------------|----------|--------|------------------|-----------------------|------------------------|
| Telegram part   | Description | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|   |             |          |        | LMS5XX           |                       |                        |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |

Table 446: Telegram structure: sRA LFEperpdistresult

**Example: sRA LFEperpdistresult**

|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRA{SPC}LFEperpdistresult{SPC}1{SPC}2{SPC}21A{SPC}0{SPC}0{SPC}0{SPC}21A{SPC}0{SPC}21A{SPC}D<br>BBAC{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}0{SPC}<ETX>  |
|        | Hex    | 02 73 52 41 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 31 20 32 20 32 31 41 20 30<br>20 30 20 30 20 32 31 41 20 30 20 32 31 41 20 44 42 42 41 30 20 30 20 30 20 30 20 30 20 30 20 30<br>20 30 20 30 20 30 20 30 03  |
| CoLa B | Binary | 02 02 02 02 00 00 00 61 73 52 41 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 00 01<br>02 00<br>00 00<br>00 38 |

Table 447: Example: sRA LFEperpdistresult




#### 4.10.4 Request perpendicular distance continuously on event


##### Precondition



The evaluation strategy “Perpendicular distance” has to be activated in the engineering tool SOPAS. After you get the perpendicular distance displayed in SOPAS as shown below, you are able to read out the telegram.

Set the EVC to evaluation strategy “Perpendicular distance” and choose the field which you like to read out. Also keep in mind, that the field evaluation will only be activated by choosing an output.

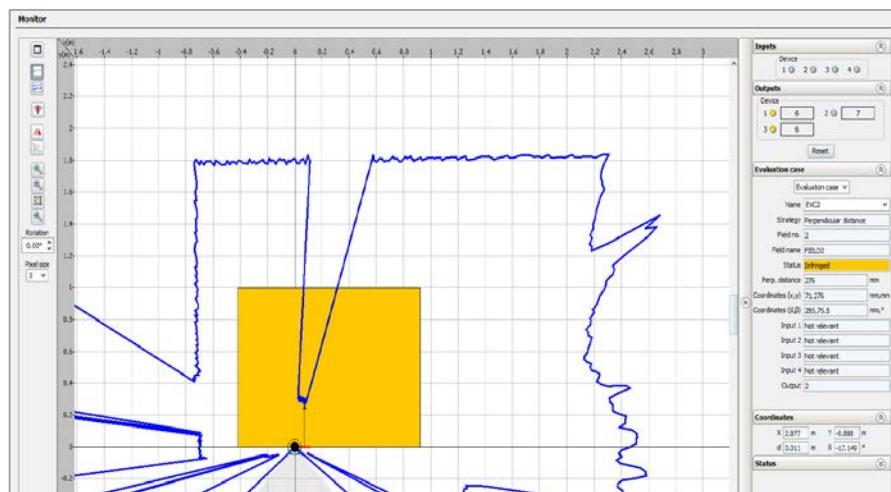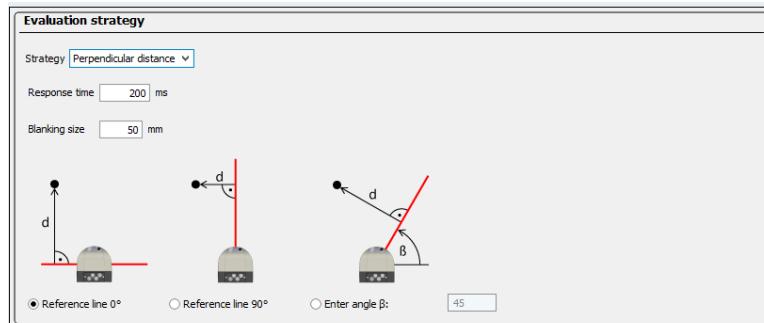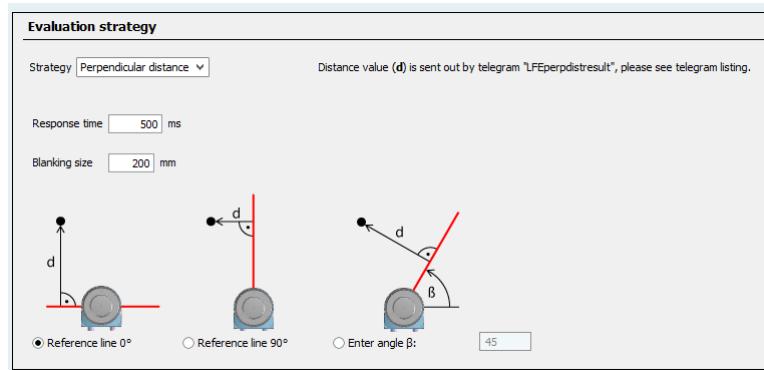

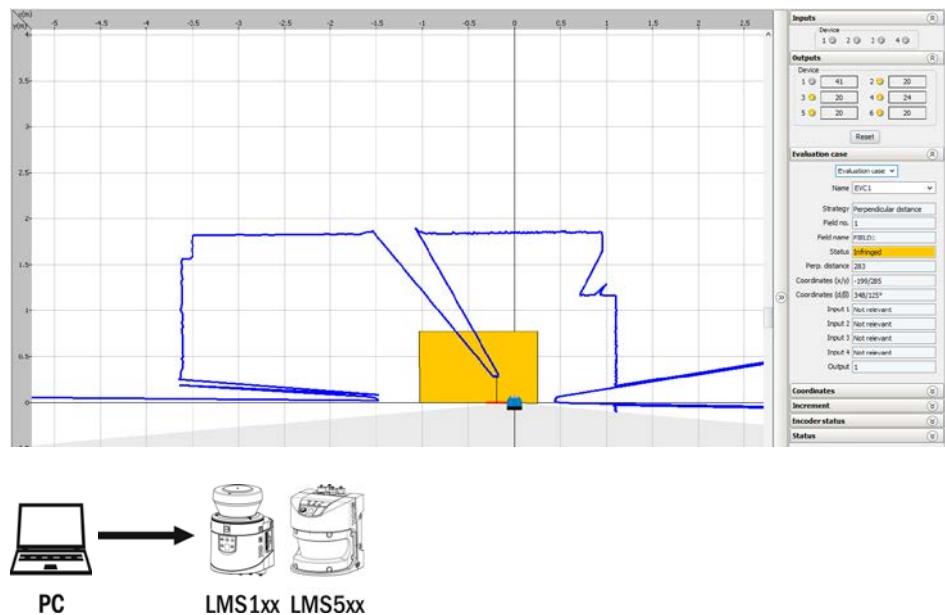


| Telegram structure: sEN LFEperpdistresult<br>(no required user level) |                   |          |        |                  |                       |  |
|---|-------------------|----------|--------|------------------|-----------------------|--|
| Telegram part   | Description       | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)                             |
| Command type  | Read              | String   | 3      | All              | sEN                   | 73 45 4E   |
| Command   | Only one telegram | String   | 14     | All              | LFEperpdistresult     | 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 |
| Reporting   | Start/stop        | Enum_8   | 1      | LMS1xx<br>LMS5XX | Stop: 0<br>Start: 1   | Stop: 00<br>Start: 01                              |

Table 448: Telegram structure: sEN LFEperpdistresult

**Example: sEN LFEperpdistresult 1**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX> sEN[SPC]LFEperpdistresult[SPC]1<ETX>   |
|        | Hex    | 02 73 45 4E 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 31 03   |
| CoLa B | Binary | LMS1xx:<br>02 02 02 02 00 00 00 17 73 45 4E 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 01 22<br>LMS5xx:<br>02 02 02 02 00 00 00 17 73 45 4E 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 31 12 |

Table 449: Example: sEN LFEperpdistresult 1

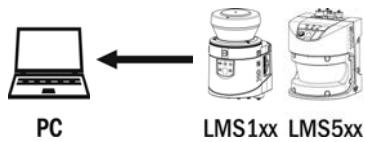

| Telegram structure: sEA LFEperpdistresult<br>(no required user level) |                   |          |        |        |                       |  |
|---|-------------------|----------|--------|--------|-----------------------|--|
| Telegram part   | Description       | Variable | Length | Sensor | Values CoLa A (ASCII) | Values CoLa B (Binary)                             |
| Command type  | Read              | String   | 3      | All    | sEA                   | 73 45 41   |
| Command   | Only one telegram | String   | 14     | All    | LFEperpdistresult     | 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 |
| Reporting   | Start/stop        | Enum_8   | 1      | LMS1xx | Stop: 0               | Stop: 00   |
|   |                   |          |        | LMS5XX | Start: 1              | Start: 01  |

Table 450: Telegram structure: sEA LFEperpdistresult

**Example: sEA LFEperpdistresult 1**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX> sEA{SPC}LFEperpdistresult{SPC}1<ETX>   |
|        | Hex    | 02 73 45 41 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 31 03   |
| CoLa B | Binary | LMS1xx:<br>02 02 02 02 00 00 00 17 73 45 41 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 01 2D<br>LMS5xx:<br>02 02 02 02 00 00 00 17 73 45 41 20 4C 46 45 70 65 72 70 64 69 73 74 72 65 73 75 6C 74 20 31 1D |


Table 451: Example: sEA LFEperpdistresult 1



**NOTE**

The answer to the telegram will be followed by data that is sent on event.

The sensor only sends the following answer if there are perpendicular distance values calculated within the application.

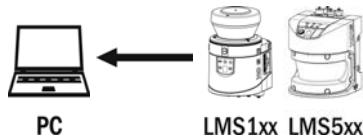

| Telegram structure: sSN LFEperpdistresult<br>(no required user level) |  |          |        |                  |   |   |
|---|--|----------|--------|------------------|---|---|
| Telegram part   | Description  | Variable | Length | Sensor           | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Command type  | Read   | String   | 3      | All              | sSN   | 73 53 4E  |
| Command   | Data telegram  | String   | 14     | LMS1xx<br>LMS5XX | LFEperpdistresult   | 4C 46 45 70 65 72 70 64<br>69 73 74 72 65 73 75 6C<br>74  |
| Array   | 1-10   | UInt_8   | 1      | LMS1xx<br>LMS5XX | 0h ... Ah<br>(0d ...10d)  | 01 ... OA   |
| EVC number  | 1-10   | UInt_8   | 1      | LMS1xx<br>LMS5XX | 0h ... Ah<br>(0d ...10d)  | 01 ... OA   |
| Perpendicular distance  | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | UInt_32  | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>0h ...4E20h (0..20000d)<br>LMS151:<br>0h...C350h (0...50000d)<br><br>LMS5xx:<br>0h ... 13880h<br>(0d ... 80000d)   | LMS100, LMS111:<br>00 00 00 00 ...00 00 4E 20<br>LMS151:<br>00 00 00 00...00 00 C3 50<br><br>LMS5xx:<br>00 00 00 00 ... 00 01 38 80 |
| Reserved  | default 0  | UInt_32  | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00   |
| Reserved  | default 0  | UInt_32  | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00   |
| X-Pos [mm]  | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>FFFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br>LMS151:<br>FFFFF3CB0h...C350h (-<br>50000d...50000d)<br>LMS5xx:<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80                                   |
| Y-Pos [mm]  | LMS100,LMS111  | Int_32   | 4      | LMS1xx           | LMS100, LMS111:   | FF FF B1 E0 ... 00 00 4E 20   |

| Telegram structure: sSN LFEperpdistresult<br>(no required user level) |  |          |        |                  |   |  |
|---|--|----------|--------|------------------|---|--|
| Telegram part   | Description  | Variable | Length | Sensor           | Values CoLa A (ASCII)   | Values CoLa B (Binary)   |
|   | 0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m                  |          |        | LMS5XX           | FFFFB1E0 h ... 4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF3CB0h...C350h (-<br>50000d...50000d)<br><br>LMS5xx:<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00  |
| Radial distance   | LMS100,LMS111<br>0 m ... 20 m<br>LMS151<br>0 m ... 50 m<br><br>LMS5xx:<br>0 m ... 80 m | UInt_32  | 4      | LMS1xx<br>LMS5XX | LMS100, LMS111:<br>0h ... 4E20h (0..20000d)<br><br>LMS151:<br>0h...C350h (0...50000d)<br><br>LMS5xx:<br>0h ... 13880h<br>(0d ... 80000d)                            | LMS100, LMS111:<br>00 00 00 00 ... 00 00 4E 20<br><br>LMS151:<br>00 00 00 00...00 00 C3 50<br><br>LMS5xx:<br>00 00 00 00 ... 00 01 38 80 |
| Radial distance angle   | LMS1xx:<br>-45,0000°...<br>225,0000°<br><br>LMS5xx:<br>-5,0000°...<br>185,0000°        | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS1xx:<br>FFF92230h ... 225510h<br>(-450000d ... 225,0000d)<br><br>LMS5xx:<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d                                       | LMS1xx:<br>FF F9 22 30 ... 00 22 55 10<br><br>LMS5xx:<br>FF FF 3C B0 ... 00 1C 3A 90   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00  |
| Reference line angle  | LMS1xx:<br>-45,0000°...<br>225,0000°<br><br>LMS5xx:<br>-5,0000°...<br>185,0000°        | Int_32   | 4      | LMS1xx<br>LMS5XX | LMS1xx:<br>FFF92230h ... 225510h<br>(-450000d ... 225,0000d)<br><br>LMS5xx:<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d                                       | LMS1xx:<br>FF F9 22 30 ... 00 22 55 10<br><br>LMS5xx:<br>FF FF 3C B0 ... 00 1C 3A 90   |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00  |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx<br>LMS5XX | 30  | 00 00 00 00  |
| Reserved  | default 0  | Int_32   | 4      | LMS1xx           | 30  | 00 00 00 00  |

| Telegram structure: sSN LFEperpdistresult<br>(no required user level) |             |          |        |                  |                       |                        |
|---|-------------|----------|--------|------------------|-----------------------|------------------------|
| Telegram part   | Description | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary) |
|   |             |          |        | LMS5XX           |                       |                        |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |
| Reserved  | default 0   | Int_32   | 4      | LMS1xx<br>LMS5XX | 30                    | 00 00 00 00            |

Table 452: Telegram structure: sSN LFEperpdistresult

### **Example: sSN LFEperpdistresult**


Table 453: Example: sSN LFEperpdistresult


#### **4.10.5 Request latest field infringement info**

## Note

The command is used to request entries from the “field infringement logging” via telegram. Using this command, only the latest field infringement is given out. The answer telegram includes information regarding date and time of the infringement as well as the associated EVC and infringement position.

Please note: Only activated EVCs will be considered. An EVC is only valid, when an output is defined in the EVC. Using this telegram, an EVC without a defined output is not taken into consideration.

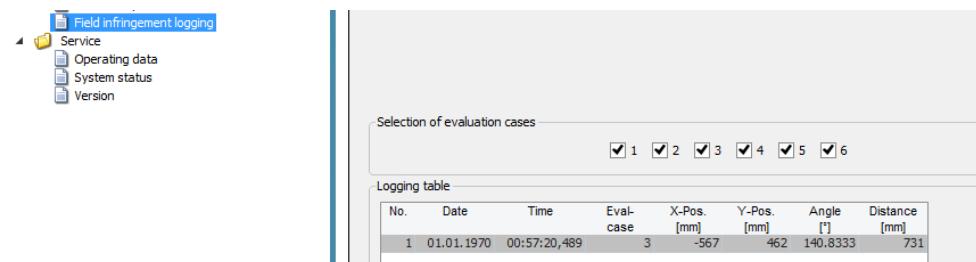

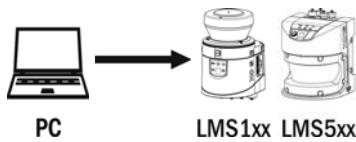

| Telegram structure: sRN LFEinfringementinfo |                   |          |        |                  |                       |  |
|---|-------------------|----------|--------|------------------|-----------------------|--|
| Telegram part                               | Description       | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type                                | Read              | String   | 3      | All              | sRN                   | 73 52 4E   |
| Command                                     | Only one telegram | String   | 19     | LMS1xx<br>LMS5XX | LFEinfringementinfo   | 4C 46 45 69 6E 66 72 69<br>6E 67 65 6D 65 6E 74 69<br>6E 66 6F |

Table 454: Telegram structure: sRN LFEinfringementinfo

### Example: sRN LFEinfringementinfo


|        |        |   |
|--------|--------|---|
| CoLa A | ASCII  | <STX>sRN{SPC}LFEinfringementinfo <ETX>  |
|        | Hex    | 02 73 52 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 03                      |
| CoLa B | Binary | 02 02 02 02 00 00 00 17 73 52 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 0A |

Table 455: Example: sEN LFEinfringementinfo



### NOTE

The answer telegram refers to the latest recorded field infringement. Therefore the device outputs the latest field infringement entry from the logging table.

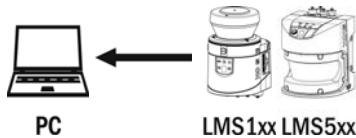

| Telegram structure: sRA LFEinfringementinfo |               |                                     |         |                  |                                 |  |
|---|---------------|-------------------------------------|---------|------------------|---------------------------------|--|
| Telegram part                               | Description   | Variable                            | Length  | Sensor           | Values CoLa A (ASCII)           | Values CoLa B (Binary)   |
| Command type                                | Read          | String                              | 3       | All              | sRA                             | 73 52 41   |
| Command                                     | Data telegram | String                              | 19      | LMS1XX<br>LMS5XX | LFEinfringementinfo             | 4C 46 45 69 6E 66 72 69 6E<br>67 65 6D 65 6E 74 69 6E 66<br>6F |
| Time Info                                   | Counter       | continuous counter of infringements |         | LMS1XX<br>LMS5XX | 0000h ... 270Fh<br>(0d...9999d) | 00 00 ... 27 0F  |
|   | Year          |                                     | Uint_16 | 2                | LMS1XX<br>LMS5XX                | 0000h ... 270Fh<br>(0d...9999d)                                |
|   | Month         | 1 to 12                             | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 0Ch<br>(0d ... 12d)                                    |

| Telegram structure: sRA_LFEinfringementinfo |             |   |         |        |  |   |
|---|-------------|---|---------|--------|--|---|
| Telegram part                               | Description | Variable  | Length  | Sensor | Values CoLa A (ASCII)  | Values CoLa B (Binary)  |
| Infringement-Info                           | Day         | Day of month 1 to 31  | Uint_8  | 1      | LMS1XX<br>LMS5XX<br>00h ... 1Fh<br>(0d ... 31d)  | 00 ... 1F   |
|   | Hour        | 0 to 23   | Uint_8  | 1      | LMS1XX<br>LMS5XX<br>00h ... 17h<br>(0d ... 23d)  | 00 ... 17   |
|   | Minute      | 0 to 59   | Uint_8  | 1      | LMS1XX<br>LMS5XX<br>00h ... 3Bh<br>0d ... 59d  | 00 ... 3B   |
|   | Second      | 0 to 59   | Uint_8  | 1      | LMS1XX<br>LMS5XX<br>00h ... 3Bh<br>(0d ... 59d)  | 00 ... 3B   |
|   | µSecond     | 0 to 999999   | Uint_32 | 4      | LMS1XX<br>LMS5XX<br>00000000h ... 000F423Fh<br>(0d ... 999999d)  | 00 00 00 00 ... 00 0F 42 3F   |
| Infringement-Info                           | EVC number  | 1-10  | UInt_8  | 1      | LMS1XX<br>LMS5XX<br>0h ... Ah<br>(0d ... 10d)  | 01 ... 0A   |
|   | X-Pos [mm]  | LMS100,LMS111<br>-20 m ... 20 m<br><br>LMS151<br>-50 m ... 50 m<br><br>LMS5xx<br>-80 m ... 80 m | Int_32  | 4      | LMS1XX<br>LMS5XX<br>LMS100, LMS111:<br>FFFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF3CB0h...C350h<br>(-50000d...50000d)<br><br>LMS5xx<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80 |
|   | Y-Pos [mm]  | LMS100,LMS111<br>-20 m ... 20 m<br><br>LMS151<br>-50 m ... 50 m<br><br>LMS5xx<br>-80 m ... 80 m | Int_32  | 4      | LMS1XX<br>LMS5XX<br>LMS100, LMS111:<br>FFFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF3CB0h...C350h<br>(-50000d...50000d)<br><br>LMS5xx<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80 |

| Telegram structure: sRA LFEinfringementinfo |   |          |        |                  |  |                             |
|---|---|----------|--------|------------------|--|-----------------------------|
| Telegram part                               | Description                               | Variable | Length | Sensor           | Values CoLa A (ASCII)  | Values CoLa B (Binary)      |
| Distance [mm]                               | LMS100,LMS111<br>0 m ... 20 m             | UInt_32  | 4      | LMS1XX<br>LMS5XX | LMS100, LMS111:<br>0 h ... 4E20h<br>(0d..20000d)             | 00 00 00 00 ... 00 00 4E 20 |
|   | LMS151<br>0 m ... 50 m                    |          |        |                  | LMS151:<br>0h...C350h (0d...50000d)                          | 00 00 00 00 ... 00 00 C3 50 |
|   | LMS5xx<br>0 m ... 80 m                    |          |        |                  | LMS5xx<br>0h ... 13880h<br>(0d ... 80000d)                   | 00 00 00 00 ... 00 01 38 80 |
|   | Angle [°]<br>-450000 ... 2250000          | Int_32   | 4      | LMS1XX<br>LMS5XX | LMS1xx<br>FFF92230 h... 00225510 h<br>(-450000d ... 225000d) | FF F9 22 30 ... 00 22 55 10 |
|   | LMS5xx<br>-5,0000° ... 185,0000°          |          |        |                  | LMS5xx<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 185000d      | FF FF 3C B0 ... 00 1C 3A 90 |
|   | Angle of Layer [°]<br>-450000 ... 2250000 | Int_32   | 4      | LMS1XX<br>LMS5XX | LMS1xx<br>FFF92230 h... 00225510 h<br>(-450000d ... 225000d) | FF F9 22 30 ... 00 22 55 10 |
|   | LMS5xx<br>-5,0000° ... 185,0000°          |          |        |                  | LMS5xx<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 185000d      | FF FF 3C B0 ... 00 1C 3A 90 |
|   | Object Size [mm]                          | UInt_32  | 4      | LMS1XX<br>LMS5XX | LMS100, LMS111:<br>0 h ... 4E20h<br>(0d..20000d)             | 00 00 00 00 ... 00 00 4E 20 |
|   | LMS151<br>0 m ... 50 m                    |          |        |                  | LMS151:<br>0h...C350h (0d...50000d)                          | 00 00 00 00 ... 00 00 C3 50 |
|   | LMS5xx<br>0 m ... 80 m                    |          |        |                  | LMS5xx<br>0h ... 13880h<br>(0d ... 80000d)                   | 00 00 00 00 ... 00 01 38 80 |

Table 456: Example: sRA LFEinfringementinfo

### Example: sRA LFEinfringementinfo

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sRA{SPC}LFEinfringementinfo{SPC}4{SPC}7B2{SPC}1{SPC}1{SPC}2{SPC}32{SPC}1F{SPC}3A1B0{SPC}1{SPC}FFFFFDAE{SPC}D6{SPC}277{SPC}187083{SPC}4A<ETX>  |
|        | Hex    | 02 73 52 41 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 34 20 37 42 32 20 31 20 31 20 33 32 20 31 46 20 33 41 31 42 30 20 31 20 46 46 46 46 46 44 41 45 20 44 36 20 32 37 37 20 31 38 37 30 38 33 20 34 41 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 3A 73 52 41 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 00 04 07 B2 01 01 02 32 1F 00 03 A1 B0 01 FF FF FDAE 00 00 00 D6 00 00 02 77 00 18 70 83 00 00 00 4A F9                          |

Table 457: Example: sRA LFEinfringementinfo


#### 4.10.6 Request field infringement info continuously on event

##### Note



The command is used to request entries from the “field infringement logging” via telegram. Using this command, a telegram will be sent from the sensor on event (in case of a new field infringement). The answer telegram includes information regarding date and time of the infringement as well as the associated EVC and infringement position.

Please note: Only activated EVCs will be considered. An EVC is only valid, when an output is defined in the EVC. Using this telegram, an EVC without a defined output is not taken into consideration.

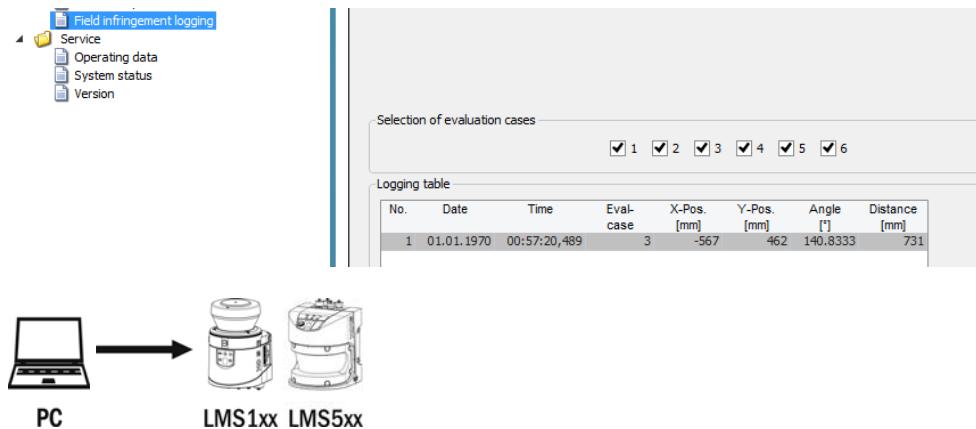

| Telegram structure: sEN LFEinfringementinfo |               |          |        |                  |                       |  |
|---|---------------|----------|--------|------------------|-----------------------|--|
| Telegram part                               | Description   | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type                                | Event         | String   | 3      | All              | sEN                   | 73 45 4E   |
| Command                                     | Data telegram | String   | 19     | LMS1XX<br>LMS5XX | LFEinfringementinfo   | 4C 46 45 69 6E 66 72 69<br>6E 67 65 6D 65 6E 74 69<br>6E 66 6F       |
| Reporting                                   | Start/stop    | Enum_8   | 1      | LMS1XX<br>LMS5XX | Stop: 0<br>Start: 1   | LMS1xx:<br>Stop: 00<br>Start: 01<br>LMS5xx:<br>Stop: 30<br>Start: 31 |

Table 458: Telegram structure: sEN LFEinfringementinfo

##### Example: sEN LFEinfringementinfo 1

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sEN{SPC}LFEinfringementinfo{SPC}1<ETX>  |
|        | Hex    | 02 73 45 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 31 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 45 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 01<br>3C |

Table 459: Example: sEN LFEinfringementinfo 1



| Telegram structure: sEA LFEinfringementinfo |               |          |        |                  |                       |  |
|---|---------------|----------|--------|------------------|-----------------------|--|
| Telegram part                               | Description   | Variable | Length | Sensor           | Values CoLa A (ASCII) | Values CoLa B (Binary)   |
| Command type                                | Event         | String   | 3      | All              | sEA                   | 73 45 41   |
| Command                                     | Data telegram | String   | 19     | LMS1XX<br>LMS5XX | LFEinfringementinfo   | 4C 46 45 69 6E 66 72 69<br>6E 67 65 6D 65 6E 74 69<br>6E 66 6F       |
| Reporting                                   | Start/stop    | Enum_8   | 1      | LMS1XX<br>LMS5XX | Stop: 0<br>Start: 1   | LMS1xx:<br>Stop: 00<br>Start: 01<br>LMS5xx:<br>Stop: 30<br>Start: 31 |

Table 460: Telegram structure: sEA LFEinfringementinfo

**Example: sEA LFEinfringementinfo 1**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sEA{SPC}LFEinfringementinfo{SPC}1<ETX>  |
|        | Hex    | 02 73 45 41 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 31 03                         |
| CoLa B | Binary | 02 02 02 02 00 00 00 19 73 45 41 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 01<br>33 |


Table 461: Example: sEA LFEinfringementinfo 1



**NOTE**

The answer to the telegram will be followed by data that is sent on event.

The sensor only sends the following data if there is a new field infringement detected and noted in the field infringement logging.

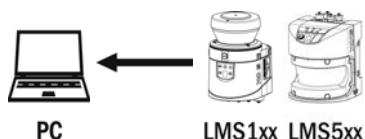

| Telegram structure: sSN LFEinfringementinfo |               |   |         |                  |                                 |  |
|---|---------------|---|---------|------------------|---------------------------------|--|
| Telegram part                               | Description   | Variable  | Length  | Sensor           | Values CoLa A (ASCII)           | Values CoLa B (Binary)   |
| Command type                                | Read          | String  | 3       | All              | sSN                             | 73 53 4E   |
| Command                                     | Data telegram | String  | 19      | LMS1XX<br>LMS5XX | LFEinfringementinfo             | 4C 46 45 69 6E 66 72 69 6E<br>67 65 6D 65 6E 74 69 6E 66<br>6F   |
| Time Info                                   | Counter       | continious counter of infringements   |         | LMS1XX<br>LMS5XX | 0000h ... 270Fh<br>(0d...9999d) | 00 00 ... 27 0F  |
|   | Year          |   | Uint_16 | 2                | LMS1XX<br>LMS5XX                | 0000h ... 270Fh<br>(0d...9999d)  |
|   | Month         | 1 to 12   | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 0Ch<br>(0d ... 12d)  |
|   | Day           | Day of month 1 to 31  | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 1Fh<br>(0d ... 31d)  |
|   | Hour          | 0 to 23   | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 17h<br>(0d ... 23d)  |
|   | Minute        | 0 to 59   | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 3Bh<br>0d ... 59d  |
|   | Second        | 0 to 59   | Uint_8  | 1                | LMS1XX<br>LMS5XX                | 00h ... 3Bh<br>(0d ... 59d)  |
|   | µSecond       | 0 to 999999   | Uint_32 | 4                | LMS1XX<br>LMS5XX                | 00000000h ... 000F423Fh<br>(0d ... 999999d)  |
| Infringement-Info                           | EVC number    | 1-10  | UInt_8  | 1                | LMS1XX<br>LMS5XX                | 0h ... Ah<br>(0d ... 10d)  |
|   | X-Pos [mm]    | LMS100,LMS111<br>-20 m ... 20 m<br><br>LMS151<br>-50 m ... 50 m<br><br>LMS5xx<br>-80 m ... 80 m | Int_32  | 4                | LMS1XX<br>LMS5XX                | LMS100, LMS111:<br>FFFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF3CB0h...C350h<br>(-50000d...50000d)<br><br>LMS5xx<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) |
|   |               |   |         |                  |                                 | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80  |
|   |               |   |         |                  |                                 |  |

| Telegram structure: sSN LFEinfringementinfo |   |          |        |                  |   |   |
|---|---|----------|--------|------------------|---|---|
| Telegram part                               | Description   | Variable | Length | Sensor           | Values CoLa A (ASCII)   | Values CoLa B (Binary)  |
| Y-Pos [mm]                                  | LMS100,LMS111<br>-20 m ... 20 m<br><br>LMS151<br>-50 m ... 50 m<br><br>LMS5xx<br>-80 m ... 80 m | Int_32   | 4      | LMS1XX<br>LMS5XX | LMS100, LMS111:<br>FFFFB1E0 h ...4E20h<br>(-20000d..20000d)<br><br>LMS151:<br>FFFF3CB0h...C350h<br>(-50000d...50000d)<br><br>LMS5xx<br>FFFEC780h ... 13880h<br>(-80000d ... 80000d) | FF FF B1 E0 ... 00 00 4E 20<br><br>FF FF 3C B0 ... 00 00 C3 50<br><br>FF FE C7 80 ... 00 01 38 80 |
| Distance [mm]                               | LMS100,LMS111<br>0 m ... 20 m<br><br>LMS151<br>0 m ... 50 m<br><br>LMS5xx<br>0 m ... 80 m       | UInt_32  | 4      | LMS1XX<br>LMS5XX | LMS100, LMS111:<br>0 h ...4E20h<br>(0d..20000d)<br><br>LMS151:<br>0h...C350h (0d...50000d)<br><br>LMS5xx<br>0h ... 13880h<br>(0d ... 80000d)  | 00 00 00 00 ... 00 00 4E 20<br><br>00 00 00 00 ... 00 00 C3 50<br><br>00 00 00 00 ... 00 01 38 80 |
| Angle [°]                                   | LMS1xx<br>-450000 ... 2250000<br><br>LMS5xx<br>-5,0000° ... 185,0000°                           | Int_32   | 4      | LMS1XX<br>LMS5XX | LMS1xx<br>FFF92230 h... 00225510 h<br>(-450000d ... 2250000d)<br><br>LMS5xx<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d   | FF F9 22 30 ... 00 22 55 10<br><br>FF FF 3C B0 ... 00 1C 3A 90                                    |
| Angle of Layer [°]                          | LMS1xx<br>-450000 ... 2250000<br><br>LMS5xx<br>-5,0000° ... 185,0000°                           | Int_32   | 4      | LMS1XX<br>LMS5XX | LMS1xx<br>FFF92230 h... 00225510 h<br>(-450000d ... 2250000d)<br><br>LMS5xx<br>FFFF3CB0h ... 001C3A90h<br>50000d ... 1850000d   | FF F9 22 30 ... 00 22 55 10<br><br>FF FF 3C B0 ... 00 1C 3A 90                                    |
| Object Size [mm]                            | LMS100,LMS111<br>0 m ... 20 m<br><br>LMS151<br>0 m ... 50 m<br><br>LMS5xx<br>0 m ... 80 m       | UInt_32  | 4      | LMS1XX<br>LMS5XX | LMS100, LMS111:<br>0 h ...4E20h<br>(0d..20000d)<br><br>LMS151:<br>0h...C350h (0d...50000d)<br><br>LMS5xx<br>0h ... 13880h<br>(0d ... 80000d)  | 00 00 00 00 ... 00 00 4E 20<br><br>00 00 00 00 ... 00 00 C3 50<br><br>00 00 00 00 ... 00 01 38 80 |

Table 462: Example: sSN LFEinfringementinfo


**Example: sSN LFEinfringementinfo**

|        |        |  |
|--------|--------|--|
| CoLa A | ASCII  | <STX>sSN{SPC}LFEinfringementinfo{SPC}6{SPC}7B2{SPC}1{SPC}1{SPC}0{SPC}19{SPC}21{SPC}9D788{SPC}1{SPC}41{SPC}C3{SPC}0{SPC}CE{SPC}AE8F8{SPC}0{SPC}A8<ETX>  |
|        | Hex    | 02 73 53 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 36 20 37 42 32 20 31 20 31 20 30 20 31 39 20 32 31 20 39 44 37 38 38 20 31 20 34 31 20 43 33 20 30 20 43 45 20 41 45 38 46 38 20 30 20 41 38 03 |
| CoLa B | Binary | 02 02 02 02 00 00 00 40 73 53 4E 20 4C 46 45 69 6E 66 72 69 6E 67 65 6D 65 6E 74 69 6E 66 6F 20 00 06 07 B2 01 01 00 19 21 00 09 D7 88 01 00 00 00 41 00 00 00 C3 00 00 00 00 00 00 00 CE 00 0A E8 F8 00 00 00 00 00 A8 09 |

Table 463: Example: sSN LFEinfringementinfo

## 5 Diagnostics

### 5.1 SOPAS error codes

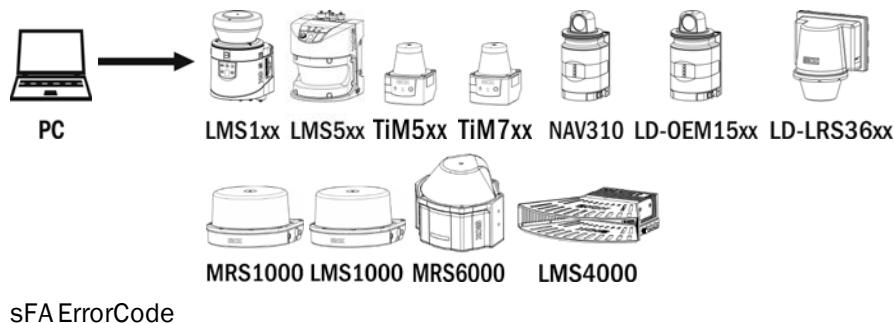

| Telegram structure: sFA ErrorCode       |   |      |      |
|---|---|------|------|
| Error code                              | Description   | Dec. | Hex. |
| Sopas_Ok                                | No error  | 0    | 0    |
| Sopas_Error_METHODIN_ACCESSDENIED       | Wrong userlevel, access to method not allowed   | 1    | 1    |
| Sopas_Error_METHODIN_UNKNOWNINDEX       | Trying to access a method with an unknown Sopas index   | 2    | 2    |
| Sopas_Error_VARIABLE_UNKNOWNINDEX       | Trying to access a variable with an unknown Sopas index   | 3    | 3    |
| Sopas_Error_LOCALCONDITIONFAILED        | Local condition violated, e.g. giving a value that exceeds the minimum or maximum allowed value for this variable   | 4    | 4    |
| Sopas_Error_INVALID_DATA                | Invalid data given for variable, this errorcode is deprecated (is not used anymore).  | 5    | 5    |
| Sopas_Error_UNKNOWN_ERROR               | An error with unknown reason occurred, this errorcode is deprecated.  | 6    | 6    |
| Sopas_Error_BUFFER_OVERFLOW             | The communication buffer was too small for the amount of data that should be serialised.  | 7    | 7    |
| Sopas_Error_BUFFER_UNDERFLOW            | More data was expected, the allocated buffer could not be filled.   | 8    | 8    |
| Sopas_Error_ERROR_UNKNOWN_TYPE          | The variable that shall be serialised has an unknown type. This can only happen when there are variables in the firmware of the device that do not exist in the released description of the device. This should never happen. | 9    | 9    |
| Sopas_Error_VARIABLE_WRITE_ACCESSDENIED | It is not allowed to write values to this variable. Probably the variable is defined as read-only.  | 10   | A    |
| Sopas_Error_UNKNOWN_CMD_FOR_NAMESERVER  | When using names instead of indices, a command was issued that the nameserver does not understand.  | 11   | B    |
| Sopas_Error_UNKNOWN_COLA_COMMAND        | The CoLa protocol specification does not define the given command, command is unknown.  | 12   | C    |
| Sopas_Error_METHODIN_SERVER_BUSY        | It is not possible to issue more than one command at a time to an SRT device.   | 13   | D    |
| Sopas_Error_FLEX_OUT_OF_BOUNDS          | An array was accessed over its maximum length.  | 14   | E    |

| Telegram structure: sFA ErrorCode     |   |      |      |
|---------------------------------------|---|------|------|
| Error code                            | Description   | Dec. | Hex. |
| Sopas_Error_EVENTREG_UNKNOWNINDEX     | The event you wanted to register for does not exist, the index is unknown.  | 15   | F    |
| Sopas_Error_COLA_A_VALUE_OVERFLOW     | The value does not fit into the value field, it is too large.   | 16   | 10   |
| Sopas_Error_COLA_A_INVALID_CHARACTER  | Character is unknown, probably not alphanumeric.  | 17   | 11   |
| Sopas_Error_OSAI_NO_MESSAGE           | Only when using SRTOS in the firmware and distributed variables this error can occur. It is an indication that no operating system message could be created. This happens when trying to GET a variable.    | 18   | 12   |
| Sopas_Error_OSAI_NO_ANSWER_MESSAGE    | This is the same as Sopas_Error_OSAI_NO_MESSAGE with the difference that it is thrown when trying to PUT a variable.  | 19   | 13   |
| Sopas_Error_INTERNAL                  | Internal error in the firmware, probably a pointer to a parameter was null.   | 20   | 14   |
| Sopas_Error_HubAddressCorrupted       | The Sopas Hubaddress is either too short or too long.   | 21   | 15   |
| Sopas_Error_HubAddressDecoding        | The Sopas Hubaddress is invalid, it can not be decoded (Syntax).  | 22   | 16   |
| Sopas_Error_HubAddressAddressExceeded | Too many hubs in the address  | 23   | 17   |
| Sopas_Error_HubAddressBlankExpected   | When parsing a HubAddress an expected blank was not found. The HubAddress is not valid.   | 24   | 18   |
| Sopas_Error_AsyncMethodsAreSuppressed | An asynchronous method call was made although the device was built with "AsyncMethodsSuppressed". This is an internal error that should never happen in a released device.                                  | 25   | 19   |
| Sopas_Error_ComplexArraysNotSupported | Device was built with „ComplexArraysSuppressed“ because the compiler does not allow recursions. But now a complex array was found. This is an internal error that should never happen in a released device. | 26   | 20   |

Table 464: SOPAS error codes

**Example: sFA ErrorCode Wrong userlevel**

|       |        |   |
|-------|--------|---|
| Col A | ASCII  | <STX>sFA{SPC <b>01</b>                                  |
|       | Hex    | 02 73 46 41 20 <b>30 31</b> 03                          |
| Col B | Binary | 02 02 02 02 00 00 00 05 <b>73 46 41</b> 20 <b>01</b> 55 |

Table 465: Example: sFA ErrorCode Wrong userlevel

## 5.2 Additional information

Every response telegram starts with a separate framed string:

<STX>sSI 2 1<ETX><STX>“Answer”<ETX>

If it is an event from SOPAS, send command: <STX>sEN SCParmChngd 0<ETX> to deactivate that event.

## 6 List of tables

|           |  |    |
|-----------|--|----|
| Table 1:  | Example: Binary telegram.....  | 7  |
| Table 2:  | Example: ASCII telegram.....   | 8  |
| Table 3:  | Telegram structure: sMN SetAccessMode.....   | 12 |
| Table 4:  | Example: sMN SetAccessMode.....  | 12 |
| Table 5:  | Telegram structure: sAN SetAccessMode.....   | 13 |
| Table 6:  | Example for LMS100: sAN SetAccessMode.....   | 13 |
| Table 7:  | Telegram structure: sMN mLMPsetscancfg.....  | 16 |
| Table 8:  | Example: sMN mLMPsetscancfg for LMS1xx with 1 measurement sector of 270° .....     | 17 |
| Table 9:  | Example: sMN mLMPsetscancfg for LD-XXX###1 with 1 measurement sector of 360° ..... | 18 |
| Table 10: | Example: sMN mLMPsetscancfg for LD-XXX###1 with 1 measurement sector of 270° ..... | 18 |
| Table 11: | Example: sMN mLMPsetscancfg for LD-XXX###1 with 2 measurement sectors.....         | 19 |
| Table 12: | Example: sMN mLMPsetscancfg for LD-XXX###1 with 4 measurement sectors.....         | 19 |
| Table 13: | Example: sMN mLMPsetscancfg for LD-XXX###0 with 1 measurement sector of 360° ..... | 20 |
| Table 14: | Example: sMN mLMPsetscancfg for LD-XXX###0 with 1 measurement sector of 270° ..... | 20 |
| Table 15: | Example: sMN mLMPsetscancfg for LD-XXX###0 with 2 measurement sectors.....         | 21 |
| Table 16: | Example: sMN mLMPsetscancfg for LD-XXX###0 with 4 measurement sectors.....         | 21 |
| Table 17: | Telegram structure: sAN mLMPsetscancfg.....  | 23 |
| Table 18: | Example: sAN mLMPsetscancfg.....   | 23 |
| Table 19: | Telegram structure: sRN LMPscancfg.....  | 24 |
| Table 20: | Example for LMS100: sRN LMPscancfg.....  | 24 |
| Table 21: | Telegram structure: sRA LMPscancfg.....  | 26 |
| Table 22: | Example: sRA LMPscancfg.....   | 26 |
| Table 23: | Telegram structure: sWN MMAignmentMode.....  | 27 |
| Table 24: | Example: sWN MMAignmentMode .....  | 27 |
| Table 25: | Telegram structure: sWA MMAignmentMode.....  | 27 |
| Table 26: | Example: sWA MMAignmentMode .....  | 28 |
| Table 27: | Telegram structure: sMN mCLsetscancfglist.....                                     | 28 |
| Table 28: | Interlace mode for sMN mCLsetscancfglist .....                                     | 29 |
| Table 29: | Example: Set scan configuration 1: sMN mCLsetscancfglist 1.....                    | 29 |
| Table 30: | Telegram structure: sAN mCLsetscancfglist.....                                     | 30 |
| Table 31: | Example: sAN mCLsetscancfglist Ok.....   | 30 |

|           |   |    |
|-----------|---|----|
| Table 32: | Telegram structure: sMN mCLsetsancfglist.....                                     | 31 |
| Table 33: | Example: sMN mCLsetsancfglist 5.....  | 31 |
| Table 34: | Telegram structure: sAN mCLsetsancfglist.....                                     | 32 |
| Table 35: | Example: sAN mCLsetsancfglist 0 .....   | 32 |
| Table 36: | Telegram structure: sMN LMCstandby .....  | 33 |
| Table 37: | Example: sMN LMCstandby.....  | 33 |
| Table 38: | Telegram structure: sAN LMCstandby.....   | 33 |
| Table 39: | Example: sAN LMCstandby.....  | 33 |
| Table 40: | Telegram structure: sMN LMCstartmeas.....   | 34 |
| Table 41: | Example: sMN LMCstartmeas.....  | 34 |
| Table 42: | Telegram structure: sAN LMCstartmeas.....   | 35 |
| Table 43: | Example: sAN LMCstartmeas.....  | 35 |
| Table 44: | Telegram structure: sMN LMCstopmeas.....  | 35 |
| Table 45: | Example: sMN LMCstopmeas.....   | 36 |
| Table 46: | Telegram structure: sAN LMCstopmeas.....  | 36 |
| Table 47: | Example: sAN LMCstopmeas.....   | 36 |
| Table 48: | Telegram structure: sWN LMPautostartmeas.....                                     | 37 |
| Table 49: | Example: sWN LMPautostartmeas 1.....  | 37 |
| Table 50: | Telegram structure: sWA LMDautostartmeas.....                                     | 38 |
| Table 51: | Example: sWA LMPautostartmeas.....  | 38 |
| Table 52: | Telegram structure: sWN IOlasc.....   | 39 |
| Table 53: | Example: sWN IOlasc with Software Trigger and 0.5 s delay on start.....           | 39 |
| Table 54: | Telegram structure: sWA IOlasc.....   | 39 |
| Table 55: | Example: sWA IOlasc.....  | 39 |
| Table 56: | Telegram structure: sWN CLApplication.....  | 40 |
| Table 57: | Example: Activate the field application: sWN CLApplication 11.....                | 40 |
| Table 58: | Telegram structure: sWA CLApplication.....  | 40 |
| Table 59: | Example: sWA CLApplication correct and accepted.....                              | 41 |
| Table 60: | Telegram structure: sWN SetActiveApplications.....                                | 41 |
| Table 61: | Example: Activate the field application:: sWN SetActiveApplications 1 FEVL 1..... | 41 |
| Table 62: | Telegram structure: sWA SetActiveApplications .....                               | 42 |
| Table 63: | Example: sWA SetActiveApplications correct and accepted.....                      | 42 |
| Table 64: | Telegram structure: sRN SetActiveApplications.....                                | 42 |
| Table 65: | Example for MRS1000: sRN SetActiveApplications .....                              | 42 |
| Table 66: | Telegram structure: sMN mSCloadfacdef.....  | 43 |
| Table 67: | Example: sMN mSCloadfacdef.....   | 43 |
| Table 68: | Telegram structure: sAN mSCloadfacdef.....  | 44 |

|            |   |    |
|------------|---|----|
| Table 69:  | Example: sAN mSCloadfacdef.....             | 44 |
| Table 70:  | Telegram structure: sMN mSCloadappdef.....  | 45 |
| Table 71:  | Example: sMN mSCloadappdef.....             | 45 |
| Table 72:  | Telegram structure: sAN mSCloadappdef.....  | 45 |
| Table 73:  | Example: sAN mSCloadappdef.....             | 46 |
| Table 74:  | Telegram structure: sMN SetPassword.....    | 46 |
| Table 75:  | Example: sMN SetPassword.....               | 46 |
| Table 76:  | Telegram structure: sAN SetPassword.....    | 47 |
| Table 77:  | Example: sAN SetPassword .....              | 47 |
| Table 78:  | Telegram structure: sMN CheckPassword.....  | 48 |
| Table 79:  | Example: sMN CheckPassword.....             | 48 |
| Table 80:  | Telegram structure: sAN CheckPassword.....  | 48 |
| Table 81:  | Example: sAN CheckPassword.....             | 49 |
| Table 82:  | Telegram structure: sMN mSCreboot.....      | 49 |
| Table 83:  | Example: sMN mSCreboot.....                 | 49 |
| Table 84:  | Telegram structure: sAN mSCreboot.....      | 50 |
| Table 85:  | Example: sAN mSCreboot.....                 | 50 |
| Table 86:  | Telegram structure: sWN LCMcfg.....         | 51 |
| Table 87:  | Example: sWN LCMcfg.....                    | 51 |
| Table 88:  | Telegram structure: sWA LCMcfg.....         | 52 |
| Table 89:  | Example: sWA LCMcfg .....                   | 52 |
| Table 90:  | Telegram structure: sRN LCMcfg.....         | 52 |
| Table 91:  | Example: sRN LCMcfg.....                    | 52 |
| Table 92:  | Telegram structure: sRA LCMcfg.....         | 53 |
| Table 93:  | Example: sRA LCMcfg.....                    | 53 |
| Table 94:  | Telegram structure: sRN CMContLvIM.....     | 53 |
| Table 95:  | Example: sRN CMContLvIM.....                | 54 |
| Table 96:  | Telegram structure: sRA CMContLvIM.....     | 54 |
| Table 97:  | Example for LMS5xx: sRA CMContLvIM.....     | 54 |
| Table 98:  | Telegram structure: sMN mEEwriteall.....    | 55 |
| Table 99:  | Example: sMN mEEwriteall.....               | 55 |
| Table 100: | Telegram structure: sAN mEEwriteall.....    | 56 |
| Table 101: | Example: sAN mEEwriteall.....               | 56 |
| Table 102: | Telegram structure: sMN Run.....            | 57 |
| Table 103: | Example: sMN Run .....                      | 57 |
| Table 104: | Telegram structure: sAN Run.....            | 57 |
| Table 105: | Example: sAN Run .....                      | 58 |
| Table 106: | Telegram structure: sWN LMDscandatacfg..... | 60 |
| Table 107: | Example 1:sWN LMDscandatacfg.....           | 60 |

|                   |  |           |
|-------------------|--|-----------|
| <b>Table 108:</b> | <b>Example 2: sWN LMDscandatacfg.....</b>  | <b>61</b> |
| <b>Table 109:</b> | <b>Example3: sWN LMDscandatacfg.....</b>   | <b>61</b> |
| <b>Table 110:</b> | <b>Telegram structure: sWA LMDscandatacfg.....</b>                                 | <b>61</b> |
| <b>Table 111:</b> | <b>Example: sWA LMDscandatacfg.....</b>  | <b>61</b> |
| <b>Table 112:</b> | <b>Telegram structure: sWN LMPoutputRange.....</b>                                 | <b>63</b> |
| <b>Table 113:</b> | <b>Example: sWN LMPoutputRange 0,50° resolution, 0°-90° .....</b>                  | <b>63</b> |
| <b>Table 114:</b> | <b>Telegram structure: sWA LMPoutputRange.....</b>                                 | <b>63</b> |
| <b>Table 115:</b> | <b>Example: sWA LMPoutputRange .....</b>   | <b>64</b> |
| <b>Table 116:</b> | <b>Telegram structure: sRN LMPoutputRange.....</b>                                 | <b>64</b> |
| <b>Table 117:</b> | <b>Example: sRN LMPoutputRange.....</b>  | <b>64</b> |
| <b>Table 118:</b> | <b>Telegram structure: sRA LMPoutputRange.....</b>                                 | <b>66</b> |
| <b>Table 119:</b> | <b>Example: sRA LMPoutputRange.....</b>  | <b>66</b> |
| <b>Table 120:</b> | <b>Telegram structure: sRN LMDscandata.....</b>                                    | <b>67</b> |
| <b>Table 121:</b> | <b>Example: sRN LMDscandata.....</b>   | <b>67</b> |
| <b>Table 122:</b> | <b>Telegram structure: sRA LMDscandata.....</b>                                    | <b>68</b> |
| <b>Table 123:</b> | <b>Example: sRA LMDscandata.....</b>   | <b>68</b> |
| <b>Table 124:</b> | <b>Telegram structure: sEN LMDscandata.....</b>                                    | <b>69</b> |
| <b>Table 125:</b> | <b>Example: sEN LMDscandata.....</b>   | <b>69</b> |
| <b>Table 126:</b> | <b>Telegram structure: sEA LMDscandata.....</b>                                    | <b>70</b> |
| <b>Table 127:</b> | <b>Example: Confirmation of sEA LMDscandata.....</b>                               | <b>70</b> |
| <b>Table 128:</b> | <b>Telegram structure: Datastream of sRA LMDscandata/sSN<br/>LMDscandata .....</b> | <b>82</b> |
| <b>Table 129:</b> | <b>Example of one telegram stream.....</b>   | <b>87</b> |
| <b>Table 130:</b> | <b>Telegram structure: sMN LSPsetdatetime.....</b>                                 | <b>88</b> |
| <b>Table 131:</b> | <b>Example 1: sMN LSPsetdatetime.....</b>  | <b>89</b> |
| <b>Table 132:</b> | <b>Example 2: sMN LSPsetdatetime.....</b>  | <b>89</b> |
| <b>Table 133:</b> | <b>Telegram structure: sAN LSPsetdatetime .....</b>                                | <b>89</b> |
| <b>Table 134:</b> | <b>Example 1, 2: sAN LSPsetdatetime .....</b>                                      | <b>89</b> |
| <b>Table 135:</b> | <b>Telegram structure: sRN STIms.....</b>  | <b>90</b> |
| <b>Table 136:</b> | <b>Example: sRN STIms .....</b>  | <b>90</b> |
| <b>Table 137:</b> | <b>Telegram structure: sRA STIms.....</b>  | <b>91</b> |
| <b>Table 138:</b> | <b>Example: sRA STIms .....</b>  | <b>91</b> |
| <b>Table 139:</b> | <b>Telegram structure: sRN DeviceTime.....</b>                                     | <b>92</b> |
| <b>Table 140:</b> | <b>Example: sRN DeviceTime .....</b>   | <b>92</b> |
| <b>Table 141:</b> | <b>Telegram structure: sRA DeviceTime .....</b>                                    | <b>92</b> |
| <b>Table 142:</b> | <b>Example: sRA DeviceTime 0 .....</b>   | <b>93</b> |
| <b>Table 143:</b> | <b>Telegram structure: sWN TSCRole.....</b>  | <b>93</b> |
| <b>Table 144:</b> | <b>Example: sWN TSCRole .....</b>  | <b>93</b> |
| <b>Table 145:</b> | <b>Telegram structure: sWA TSCRole.....</b>  | <b>94</b> |

|                   |   |     |
|-------------------|---|-----|
| <b>Table 146:</b> | <b>Example: sWA TSCRole.....</b>                    | 94  |
| <b>Table 147:</b> | <b>Telegram structure: sWN TSCTCInterface.....</b>  | 94  |
| <b>Table 148:</b> | <b>Example: sWN TSCTCInterface.....</b>             | 94  |
| <b>Table 149:</b> | <b>Telegram structure: sWA TSCTCInterface.....</b>  | 95  |
| <b>Table 150:</b> | <b>Example: sWA TSCTCInterface .....</b>            | 95  |
| <b>Table 151:</b> | <b>Telegram structure: sWN TSCTCSrvAddr.....</b>    | 95  |
| <b>Table 152:</b> | <b>Example: sWN TSCTCSrvAddr 192.168.0.11.....</b>  | 96  |
| <b>Table 153:</b> | <b>Telegram structure: sWA TSCTCSrvAddr.....</b>    | 96  |
| <b>Table 154:</b> | <b>Example: sWA TSCTCSrvAddr.....</b>               | 96  |
| <b>Table 155:</b> | <b>Telegram structure: sWN TSCTCtimezone.....</b>   | 97  |
| <b>Table 156:</b> | <b>Example: sWN TSCTCtimezone GMT + 1 hour.....</b> | 97  |
| <b>Table 157:</b> | <b>Telegram structure: sWA TSCTCtimezone .....</b>  | 97  |
| <b>Table 158:</b> | <b>Example: sWA TSCTCtimezone.....</b>              | 98  |
| <b>Table 159:</b> | <b>Telegram structure: sWN TSCTCupdatetime.....</b> | 98  |
| <b>Table 160:</b> | <b>Example: sWN TSCTCupdatetime 600 s.....</b>      | 98  |
| <b>Table 161:</b> | <b>Telegram structure: sWA TSCTCupdatetime.....</b> | 99  |
| <b>Table 162:</b> | <b>Example: sWA TSCTCupdatetime.....</b>            | 99  |
| <b>Table 163:</b> | <b>Telegram structure: sRN TSCTCmaxoffset.....</b>  | 99  |
| <b>Table 164:</b> | <b>Example: sRN TSCTCmaxoffset.....</b>             | 99  |
| <b>Table 165:</b> | <b>Telegram structure: sRA TSCTCmaxoffset.....</b>  | 100 |
| <b>Table 166:</b> | <b>Example: sRA TSCTCmaxoffset 18000 s.....</b>     | 100 |
| <b>Table 167:</b> | <b>Telegram structure: sRN TSCTCdelay.....</b>      | 100 |
| <b>Table 168:</b> | <b>Example: sRN TSCTCdelay .....</b>                | 101 |
| <b>Table 169:</b> | <b>Telegram structure: sRA TSCTCdelay .....</b>     | 101 |
| <b>Table 170:</b> | <b>Example: sRA TSCTCdelay 0.003 s.....</b>         | 101 |
| <b>Table 171:</b> | <b>Telegram structure: sMN mResetMaxOff.....</b>    | 102 |
| <b>Table 172:</b> | <b>Example: sMN mResetMaxOff.....</b>               | 102 |
| <b>Table 173:</b> | <b>Telegram structure: sAN mResetMaxOff.....</b>    | 102 |
| <b>Table 174:</b> | <b>Example: sAN mResetMaxOff.....</b>               | 102 |
| <b>Table 175:</b> | <b>Telegram structure: sWN LFPparticle.....</b>     | 103 |
| <b>Table 176:</b> | <b>Example: sWN LFPparticle.....</b>                | 103 |
| <b>Table 177:</b> | <b>Telegram structure: sWA LFPparticle.....</b>     | 103 |
| <b>Table 178:</b> | <b>Example: sWA LFPparticle .....</b>               | 104 |
| <b>Table 179:</b> | <b>Telegram structure: sWN LFPmeanfilter.....</b>   | 104 |
| <b>Table 180:</b> | <b>Example: sWN LFPmeanfilter.....</b>              | 104 |
| <b>Table 181:</b> | <b>Telegram structure: sWA LFPmeanfilter.....</b>   | 105 |
| <b>Table 182:</b> | <b>Example: sWA LFPmeanfilter.....</b>              | 105 |
| <b>Table 183:</b> | <b>Telegram structure: sWN LFPnto1filter.....</b>   | 105 |
| <b>Table 184:</b> | <b>Example: sWN LFPnto1filter.....</b>              | 106 |

|                   |   |     |
|-------------------|---|-----|
| <b>Table 185:</b> | Telegram structure: sWA LFPnto1filter.....    | 106 |
| <b>Table 186:</b> | Example: sWA LFPnto1filter.....               | 106 |
| <b>Table 187:</b> | Telegram structure: sWN FREchoFilter.....     | 107 |
| <b>Table 188:</b> | Example: sWN FREchoFilter.....                | 107 |
| <b>Table 189:</b> | Telegram structure: sWA FREchoFilter.....     | 107 |
| <b>Table 190:</b> | Example: sWa FREchoFilter.....                | 107 |
| <b>Table 191:</b> | Telegram structure: sWN MSsuppmode .....      | 108 |
| <b>Table 192:</b> | Example: sWN MSsuppmode.....                  | 108 |
| <b>Table 193:</b> | Telegram structure: sWA MSsuppmode .....      | 108 |
| <b>Table 194:</b> | Example: sWA MSsuppmode.....                  | 109 |
| <b>Table 195:</b> | Telegram structure: sWN CLFogFilterEn.....    | 109 |
| <b>Table 196:</b> | Example: sWN CLFogFilterEn.....               | 109 |
| <b>Table 197:</b> | Telegram structure: sWA CLFogFilterEn.....    | 110 |
| <b>Table 198:</b> | Example: sWA CLFogFilterEn.....               | 110 |
| <b>Table 199:</b> | Telegram structure: sRN CLFogFilterEn.....    | 110 |
| <b>Table 200:</b> | Example: sRN CLFogFilterEn.....               | 110 |
| <b>Table 201:</b> | Telegram structure: sRA CLFogFilterEn.....    | 111 |
| <b>Table 202:</b> | Example: sRA CLFogFilterEn.....               | 111 |
| <b>Table 203:</b> | Telegram structure: sWN MCSenseLevel.....     | 111 |
| <b>Table 204:</b> | Example: sWN MCSenseLevel.....                | 112 |
| <b>Table 205:</b> | Telegram structure: sWA MCSenseLevel.....     | 112 |
| <b>Table 206:</b> | Example: sWA MCSenseLevel.....                | 112 |
| <b>Table 207:</b> | Telegram structure: sWN CLNFDigFilterEn.....  | 113 |
| <b>Table 208:</b> | Example: sWN CLNFDigFilterEn.....             | 113 |
| <b>Table 209:</b> | Telegram structure: sWA CLNFDigFilterEn.....  | 113 |
| <b>Table 210:</b> | Example: sWA CLNFDigFilterEn.....             | 114 |
| <b>Table 211:</b> | Telegram structure: sWN CLHWFiltSectEn.....   | 114 |
| <b>Table 212:</b> | Example: sWN CLHWFiltSectEn 1 0 0 0 .....     | 114 |
| <b>Table 213:</b> | Telegram structure: sWA CLHWFiltSectEn.....   | 115 |
| <b>Table 214:</b> | Example: sWA CLHWFiltSectEn .....             | 115 |
| <b>Table 215:</b> | Telegram structure: sWN LFPmedianfilter.....  | 115 |
| <b>Table 216:</b> | Example: sWN LFPmedianfilter 1 3.....         | 116 |
| <b>Table 217:</b> | Telegram structure: sWA LFPmedianfilter ..... | 116 |
| <b>Table 218:</b> | Example: sWA LFPmedianfilter.....             | 116 |
| <b>Table 219:</b> | Telegram structure: sWN LFPedgefilter.....    | 117 |
| <b>Table 220:</b> | Example: sWN LFPedgefilter 1.....             | 117 |
| <b>Table 221:</b> | Telegram structure: sWA LFPmedianfilter ..... | 117 |
| <b>Table 222:</b> | Example: sWA LFPedgefilter.....               | 117 |
| <b>Table 223:</b> | Telegram structure: sWN LICsrc.....           | 118 |

|            |   |     |
|------------|---|-----|
| Table 224: | Example: sWN LICsrc .....                                 | 118 |
| Table 225: | Telegram structure: sWA LICsrc .....                      | 118 |
| Table 226: | Example: sWA LICsrc .....                                 | 119 |
| Table 227: | Telegram structure: sWN LICencset .....                   | 119 |
| Table 228: | Example: sWN LICencset .....                              | 119 |
| Table 229: | Telegram structure: sWA LICencset .....                   | 120 |
| Table 230: | Example: sWA LICencset .....                              | 120 |
| Table 231: | Telegram structure: sWN LICcres .....                     | 120 |
| Table 232: | Example: sWN LICcres .....                                | 121 |
| Table 233: | Telegram structure: sWA LICcres .....                     | 121 |
| Table 234: | Example: sWA LICcres .....                                | 121 |
| Table 235: | Telegram structure: sWN LICFixVel .....                   | 122 |
| Table 236: | Example: sWN LICFixVel .....                              | 122 |
| Table 237: | Telegram structure: sWA LICFixVel .....                   | 122 |
| Table 238: | Example: sWA LICFixVel .....                              | 123 |
| Table 239: | Telegram structure: sRN LICSpTh .....                     | 123 |
| Table 240: | Example: sRN LICSpTh .....                                | 123 |
| Table 241: | Telegram structure: sRA LICSpTh .....                     | 123 |
| Table 242: | Example: sRA LICSpTh .....                                | 124 |
| Table 243: | Telegram structure: sRN LICencsp .....                    | 124 |
| Table 244: | Example: sRN LICencsp .....                               | 124 |
| Table 245: | Telegram structure: sRA LICencsp .....                    | 125 |
| Table 246: | Example: sRA LICencsp .....                               | 125 |
| Table 247: | Telegram structure: sRN PortConfiguration .....           | 126 |
| Table 248: | Example: sRN PortConfiguration .....                      | 126 |
| Table 249: | Telegram structure: sRN LIDoutputstate .....              | 128 |
| Table 250: | Example: sRN LIDoutputstate .....                         | 128 |
| Table 251: | Telegram structure: sRA LIDoutputstate .....              | 128 |
| Table 252: | Telegram structure: sEN LIDoutputstate .....              | 129 |
| Table 253: | Example: sEN LIDoutputstate .....                         | 129 |
| Table 254: | Telegram structure: sRA/sSN LIDoutputstate .....          | 132 |
| Table 255: | Example: sRA LIDoutputstate .....                         | 132 |
| Table 256: | Telegram structure: sMN mDOSetOutput .....                | 133 |
| Table 257: | Example: sMN mDOSetOutput .....                           | 133 |
| Table 258: | Telegram structure: sAN mDOSetOutput .....                | 133 |
| Table 259: | Example: sAN mDOSetOutput .....                           | 134 |
| Table 260: | Telegram structure PRO: sWN D06Fnc/Lite: sWN D03Fnc ..... | 134 |
| Table 261: | Example: sWN D06Fnc → Out6 to master sync .....           | 134 |
| Table 262: | Telegram structure PRO: sWN D06Fnc/Lite: sWN D03Fnc ..... | 135 |

|            |  |     |
|------------|--|-----|
| Table 263: | Example: sWA D06Fnc .....                        | 135 |
| Table 264: | Telegram structure: sWN D01Fnc.....              | 135 |
| Table 265: | Example: sWN D01Fnc → Out1 to device ready ..... | 136 |
| Table 266: | Telegram structure: sWA D01Fnc.....              | 136 |
| Table 267: | Example: sWA D01Fnc .....                        | 136 |
| Table 268: | Telegram structure: sWN D01Logic.....            | 137 |
| Table 269: | Example: sWN D01Logic → Active_Low.....          | 137 |
| Table 270: | Telegram structure: sWA D01Logic.....            | 137 |
| Table 271: | Example: sWA D01Logic .....                      | 137 |
| Table 272: | Telegram structure: sWN D02Fnc.....              | 138 |
| Table 273: | Example: sWN D02Fnc → Out2 to device ready ..... | 138 |
| Table 274: | Telegram structure: sWA D02Fnc.....              | 138 |
| Table 275: | Example: sWA D02Fnc .....                        | 138 |
| Table 276: | Telegram structure: sWN D02Logic.....            | 139 |
| Table 277: | Example: sWN D02Logic → Active_High.....         | 139 |
| Table 278: | Telegram structure: sWA D02Logic.....            | 139 |
| Table 279: | Example: sWA D02Logic .....                      | 139 |
| Table 280: | Telegram structure: sWN SYMode .....             | 140 |
| Table 281: | Example: sWN SYMode.....                         | 140 |
| Table 282: | Telegram structure: sWA SYMode .....             | 140 |
| Table 283: | Example: sWA SYMode.....                         | 140 |
| Table 284: | Telegram structure: sWN SYPhase.....             | 141 |
| Table 285: | Example: sWN SYPhase +90.....                    | 141 |
| Table 286: | Telegram structure: sWA SYPhase .....            | 141 |
| Table 287: | Example: sWA SYPhase.....                        | 141 |
| Table 288: | Telegram structure: sWN D03And4Fnc .....         | 142 |
| Table 289: | Example: sWN In4 → In3+4 to slave sync.....      | 142 |
| Table 290: | Telegram structure: sWA D03And4Fnc .....         | 142 |
| Table 291: | Example: sWA D03And4Fnc .....                    | 143 |
| Table 292: | Telegram structure: sWN DI3DebTim.....           | 143 |
| Table 293: | Example: sWN DI3DebTim.....                      | 143 |
| Table 294: | Telegram structure: sWA DI3DebTim.....           | 144 |
| Table 295: | Example: sWA DI3DebTim.....                      | 144 |
| Table 296: | Telegram structure: sRN SYextmon.....            | 144 |
| Table 297: | Example: sRN SYextmon.....                       | 144 |
| Table 298: | Telegram structure: sRA SYextmon .....           | 145 |
| Table 299: | Example: sRA SYextmon .....                      | 145 |
| Table 300: | Telegram structure: sRN LCMstate.....            | 146 |
| Table 301: | Example: sRN LCMstate .....                      | 146 |

|            |   |     |
|------------|---|-----|
| Table 302: | Telegram structure: sRA LCMstate.....               | 146 |
| Table 303: | Example for LMS100:sRA LCMstate.....                | 147 |
| Table 304: | Telegram structure: sRN Deviceldent.....            | 147 |
| Table 305: | Example: sRN Deviceldent.....                       | 147 |
| Table 306: | Telegram structure: sRA Deviceldent.....            | 148 |
| Table 307: | Example: sRA Deviceldent.....                       | 148 |
| Table 308: | Telegram structure: sRN SCdevicestate.....          | 149 |
| Table 309: | Example: sRN SCdevicestate.....                     | 149 |
| Table 310: | Telegram structure: sRA SCdevicestate.....          | 150 |
| Table 311: | Example: sRA SCdevicestate .....                    | 150 |
| Table 312: | Telegram structure: sRN LMCmeasstate.....           | 152 |
| Table 313: | Example: sRN LMCmeasstate .....                     | 152 |
| Table 314: | Telegram structure: sRA LMCmeasstate .....          | 152 |
| Table 315: | Example: sRA LMCmeasstate is Measure 2D .....       | 153 |
| Table 316: | Telegram structure: sRN EMCustomerInfo.....         | 153 |
| Table 317: | Example: sRN EMCustomerInfo.....                    | 153 |
| Table 318: | Telegram structure: sRA EMCustomerInfo.....         | 154 |
| Table 319: | Example: sRA EMCustomerInfo = Device OK.....        | 154 |
| Table 320: | Telegram structure: sRN LDMSenStat.....             | 155 |
| Table 321: | Example: sRN LDMSenStat.....                        | 155 |
| Table 322: | Telegram structure: sRA LDMSenStat.....             | 156 |
| Table 323: | Example: sRA LDMSenStat Device is in Idle mode..... | 156 |
| Table 324: | Telegram structure: sRN Dlornr.....                 | 157 |
| Table 325: | Example: sRN Dlornr.....                            | 157 |
| Table 326: | Telegram structure: sRA Dlornr.....                 | 157 |
| Table 327: | Example for LMS511-20100: sRA Dlornr.....           | 158 |
| Table 328: | Example for TiM561-2050101: sRA Dlornr.....         | 158 |
| Table 329: | Telegram structure: sRN Dltype .....                | 158 |
| Table 330: | Example: sRN Dltype.....                            | 158 |
| Table 331: | Telegram structure: sRA Dltype.....                 | 159 |
| Table 332: | Example for LMS511-20100: sRA Dltype.....           | 159 |
| Table 333: | Example for TiM561-2050101: sRA Dltype .....        | 159 |
| Table 334: | Telegram structure: sRN ODoprh.....                 | 160 |
| Table 335: | Example: sRN ODoprh.....                            | 160 |
| Table 336: | Telegram structure: sRA ODoprh.....                 | 160 |
| Table 337: | Example: sRA ODoprh.....                            | 161 |
| Table 338: | Telegram structure: sRN ODpwrc.....                 | 161 |
| Table 339: | Example: sRN ODpwrc .....                           | 161 |
| Table 340: | Telegram structure: sRA ODpwrc.....                 | 162 |

|            |  |     |
|------------|--|-----|
| Table 341: | Example: sRA ODpwrc.....                         | 162 |
| Table 342: | Telegram structure: sRN OPcurtmpdev.....         | 162 |
| Table 343: | Example: sRN OPcurtmpdev.....                    | 163 |
| Table 344: | Telegram structure: sRA OPcurtmpdev.....         | 163 |
| Table 345: | Example: sRA OPcurtmpdev.....                    | 163 |
| Table 346: | Telegram structure: sWN LocationName.....        | 164 |
| Table 347: | Example: sWN LocationName +13 OutdoorDevice..... | 164 |
| Table 348: | Telegram structure: sWA LocationName.....        | 165 |
| Table 349: | Example: sWA LocationName .....                  | 165 |
| Table 350: | Telegram structure: sRN LocationName.....        | 165 |
| Table 351: | Example: sRN LocationName .....                  | 166 |
| Table 352: | Telegram structure: sRA LocationName.....        | 166 |
| Table 353: | Example: sRA LocationName .....                  | 166 |
| Table 354: | Telegram structure: sRN MCAngleCompSin.....      | 167 |
| Table 355: | Example: sRN MCAngleCompSin .....                | 167 |
| Table 356: | Telegram structure: sRA MCAngleCompSin.....      | 167 |
| Table 357: | Example: sRA MCAngleCompSin .....                | 168 |
| Table 358: | Telegram structure: sMN LIDrstoutpcnt.....       | 168 |
| Table 359: | Example: sMN LIDrstoutpcnt.....                  | 169 |
| Table 360: | Telegram structure: sAN LIDrstoutpcnt.....       | 169 |
| Table 361: | Example: sAN LIDrstoutpcnt.....                  | 169 |
| Table 362: | Telegram structure: sRN OPheatstateext.....      | 170 |
| Table 363: | Example: sRN OPheatstateext.....                 | 170 |
| Table 364: | Telegram structure: sRA OPheatstateext.....      | 171 |
| Table 365: | Example: sRA OPheatstateext 2 .....              | 171 |
| Table 366: | Telegram structure: sWN EllpAddr.....            | 172 |
| Table 367: | Example: sWN EllpAddr 192.168.0.2.....           | 172 |
| Table 368: | Telegram structure: sWA EllpAddr.....            | 173 |
| Table 369: | Example: sWA EllpAddr .....                      | 173 |
| Table 370: | Telegram structure: sRN EllpAddr.....            | 174 |
| Table 371: | Example: srN EllpAddr .....                      | 174 |
| Table 372: | Telegram structure: sRA EllpAddr.....            | 174 |
| Table 373: | Example: sRA EllpAddr 192.168.0.2.....           | 175 |
| Table 374: | Telegram structure: sWN Elgate.....              | 175 |
| Table 375: | Example: sWN Elgate 192.168.0.1.....             | 175 |
| Table 376: | Telegram structure: sWA Elgate.....              | 176 |
| Table 377: | Example: sWA Elgate .....                        | 176 |
| Table 378: | Telegram structure: sRN Elgate.....              | 176 |
| Table 379: | Example: sRN Elgate.....                         | 177 |

|            |   |     |
|------------|---|-----|
| Table 380: | Telegram structure: sRA Elgate.....         | 177 |
| Table 381: | Example: sRA Elgate 192.168.0.1.....        | 177 |
| Table 382: | Telegram structure: sWN Elmask.....         | 178 |
| Table 383: | Example: sWN Elmask 255.255.254.0.....      | 178 |
| Table 384: | Telegram structure: sWA Elmask.....         | 178 |
| Table 385: | Example: sWA Elmask.....                    | 179 |
| Table 386: | Telegram structure: sRN Elmask.....         | 179 |
| Table 387: | Example: sRN Elmask.....                    | 179 |
| Table 388: | Telegram structure: sRA Elmask.....         | 180 |
| Table 389: | Example: sRA Elmask 255.255.254.0.....      | 180 |
| Table 390: | Telegram structure: sWN SIHstBaud.....      | 181 |
| Table 391: | Example: sWN SIHstBaud.....                 | 181 |
| Table 392: | Telegram structure: sWA SIHstBaud .....     | 181 |
| Table 393: | Example: sWA SIHstBaud.....                 | 182 |
| Table 394: | Telegram structure: sRN SIHstBaud.....      | 182 |
| Table 395: | Example: sRN SIHstBaud.....                 | 182 |
| Table 396: | Telegram structure: sRA SIHstBaud.....      | 183 |
| Table 397: | Example: sRA SIHstBaud.....                 | 183 |
| Table 398: | Telegram structure: sWN SIHstHw.....        | 184 |
| Table 399: | Example: sWN SIHstHw.....                   | 184 |
| Table 400: | Telegram structure: sWA SIHstHw.....        | 184 |
| Table 401: | Example: sWA SIHstHw.....                   | 185 |
| Table 402: | Telegram structure: sRN SIHstHw.....        | 185 |
| Table 403: | Example: sRN SIHstHw .....                  | 185 |
| Table 404: | Telegram structure: sRA SIHstHw.....        | 186 |
| Table 405: | Example: sRA SIHstHw .....                  | 186 |
| Table 406: | Telegram structure: sWN LMLfpFcn.....       | 187 |
| Table 407: | Example: sWN LMLfpFcn.....                  | 187 |
| Table 408: | Telegram structure: sWA LMLfpFcn.....       | 188 |
| Table 409: | Example: sWA LMLfpFcn.....                  | 188 |
| Table 410: | Telegram structure: sMN mLMLSetLed.....     | 188 |
| Table 411: | Example: sMN mLMLSetLed 1 1 (Stop LED)..... | 189 |
| Table 412: | Telegram structure: sAN mLMLSetLed.....     | 189 |
| Table 413: | Example: sAN mLMLSetLed.....                | 189 |
| Table 414: | Telegram structure: sWN HMIfpFcn_Y1.....    | 190 |
| Table 415: | Example: sWN HMIfpFcn_Y1 = Command.....     | 190 |
| Table 416: | Telegram structure: sWA HMIfpFcn_Y1 .....   | 190 |
| Table 417: | Example: sWA HMIfpFcn_Y1.....               | 191 |
| Table 418: | Telegram structure: sWN HMIfpFcn_Y2.....    | 191 |

|            |  |     |
|------------|--|-----|
| Table 419: | Example: sWN HMIfpFcn_Y2 = Command .....                                     | 191 |
| Table 420: | Telegram structure: sWA HMIfpFcn_Y2 .....                                    | 192 |
| Table 421: | Example: sWA HMIfpFcn_Y2 .....   | 192 |
| Table 422: | Telegram structure: sMN mHMISetLed .....                                     | 192 |
| Table 423: | Example: sMN mHMISetLed 1 = On .....   | 193 |
| Table 424: | Telegram structure: sAN mHMISetLed .....                                     | 193 |
| Table 425: | Example: sAN mHMISetLed 01 .....   | 193 |
| Table 426: | Telegram structure: sMN mLMLSetDisp .....                                    | 195 |
| Table 427: | Example: sMN mLMLSetDisp 07 (Showing the number "7" on<br>the display) ..... | 195 |
| Table 428: | Telegram structure: sAN mLMLSetDisp .....                                    | 196 |
| Table 429: | Example: sAN mLMLSetDisp 1 .....   | 196 |
| Table 430: | Telegram structure: sMN EIHstCola .....                                      | 197 |
| Table 431: | Example: sWN EIHstCola 0 .....   | 197 |
| Table 432: | Telegram structure: sWA EIHstCola .....                                      | 198 |
| Table 433: | Example: sWA EIHstCola .....   | 198 |
| Table 434: | Telegram structure: sEN ECRChangeArr .....                                   | 199 |
| Table 435: | Example: sEN ECRChangeArr 1 .....  | 199 |
| Table 436: | Telegram structure: sEA ECRChangeArr .....                                   | 200 |
| Table 437: | Example: sEA ECRChangeArr 1 .....  | 200 |
| Table 438: | Telegram structure: sSN ECRChangeArr .....                                   | 201 |
| Table 439: | Example: sSN ECRChangeArr 1 .....  | 202 |
| Table 440: | Telegram structure: sMN mLFEgetField .....                                   | 203 |
| Table 441: | Example: sMN mLFEgetField 1 .....  | 204 |
| Table 442: | Example: sAN mLFEgetField .....  | 207 |
| Table 443: | Example: sAN mLFEgetField .....  | 207 |
| Table 444: | Telegram structure: sRN LFEperpdistresult .....                              | 209 |
| Table 445: | Example: sRN LFEperpdistresult .....   | 209 |
| Table 446: | Telegram structure: sRA LFEperpdistresult .....                              | 213 |
| Table 447: | Example: sRA LFEperpdistresult .....   | 213 |
| Table 448: | Telegram structure: sEN LFEperpdistresult .....                              | 215 |
| Table 449: | Example: sEN LFEperpdistresult 1 .....                                       | 215 |
| Table 450: | Telegram structure: sEA LFEperpdistresult .....                              | 216 |
| Table 451: | Example: sEA LFEperpdistresult 1 .....                                       | 216 |
| Table 452: | Telegram structure: sSN LFEperpdistresult .....                              | 219 |
| Table 453: | Example: sSN LFEperpdistresult .....   | 219 |
| Table 454: | Telegram structure: sRN LFEinfringementinfo .....                            | 220 |
| Table 455: | Example: sEN LFEinfringementinfo .....                                       | 220 |
| Table 456: | Example: sRA LFEinfringementinfo .....                                       | 222 |

---

|                   |   |            |
|-------------------|---|------------|
| <b>Table 457:</b> | <b>Example: sRA LFEinfringementinfo .....</b>           | <b>222</b> |
| <b>Table 458:</b> | <b>Telegram structure: sEN LFEinfringementinfo.....</b> | <b>223</b> |
| <b>Table 459:</b> | <b>Example: sEN LFEinfringementinfo 1.....</b>          | <b>223</b> |
| <b>Table 460:</b> | <b>Telegram structure: sEA LFEinfringementinfo.....</b> | <b>224</b> |
| <b>Table 461:</b> | <b>Example: sEA LFEinfringementinfo 1.....</b>          | <b>224</b> |
| <b>Table 462:</b> | <b>Example: sSN LFEinfringementinfo .....</b>           | <b>226</b> |
| <b>Table 463:</b> | <b>Example: sSN LFEinfringementinfo .....</b>           | <b>227</b> |
| <b>Table 464:</b> | <b>SOPAS error codes .....</b>                          | <b>229</b> |
| <b>Table 465:</b> | <b>Example: sFA ErrorCode Wrong userlevel.....</b>      | <b>229</b> |

**Australia**  
Phone +61 (3) 9457 0600  
1800 33 48 02 – tollfree  
E-Mail sales@sick.com.au

**Austria**  
Phone +43 (0) 2236 62288-0  
E-Mail office@sick.at

**Belgium/Luxembourg**  
Phone +32 (0) 2 466 55 66  
E-Mail info@sick.be

**Brazil**  
Phone +55 11 3215-4900  
E-Mail comercial@sick.com.br

**Canada**  
Phone +1 905.771.1444  
E-Mail cs.canada@sick.com

**Czech Republic**  
Phone +420 234 719 500  
E-Mail sick@sick.cz

**Chile**  
Phone +56 (2) 2274 7430  
E-Mail chile@sick.com

**China**  
Phone +86 20 2882 3600  
E-Mail info.china@sick.net.cn

**Denmark**  
Phone +45 45 82 64 00  
E-Mail sick@sick.dk

**Finland**  
Phone +358-9-25 15 800  
E-Mail sick@sick.fi

**France**  
Phone +33 1 64 62 35 00  
E-Mail info@sick.fr

**Germany**  
Phone +49 (0) 2 11 53 010  
E-Mail info@sick.de

**Greece**  
Phone +30 210 6825100  
E-Mail office@sick.com.gr

**Hong Kong**  
Phone +852 2153 6300  
E-Mail ghk@sick.com.hk

**Hungary**  
Phone +36 1 371 2680  
E-Mail ertekesites@sick.hu

**India**  
Phone +91-22-6119 8900  
E-Mail info@sick-india.com

**Israel**  
Phone +972 97110 11  
E-Mail info@sick-sensors.com

**Italy**  
Phone +39 02 27 43 41  
E-Mail info@sick.it

**Japan**  
Phone +81 3 5309 2112  
E-Mail support@sick.jp

**Malaysia**  
Phone +603-8080 7425  
E-Mail enquiry.my@sick.com

**Mexico**  
Phone +52 (472) 748 9451  
E-Mail mexico@sick.com

**Netherlands**  
Phone +31 (0) 30 229 25 44  
E-Mail info@sick.nl

**New Zealand**  
Phone +64 9 415 0459  
0800 222 278 – tollfree  
E-Mail sales@sick.co.nz

**Norway**  
Phone +47 67 81 50 00  
E-Mail sick@sick.no

**Poland**  
Phone +48 22 539 41 00  
E-Mail info@sick.pl

**Romania**  
Phone +40 356-17 11 20  
E-Mail office@sick.ro

**Russia**  
Phone +7 495 283 09 90  
E-Mail info@sick.ru

**Singapore**  
Phone +65 6744 3732  
E-Mail sales.gsg@sick.com

**Slovakia**  
Phone +421 482 901 201  
E-Mail mail@sick-sk.sk

**Slovenia**  
Phone +386 591 78849  
E-Mail office@sick.si

**South Africa**  
Phone +27 10 060 0550  
E-Mail info@sickautomation.co.za

**South Korea**  
Phone +82 2 786 6321/4  
E-Mail infokorea@sick.com

**Spain**  
Phone +34 93 480 31 00  
E-Mail info@sick.es

**Sweden**  
Phone +46 10 110 10 00  
E-Mail info@sick.se

**Switzerland**  
Phone +41 41 619 29 39  
E-Mail contact@sick.ch

**Taiwan**  
Phone +886-2-2375-6288  
E-Mail sales@sick.com.tw

**Thailand**  
Phone +66 2 645 0009  
E-Mail marcom.th@sick.com

**Turkey**  
Phone +90 (216) 528 50 00  
E-Mail info@sick.com.tr

**United Arab Emirates**  
Phone +971 (0) 4 88 65 878  
E-Mail contact@sick.ae

**United Kingdom**  
Phone +44 (0)17278 31121  
E-Mail info@sick.co.uk

**USA**  
Phone +1 800.325.7425  
E-Mail info@sick.com

**Vietnam**  
Phone +65 6744 3732  
E-Mail sales.gsg@sick.com

Detailed addresses and further locations at [www.sick.com](http://www.sick.com)